



43cm Rear Roller Hand Push Lawnmower

WERR17P
193865002

43cm Rear Roller Self Propelled Lawnmower

WERR17SP
193806006

en - Original Instructions

ASSEMBLY REQUIRED
Minimum Two Persons

Sales & Support: 01793 333212

Before use please read & understand this manual; paying particular attention to the safety instructions before use.
Incorrect use of the product could put the operator or machine in danger.
Whilst every effort has been made to ensure the accuracy of information contained in this manual, our policy of continuous improvement determines the right to make modifications without prior warning.
Images are used for illustration purposes only.

11 12 19

Copyright Notice

Copyright © Handy Distribution

Permission is granted to reproduce this publication for personal & educational use only.
Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Handy Distribution.

In all cases this copyright notice must remain intact.

Contents

Box Contents
Product Diagram
Assembly Guidelines
Before you begin / Starting the engine
Using your mower / Safety tips
Basic Maintenance
Technical Specification
Parts List & Diagrams
Declaration of Conformity
Waranty

For Spares or Support of your Webb product, please contact us:

Tel: 01793 333212

(Mon – Fri 8.30am to 5.00pm)


 


Email: customerservice@webblawnmowers.co.uk

To view the full range or find out more information go to
www.webblawnmowers.co.uk



INSTRUCTION MANUAL

What you get with your mower

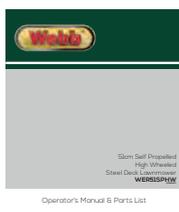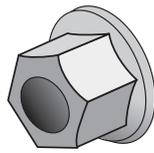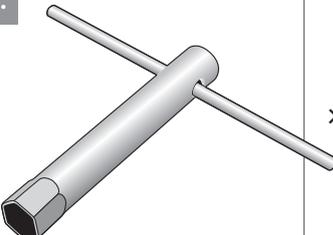1. 	×1	2. 	×1	3. 	×1
4. 	×1	5. 	×1	6. 	×4
7. 	×1	8. 	×2	9. 	×1
10. 	×2				

1. Petrol Engine Mower

2. Instruction Manual

3. Rear Grass Catcher

4. Rope Guide

5. Spanners

6. Bolt and Nut Assembly

7. Spark Plug Socket

8. Cable Ties

9. Mulch Plug

10. Quick Release Handle

BOX CONTENTS / PRODUCT DIAGRAM



1. Drive Lever (WERR17SP Only)

2. Brake (OPC) Lever

3. Fuel Tank

4. Air Filter / Primer Bulb

5. Spark Plug

6. Muffler / Exhaust









7. Oil Filter and Dipstick

8. Recoil Rope

9. Grass Collection Bag



INSTRUCTION MANUAL

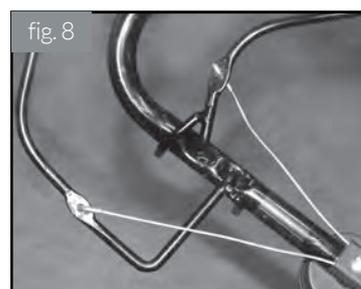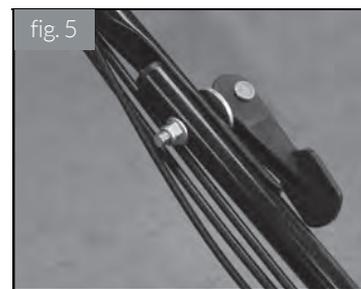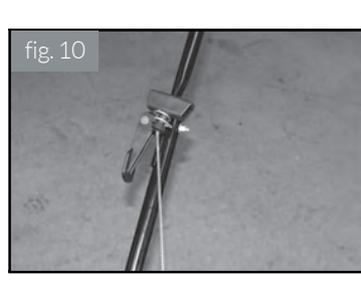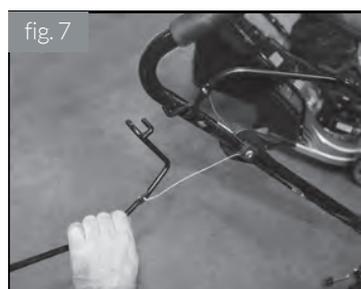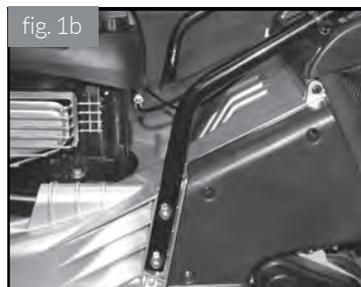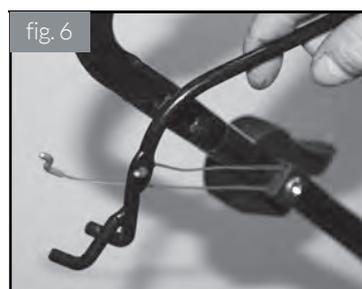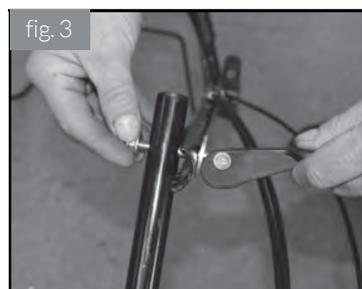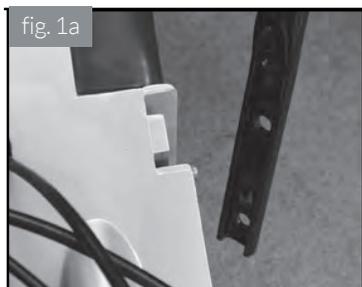

Select the left hand lower handle and fix to the two studs on the right hand side of the mower, ensure that the U shape of the handle goes towards the chassis (fig. 1a).

Fix with two cap head nuts (fig. 1b).

Select the right hand lower handle and fix to the two studs on the left hand side of the mower, ensure that the U shape of the handle goes towards the chassis.

Fix with two cap head nuts (fig. 2).

Assemble the upper handle to the lower handle using the two clamp bolts and nuts, ensuring that the large washer goes against the clamp handle on the outside of the handle as per the photo (fig. 3).

Place the wire recoil rope guide to the right hand clamp bolt, this goes on the inside of the handle between the handle and the securing nut (fig. 4).

Tension the clamp bolts to ensure the handles firmly lock together (fig. 5).

Fit the Operator Presence Cable, remove the lever from its mounting by easing it from the handle, attach the Z cable end to the OPC lever as shown in lever to the handle (fig. 6).

Fit the Self Propelled drive cable, a(RR17SP Only) gain remove the lever from its mounting by gently easing it from the handle, attach the Z cable end to the Self Propelled drive lever & refit the lever to the handle (fig. 7).

Ensure you have attached the correct cable to the correct lever (fig. 8).

Fit the cable router to the handle using the securing bolt supplied, this should be fitted to the inside of the handle (fig. 9).

Hold in the Operator control handle and pull on the recoil starter rope so you can attach it through the wire recoil rope guide (fig. 10).

ASSEMBLY GUIDELINES



Grass collector & Frame (fig. 1)

Place the Frame into the Grass Collector (fig. 2).

Ensure the carry handle remains outside of the Collector (fig. 3).

Start attaching the Collector to the Frame (fig. 4).

Attach the top sections first (fig. 5).

Attach the side sections (fig. 6).

Ensure the Grass Collector sides sit inside the Frame when attaching the lower section of the Collector (fig. 7).

The finished Collector (fig. 8).






INSTRUCTION MANUAL

BEFORE YOU BEGIN

WARNING! The following procedures must be carried out before you start the engine of your lawnmower.



FILL OIL SUMP WITH OIL

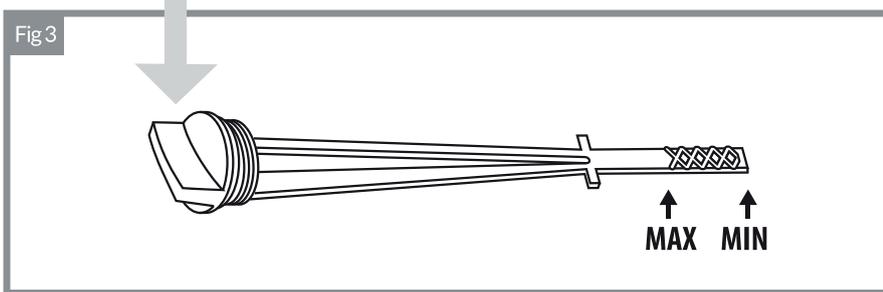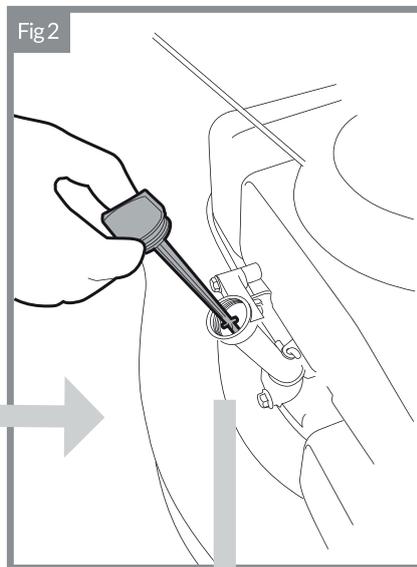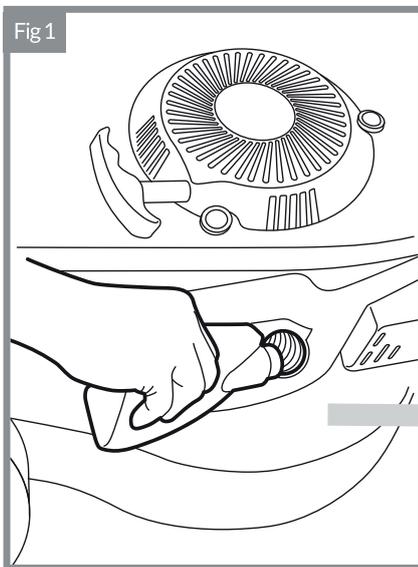

Filling oil sump with oil


The mower is supplied without oil in the engine. Refer to the B&S engine manual before starting the engine for the first time.

1. Firstly, remove the warning label from under the dipstick, then remove the dipstick and slowly pour SAE30 or 10W/30 lawnmower grade engine oil into the engine via the oil filler (as directed by the B&S engine manual). Replace the dipstick and tighten.

2. Before you use the mower each time, check the oil level (fig. 2) and if necessary top up with SAE30 or 10W/30 oil. To check the oil level, unscrew the yellow dipstick, wipe with a rag and replace into the oil filler (do not screw back in place), remove the dipstick again and check the level.
3. The oil level must be between the min and max marks on the dipstick (fig. 3). Replace the dipstick and screw into place.



FILL FUEL TANK WITH UNLEADED PETROL

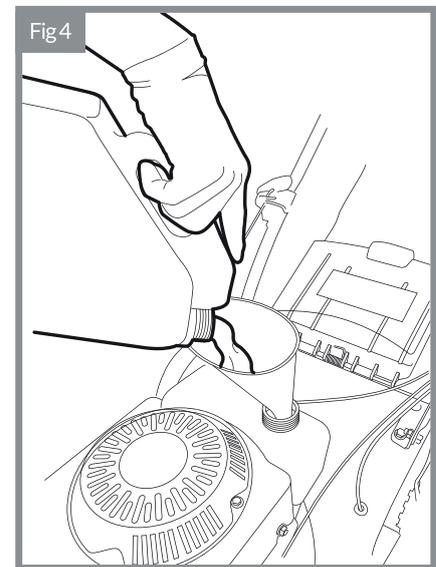

Fill fuel tank with unleaded petrol

Petrol is highly flammable so extreme caution must be taken when handling it. Always store petrol in approved containers and you must ensure that you use fresh petrol that is less than 4-6 weeks old. Do not mix oil with petrol.

4. To put petrol in the fuel tank, firstly remove the warning label from under the petrol cap. It's best to fill the tank using a clean funnel, but never fill it completely (fig. 4). Instead, leave at least 13mm from the bottom of the filler neck to allow for expansion. Ensure that you securely tighten the petrol cap after filling. (Funnel & fuel not supplied).

BEFORE YOU BEGIN/STARTING THE ENGINE


STARTING THE ENGINE

⚠ WARNING! The following procedures must be carried out before you start the engine of your lawnmower.

Fig 5



Fig 7

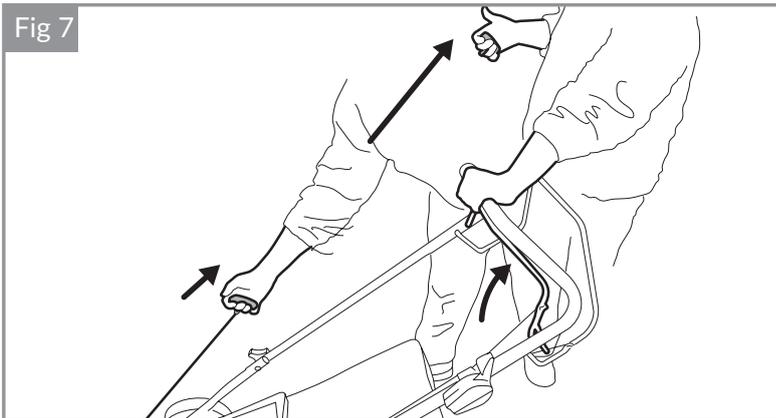



Starting the engine

1. Make sure that your mower is on a safe, flat area (a paved area or path is ideal - avoid thick wet grass and gravel surfaces) away from fuel or fueling area to make starting safe.
2. Press the fuel primer bulb 5 times.
3. Firmly hold the brake handle with one hand, and then with your other hand pull the cord slowly until you feel resistance. Then pull vigorously with one positive action (Fig. 7). Guide the cord back to its rest position (do not release).
4. To restart a hot engine, refer to 'Point 3'
5. To turn off your mower, release the brake handle.



INSTRUCTION MANUAL

USING YOUR MOWER

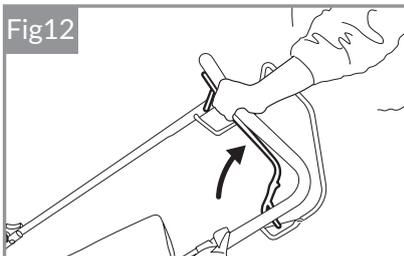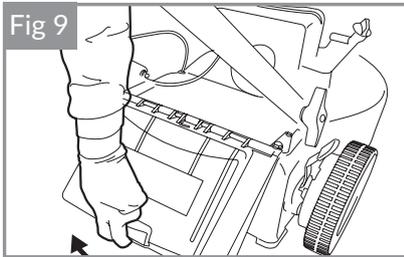

Attach the Grass Collection Bag

The grass collection bag attaches easily by lifting the mower's Rear Flap with one hand (Fig. 9) and slide the grass collection bag into position (Fig. 10).

Cutting Height Adjustment

WARNING! Turn mower off before adjusting cutting height lever

For best results adjust the cutting height of your mower to suit the mowing conditions. Do not try to remove too much grass in one pass.

Adjustment of the cutting height is made centrally. Turn off the mower and take the weight of the mower by lifting. Take hold of the cut height adjustment lever, positioned on the mower's right hand rear wheel.


Move the lever inwards to release it from its locating notch. Move the lever down machine to increase the cutting height.

To reduce the cutting height move the lever upwards. Return the lever to the locating notch to set the desired cutting height.

Make sure the handle fits snugly and securely into its serrated holder (Fig. 11).

Mowing your Lawn

Start your mower (see: Starting the engine). Keep hold of the Brake (OPC) Lever (releasing the Brake (OPC) Lever will stop the engine to avoid accidents) (Fig. 12). To power the mower (WERR17SP Only)

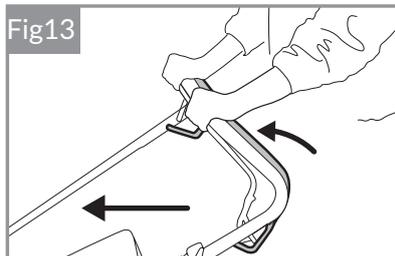

forward move the Drive Lever up and forward (Fig. 13). The mower can be pushed with the drive disengaged for more precise handling. After mowing and emptying the Grass Collection Bag ensure the engine is not running and turned off.

Cleaning your Mower

WARNING! Turn mower off before cleaning

Cut grass is damp. Regular cleaning after each use will ensure better functioning of the mower and reduce the risk of corrosion or seizure. Having finished mowing, allow the engine to cool then remove accumulated grass clippings from and around the engine with a brush. Clean the grass collection bag annually with a brush or gentle spray of water and allow to dry.

Clean underneath regularly - disconnect the spark plug cap and tilt the mower backwards. Remove cut grass with a scraper and a brush.

Do not use a pressure washer or hot water to clean the mower. Dry off the machine before storing by leaving it running for a few minutes on a flat, clean surface to prevent corrosion or seizure.

Storing your Mower

Store your mower in a dry, well-ventilated area, away from flames, sparks or heat sources. Disconnect the spark plug cap. Avoid storing beneath a tarpaulin or similar cover as it may cause condensation resulting in corrosion.



Winter Storage:

Thoroughly clean the mower. Run the engine outdoors until fuel tank is empty or empty fuel using a fuel suction pump. Dispose of discarded fuel safely and responsibly. Run the engine until remaining fuel is consumed.


Remove the spark plug from the engine. pour a tablespoon of engine oil into the cylinder. Gently pull the starter rope several times to distribute the oil to protect the cylinder over winter. Replace and tighten the spark plug.

Transporting your Mower

Ensure the fuel tank is empty. Run the engine until any remaining fuel is consumed. Allow the engine to cool.






How to cut for best results

For best results cut your lawn in alternative directions switching direction each time you cut. Cut your lawn at an equal and regular height. Slightly overlap your cutting lines.

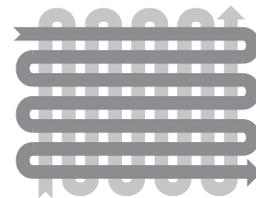

USING YOUR MOWER/SAFETY TIPS

⚠️ TIPS ON MOWER SAFETY

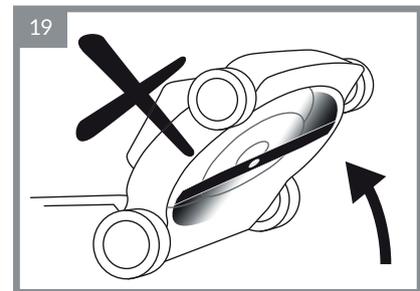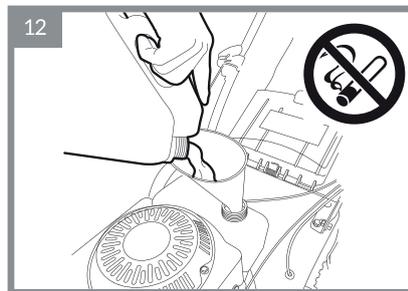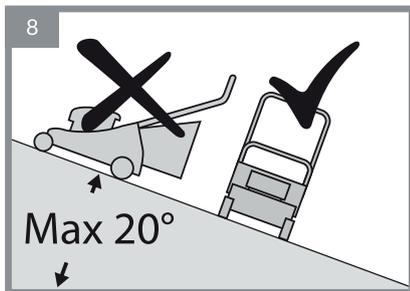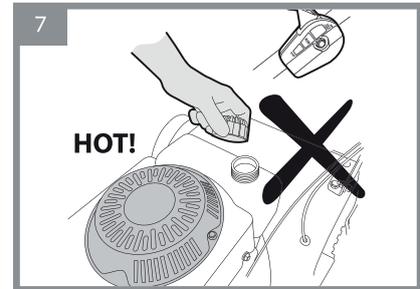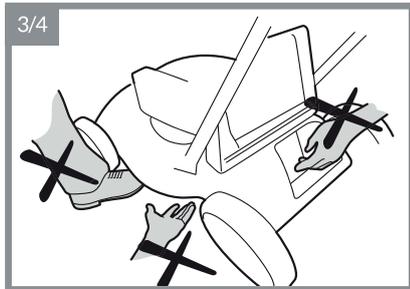

1. Before starting your mower inspect it carefully to ensure that there are no loose parts and that it is in good working order.
2. Be sure of your footing. Always walk, never run, when operating the lawnmower.
3. Keep hands, feet and clothing away from the mower's moving parts and always wear appropriate footwear (avoid sandals or open shoes). 
4. Never put your hands or feet underneath the chassis of the lawnmower while the engine is running.
5. Clear the area to be mowed of any stones, sticks, wire and debris before beginning. Always ensure that you mow a safe distance away (over 14 metres) from adults, children and animals.
6. Turn off the engine and disconnect the spark plug cap before cleaning, transporting, or making adjustments. Never leave the mower unattended.
7. Never open the fuel filler cap, or fill the tank, if the engine is still hot after use. Please ensure that you securely tighten the petrol cap after filling.

8. Mow across the face of slopes, not up & down, and avoid mowing on very steep slopes. We recommend you avoid mowing when it is raining, after nightfall or in poor light conditions.
9. Do not operate the machine by pulling it towards you as you risk pulling it onto your feet. Instead, always push and walk behind your lawnmower.
10. Do not fill the tank, or start the lawnmower indoors, or in a poorly ventilated area, as exhaust gases contain poisonous substances and petrol fumes are flammable and dangerous. 
11. Do not alter engine governing settings or over-rev the engine, as excessive speed is dangerous and can reduce engine life.
12. Do not smoke when filling the fuel tank, using the machine, or when petrol is in the immediate area. Never use or store the mower near a naked flame. 
13. Always use fresh premium unleaded petrol that is not more than 4-6 weeks old. Fill the tank using a funnel, but never completely. Clean up any overflow or splashes before starting. 

14. Do not transport the mower in a vehicle if there is any petrol in the tank. 
15. Be aware that the machine's exhaust area and other parts of the lawnmower get very hot during and right after use. 
16. Turn off the engine before emptying the grass-catcher and before clearing any grass caught in the rear flap where the catcher fits.
17. Store fuel and oil in a cool well-ventilated place, away from direct sunlight and gas cylinders or hot water heater systems. 
18. It is recommended that you wear ear protectors, safety goggles and safety boots when using the lawnmower.
19. To inspect the underside of your mower, only tilt the lawnmower to your right, or back, when standing behind it (this is the side where the exhaust is near the ground) otherwise oil may leak into inappropriate areas of the engine. Never tilt the lawnmower when the engine is running.
20. All servicing and repair work under warranty must be carried out by an Authorised Dealer, otherwise the 1+1-Year warranty may be void.



INSTRUCTION MANUAL

MAINTENANCE SCHEDULE



WARNING! The following procedures must be carried out before you start the engine of your lawnmower.

SUMMARY OF REGULAR MAINTENANCE REQUIRED BY THE MOWER

Frequency	Before each mowing	After 5 hours	Every 25 hours or once a year minimum before winter lay-up
Components			
Cutting system	Check and verify its condition		Sharpen and balance blade. Replace worn or damaged blade.
Spark plug		Check	Clean and check the clearance of the electrodes. Replace if necessary.
Air Filter		Check	Clean the filter. Replace if necessary.
Oil	Check the level	Drain and renew	Drain and renew

Cutting System

Before and after each mowing session, check that the blade, its attachment bolts and drive shaft are not damaged or excessively worn. Never try to straighten a bent blade. Replace a damaged, worn or bent blade as soon as possible. Use only genuine WEBB parts or those approved by WEBB.

Excessive vibration when mowing is a good indication of a problem with the cutting system.



WARNING!

Vibration from a bent or damaged blade can cause costly damage to the mower. Working with an excessively worn blade wastes fuel and can lead to injury if the blade becomes detached from the machine.

Removing the blade

Wear appropriate protective gloves to prevent possible injury when handling the blade. Disconnect the spark plug cap and tilt the mower on its side with air filter and carburettor side uppermost.

Holding the blade firmly in one hand, use a spanner or socket to loosen the blade screw & rotate anti-clockwise.



WARNING!

The spark plug cap must be removed before any attempt is made to remove the blade

Sharpening the blade

For best mowing results, have the edges sharpened and the blade balanced at least once a year by a specialist service dealer or agent.

Mounting the blade



Wear appropriate protective gloves to prevent possible injury when handling the blade. Disconnect the spark plug cap and tilt the mower on its side with air filter side uppermost.

Check that all components (the blade, key, blade holder, screws and washers) are present, clean and in good condition.

Position the blade on its support with the cooling fins facing the engine.

Check the correct alignment and matching of pads with the blade. The blade must be positioned precisely on its stand.

Tighten the screws connecting all of the components. Make a final visual check that all parts are present and aligned before tightening the fixing bolt very firmly with a wrench while holding the blade firmly in one hand (NB wear suitable gloves). Rotate clockwise

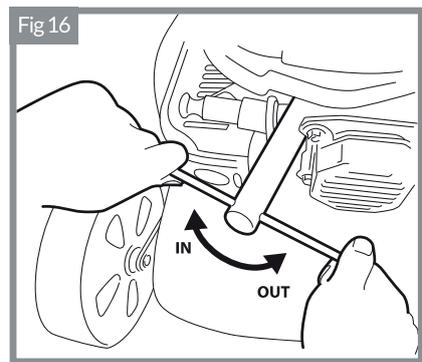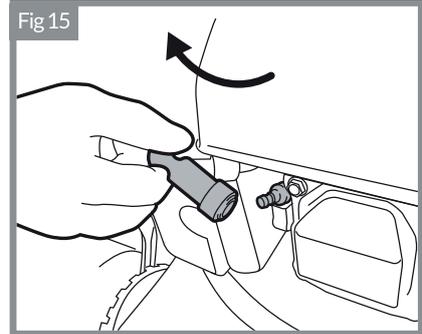

Spark Plug

Check the spark plug initially after the first five hours of mower use. Thereafter, maintenance of the spark plug should take place every 25 hours.


Remove the spark plug cap (Fig.15) using a rotary motion and then remove the spark plug with the wrench provided (Fig.16).

Clean off any carbon deposits using a copper brush and check the electrode gap with a feeler gauge (the gap should be ≈ 0.7 mm). Replace and tighten the serviced spark plug and replace the cap.

If the spark plug is worn or damaged, replace with a new spark plug of the same or suitable type for the engine. If in doubt, contact your point of purchase or local dealer.

Always refer to your B&S manual.

BASIC MAINTENANCE

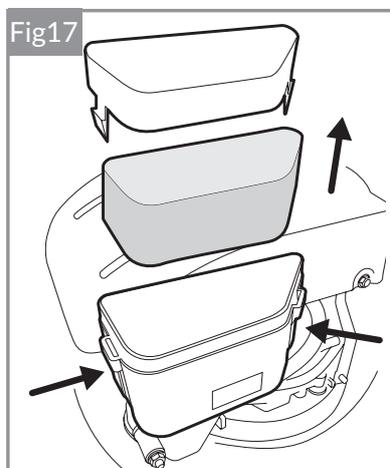



WARNING! Do not twist the foam cartridge to clean it as this could cause damage. If your mower is not serviced correctly, you could reduce your mower's ability to operate and void warranty.

Air Filter

An air filter in poor condition will reduce the performance and life of the engine while making it harder to start. Regular checks are therefore essential, especially when using the mower in dusty conditions. Check and clean the air filter every 25 hours of use or more often if the engine is used in a dusty environment.

Remove the air filter cover lid and carefully remove the foam filter cartridge. Clean the cartridge in a small bowl of warm water containing a few drops of washing-up liquid until it is perfectly clean and free from all traces of grease and dust. Rinse the filter cartridge in clean water and then squeeze gently to remove most of the water. Let it air dry until it is completely dry.

Clean the cover and inside of the air filter box with a clean lint-free cloth. Apply a uniform layer of oil to the outside of the cartridge filter with a brush (you can use clean engine oil for this). Insert the filter cartridge into its housing and replace the filter lid, ensuring that each component is in place and properly installed. If the filter cartridge is damaged or is very dirty, replace it using a genuine part.

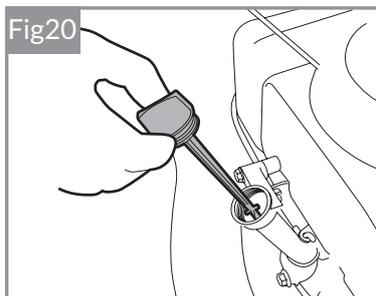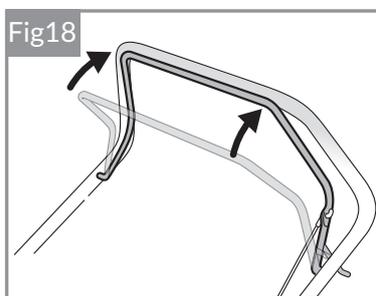

Adjusting the transmission cable

In its transmission engaged position (Fig. 18), the mower's Brake

Lever is pushed fully towards the handlebar. An incorrectly adjusted transmission cable can cause premature wear to the mower's drive system.

If the transmission cable is too tight, it will be difficult to move the drive lever towards the handlebars. Conversely, if the transmission cable is not tight enough, the transmission will function poorly and will lack power.



To adjust the tension of the cable transmission, increase or reduce the length of the adjustment device using the spanner (Fig. 19). Check the effectiveness of the transmission and the resistance of the lever.

Once proper adjustment has been reached, secure the adjustment device by tightening the lock nuts.

Note: Depending on model.

Checking the oil level

Position the mower on a firm, level surface. Unscrew the oil level dipstick (Fig.20) and wipe dry. Insert the dipstick until it reaches the filler neck, but do not screw

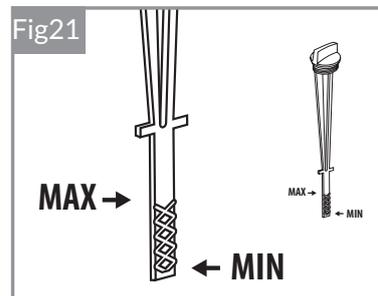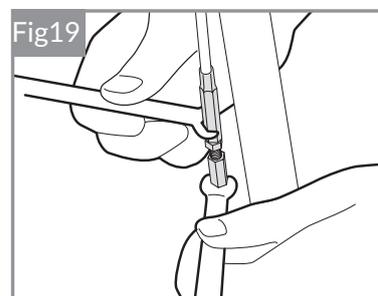

in. Remove the dipstick and check the oil level holding the dipstick horizontal.

The oil level should be between the minimum and maximum oil level marks on the dipstick (Fig.21). Add oil if necessary and repeat the above checking process. Running the engine without oil or with too little oil can cause serious engine damage.

Note: Dispose of used engine oil carefully, responsibly and in accordance with local or national regulations

Changing the oil

The first oil change should be carried out after the first 5 hours of mower use. Thereafter, change the oil after every 25 hours use or at least once a year. Leave the engine running outdoors for several minutes to warm the oil and make it more fluid.

WARNING! Parts of the engine will become very hot and can cause severe burns.


Remove the spark plug cap and unscrew the oil level dipstick. Use a suitable oil suction pump and follow its instructions, then fill the engine with new oil.

WARNING! The above advice is provided as an aid, please follow the instructions provided in your B&S engine manual, when maintaining your engine.



INSTRUCTION MANUAL

TECHNICAL SPECIFICATION

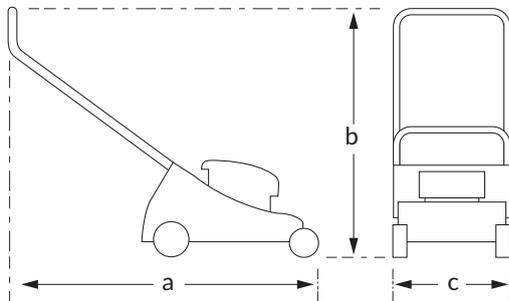

Consistent with our policy of continuous improvement, WEBB reserves the right to change the design and configuration of any of its products without notice or obligation.

Therefore, please treat the text and images in this manual as being for illustrative purposes only. They may in no case serve as a basis for any legal claim.

	WERR17P	WERR17SP
Maximum Operating Speed	3600 rpm	3600 rpm
Cutting Width	42cm / 17"	42cm / 17"
Adjustable Cutting Heights	6	6
Cutting Heights	23-77cm	23-77cm
Grass Collection Capacity	55 L	55 L
Noise Level	96 dB	96 dB
Chassis	ABS	ABS
Dimensions (cm)	a = 155. b = 110. c = 51.5	a = 155. b = 110. c = 51.5
Function	Collection & Mulch	Collection & Mulch


FAST TROUBLE SHOOTING

Problem	Likely cause	Suggested remedy
Engine does not start	Out, or almost out, of fuel	Fill tank with min unleaded petrol
	Spark plug depleted	Replace with a suitable new spark plug
	Spark plug dirty	Clean or replace with a new spark plug
	Spark plug not connected	Press firmly on the terminal cover
	Flooded engine	Remove Spark Plug, clean with appropriate cloth and refit
	Old petrol in the tank	Drain stale fuel and replace with new min unleaded petrol
	Water in the fuel tank	Contact an authorised dealer
Engine stops often	Blocked fuel supply	Ensure the fuel line is not pinched or blocked
	Fuel cap is not venting	You may need to slightly loosen the fuel cap
	Wrong type of fuel	Drain petrol tank and fill with new min unleaded petrol
Engine loses power	Dirty air cleaner filter	Clean or replace with a new air-filter
	Incorrect height adjustment	Raise the mower's cutting height lever
	Blocked fuel cap vent holes	Ensure the 3 holes in the fuel tank cap are clear
Mower vibrates too much	Loose cutting blade	Check and tighten bolts and nuts
	Bent or broken disc/blades	Replace disc or blades
	Excessive grass/dirt build-up	Clean and ensure underside clear of build up
	Disc or blades worn/damaged	Replace blades
Poor cutting catching	Catcher not fitted correctly	Reattach carefully and also check for damage
	Incorrect cutting height set	Adjust the cutting height
	Blocked grass catcher vents	Clear and clean the vents



Model: WERR17SP


Product No: 193806006

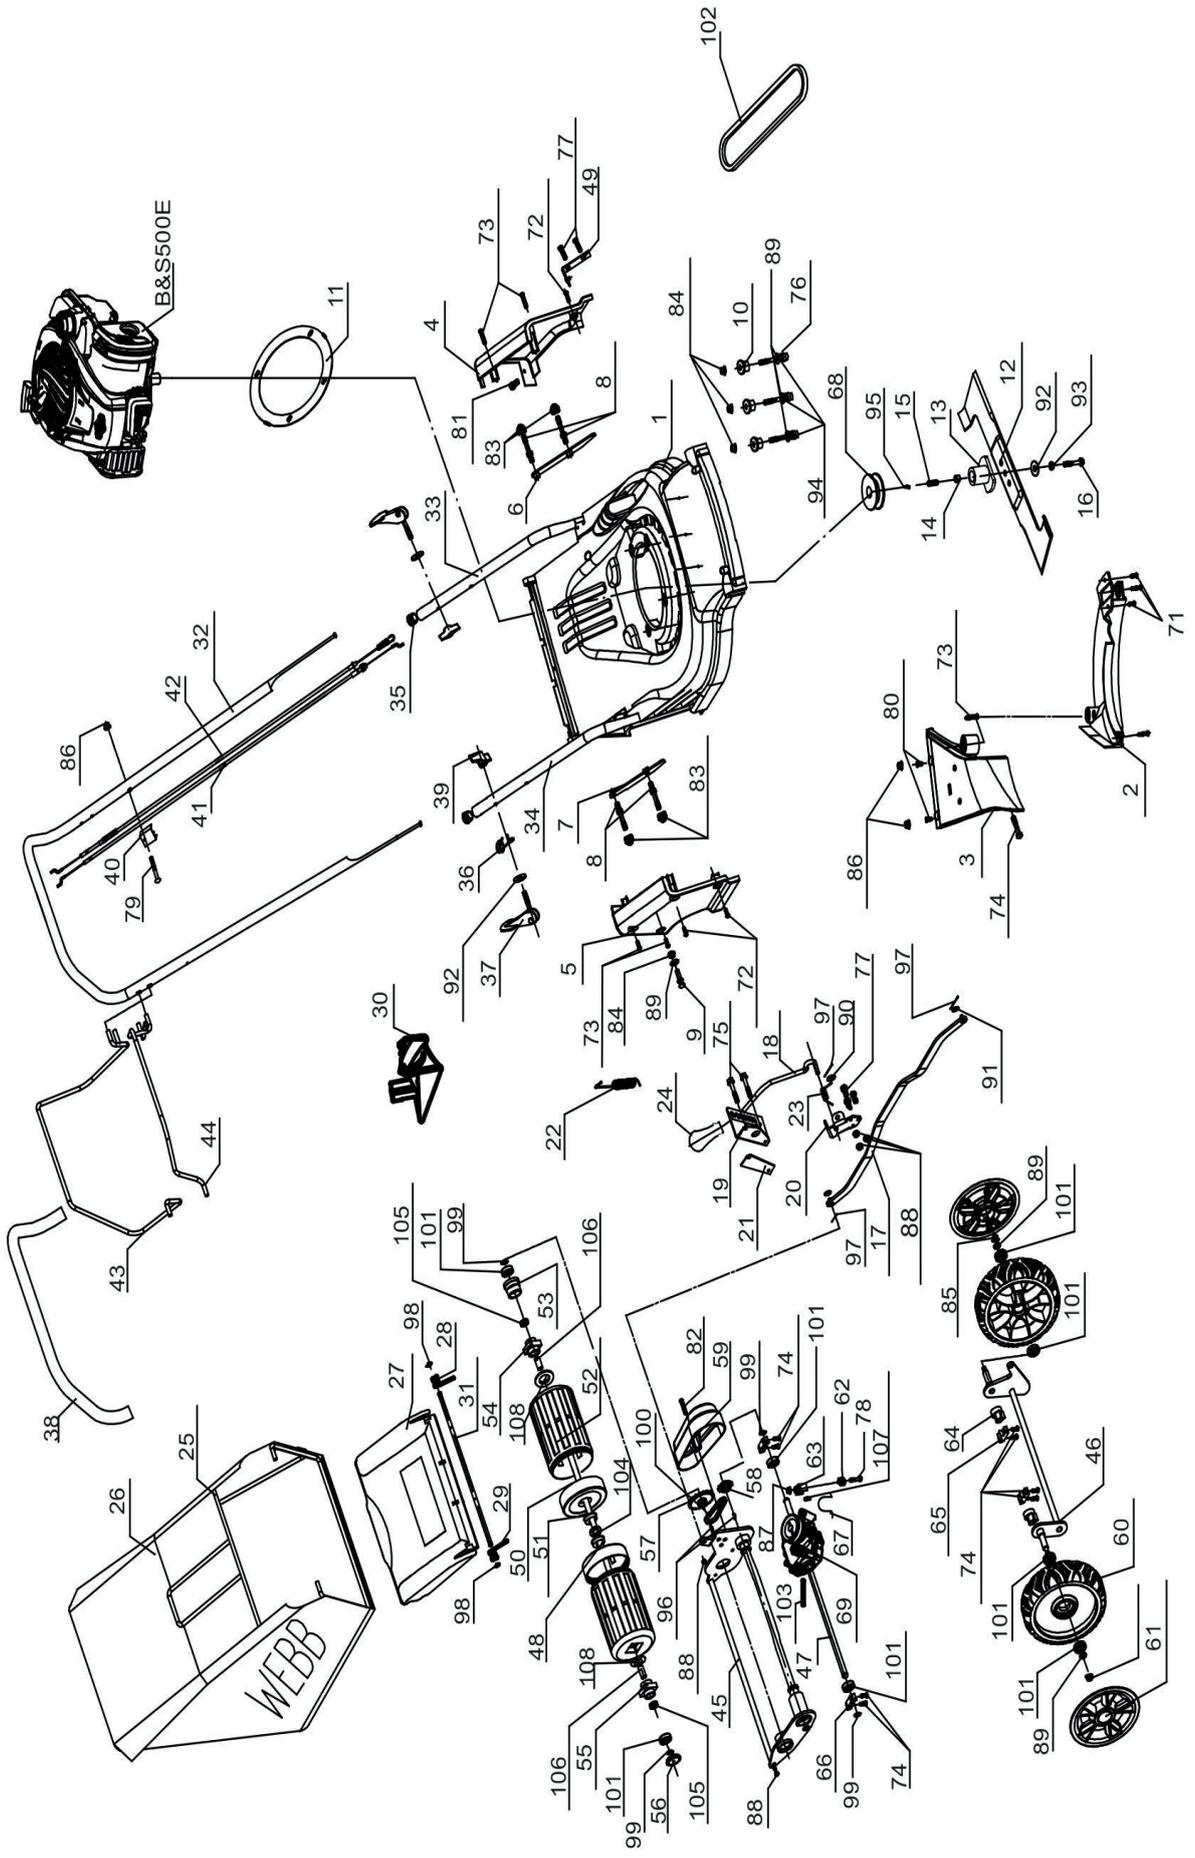

Item No.	Webb Part No.	Description	Qty.	Item No.	Webb Part No.	Description	Qty.	Item No.	Webb Part No.	Description	Qty.
1	WE106-12	Deck (ABS)	1	37	WE106-37	Quick Release Handle Assy.	2	73	WE106-5	Crosshead ST Screw & Washer 5x50F	5
2	WE106-3	Belt Cover	1	38	WE479399	Soft Grip (Included With 32)	1	74	WE106-2	Crosshead ST Screw & Washer 5x30F	9
3	WE106-12	Plastic Plate	1	39	WE479031-01	Flash Nuts	2	75	WE106-108	Hex Head Bolt with Spring & Flat Washer M6x25	2
4	WE106-15	LH Lower Cover	1	40	WE479036	Cable Clamp	1	76	WEG/BT9074171988	Hex Head Bolt with Spring & Flat Washer M8x60	3
5	WE106-17	RH Lower Cover	1	41	WE52111	Brake Cable	1	77	WE106-14	Hex Flange Bolt M6x16	5
6	WE106-39	LH Handle Plate	1	42	WE106-52610	Drive Cable	1	78	WE106-86	Cross Recessed Hex Bolt With Indentation M6x35	1
7	WE106-42	RH Handle Plate	1	43	WE51986-01	Drive Lever	1	79	WE106-80	Cross Recessed Bolt M6x40	1
8	WE106-40	Double-Ended Bolt	4	44	WE51985-01	Brake Lever	1	80	WE106-6	Cross Recessed Bolt M6x16	2
9	WE106-19	Extension Spring Bolt	1	45	WE106-76	Rear Axle Assy.	1	81	WE106-16	Cross Recessed Bolt M5x16	1
10	WE106-8	Bush	3	46	WE106-96	Front Axle Assy.	1	82	WEGB/T9731976	Cross Recessed Screw M6x40	1
11	WE106-9	Washer	1	47	WE106-52609	Gear Box	1	83	WE106-41	Acorn Nut M8	4
12	WE106-25	Blade	1	48	WE106-72	Roller Axle	1	84	WE106-94	Hex Flange Lock Nut M8	4
13	WE52119	Blade Boss	1	49	WE106-13	Tensioner Fixing Plate	1	85	WEGB/T61822000	Non-Metal Lock Nut M8	2
14	WE52166	Blade Flange Gasket	1	50	WE106-69	Roller Cover	2	86	WE106-48	Hex Flange Nut M6	2
15	WE52536	Key	1	51	WE106-70	Nylon Bush	2	87	WE106-83	Non-Metal Lock Nut M6	1
16	WE479478	Lock Nut 3/8"-24Unf-2A	1	52	WE106-68	Roller	2	88	WE106-102	All-Metal Hex Flange Lock Nut M6	5
17	WE106-103	Connecting Bar	1	53	WE106-65	Roller Bearing Housing	1	89	WE106-21	Big Washer 8	6
18	WE106-109	Height Adjustment Arm	1	54	WE106-66	One-Way Bearing Housing, Left	1	90	WE106-101	Flat Washer 8	1
19	WE106-110	Height Adjustment Board	1	55	WE106-74	One-Way Bearing Housing, Right	1	91	WE106-104	Small Washer, 10	2
20	WE106-105	Height Adjustment Support	1	56	WE106-75	Hub Cap	1	92	WE106-24	Flat Washer 10.5*30.3	3
21	WE106-111	Height Adjusting Fixed Plate	1	57	WE106-79	Sprocket 20T	1	93	WE106-23	Spring Washer 10	1
22	WE106-62	Connecting Bar Extension Spring	1	58	WE106-82	Sprocket 11T	1	94	WE106-113	Spring Washer 8	3
23	WE106-106	Height Adjustment Spring	1	59	WE106-81	Sprocket Protective Cover	1	95	WE106-27	Woodruff Key 4.8x6.5x16	1
24	WE106-107	Height Adjustment Handle	1	60	WE106-95	Front Wheel Cover	2	96	WE106-77	Woodruff Key 3x5x13	2
25	WE106-53	Grass Bag Frame	1	61	WE106-93	Front Wheel Cover	2	97	WE106-100	Split Pin 2x20	3
26	WE106-52	Grass Bag	1	62	WE106-85	Spring, Tensioner	2	98	WE106-31	Split Washer 6	2
27	WE106-56	Rear Flap	1	63	WE106-84	Tensioner Bracket	1	99	WE106-63	Spring Washer 12	4
28	WE106-60	Rear Flap Spring, Left	1	64	WE106-97	Front Axle Bush	2	100	WE106-78	Chain 06B-1x37	1
29	WE106-58	Rear Flap Spring, Right	1	65	WE106-98	Gland Bush, Front Axle	2	101	WE106-64	Bearing 6001-2Rs	8
30	WE106-61	Mulching Plug	1	66	WE106-88	Gland Bush, Rear Axle	2	102	WE106-29	Belt A710	1
31	WE106-59	Rear Flap Axle	1	67	WE106-87	Gear Box Hoop	1	103	WE106-91	Spring Type Straight Pin 5x40	1
32	WE106-44	Upper Handle	1	68	WE106-28	Front Belt Pulley	1	104	WE106-71	Flat Washer 14	1
33	WE106-34	Lower Left Handle	1	69	WE106-92	Rear Belt Pulley	1	105	WE106-9	Sealed Washer 12.3x3.4x3.4	2
34	WE106-35	Lower Right Handle	1	70		B&S500E Engine	1	106	WE106-67	One-Way Needle Bearing Hf-1216	2
35	WE106-38	Lower Handle Rubber Cap	2	71	WE106-4	Crosshead ST Screw & Washer 5x20F	4	107	WE106-112	Screw M6x10	1
36	WE51218	Starting Hook	1	72	WE106-18	Crosshead ST Screw & Washer 5x35F	3	108	WE106-73	Crankshaft Washer	1



WERR17P
193865002

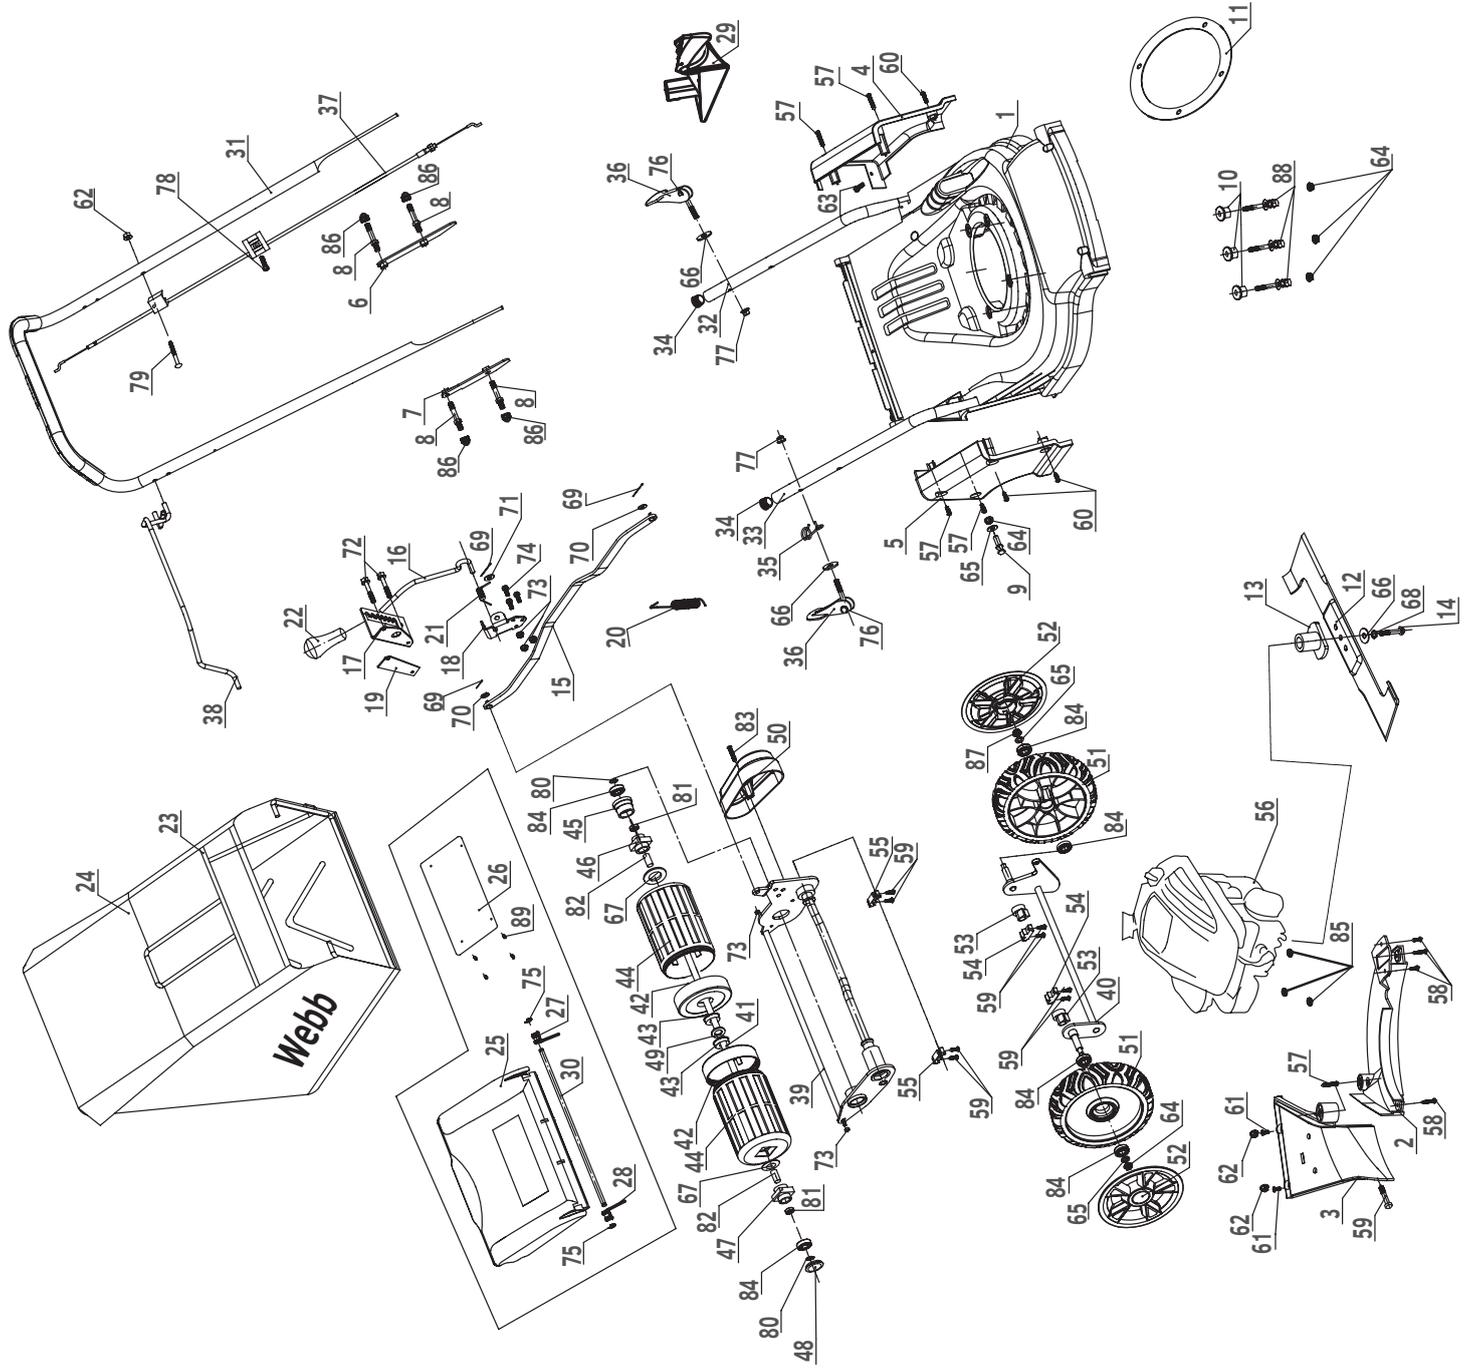

Item No.	Webb Part No.	Webb Description	Qty
1	WE106-12	Deck	1
2	WE106-3	Belt Cover	1
3	WE106-1	Grass Guide Cover	1
4	WE106-15	LH Lower Cover	1
5	WE106-17	RH Lower Cover	1
6	WE106-39	Handle Plate Left	1
7	WE106-42	Handle Plate Right	1
8	WE106-40	Bolt	4
9	WE106-19	Spring Bolt	1
10	WE106-8	Bush	3
11	WE106-9	Washer	1
12	WE106-25	Cutting Blade	1
13	WE106-26	Blade Boss	1
14	WE479502	Bolt 3/8"-24UNF-2A	1
15	WE106-103	Connecting Bar	1
16	WE106-109	Height Adjustment Bar	1
17	WE106-110	Height Adjustment Board	1
18	WE106-105	Height Adjustment Frame	1
19	WE106-111	Board Fixed Plate	1
20	WE106-62	Connecting Bar Spring	1
21	WE106-106	Height Adjustment Spring	1
22	WE106-107	Height Adjustment Handle	1
23	WE106-53	Grass Bag Frame	1
24	WE106-52	Grass Bag	1
25	WE106-56	Grass Bag Rear Deflector	1
26	WE106-54	Rear Deflector Metal Plate	1
27	WE106-60	Rear Deflector Spring, Left	1
28	WE106-58	Rear Deflector Spring, Right	1
29	WE106-61	Mulch Plug	1
30	WE106-59	Rear Deflector Axle	1
31	WE106-44	Upper Handle	1
32	WE106-34	Lower Handle, Left	1
33	WE106-35	Lower Handle, Right	1

Item No.	Webb Part No.	Webb Description	Qty
34	WE106-38	Lower Handle Cap	2
35	WE106-36	Recoil Hook	1
36	WE106-37	Quick Release Handle	2
37	WESL46-5A05030BS	Brake Cable	1
38	WE106-51	Brake Lever	1
39	WE106-76	Rear Axle	1
40	WE106-96	Front Axle	1
41	WE106-72	Roller Axle	1
42	WE106-69	Roller Cover	2
43	WE106-70	Nylon Bush	2
44	WE106-68	Roller	2
45	WE106-65	Roller Bearing	1
46	WE106-66	One-side Bearing, Left	1
47	WE106-74	One-side Bearing, Right	1
48	WE106-75	Roller Cover	1
49	WE106-71	Roller Axle Bush (GB/T795-2002)	1
50	WE106-81	Sprocket Cover	1
51	WE106-95	Front Wheel	2
52	WE106-93	Front Wheel Trim	2
53	WE106-97	Front Axle Bush	2
54	WE106-98	Front Axle Cover	2
55	WE106-88	Rear Axle Cover	2
56	WE106-30	Engine	1

Item No.	Webb Part No.	Webb Descriptions	Qty
57	Screw 5x50F	Screw 5x50F	5
58	Screw 5x20F	Screw 5x20F	4
59	Screw 5x30F	Screw 5x30F	9
60	Screw 5x35F	Screw 5x35F	3
61	Bolt M6x16	Bolt M6x16	2
62	Nut M6	Nut M6	3
63	Bolt M5x12	Bolt M5x12	1
64	Nut M8	Nut M8	5
65	Washer - C Grade 8	Washer - C Grade 8	3
66	Washer - C Grade 10	Washer - C Grade 10	3
67	Washer 025.5x034.5x1	Washer 025.5x034.5x1	2
68	Spring Washer 10	Spring Washer 10	1
69	Pin 2x20	Pin 2x20	3
70	Washer - A Grade 10	Washer - A Grade 10	2
71	Flat Washer- C Grade 8	Flat Washer- C Grade 8	1
72	Bolt M6x25	Bolt M6x25	2
73	Nut M6	Nut M6	5
74	Bolt M6x16	Bolt M6x16	3
75	Clip 6	Clip 6	2
76	Clip 5	Clip 5	2
77	Nut M8	Nut M8	2
78	Bolt M6x30	Bolt M6x30	1
79	Screw M6x40	Screw M6x40	1
80	Spring Washer 12	Spring Washer 12	2
81	Gasket 12.3x3.4x3.4	Gasket 12.3x3.4x3.4	2
82	Bearing HF - 1216	Bearing HF - 1216	2
83	Bolt M6x40	Bolt M6x40	1
84	Bearing 6001- 2RS	Bearing 6001- 2RS	6
85	Washer 08.5x024x3	Washer 08.5x024x3	3
86	Nut M8	Nut M8	4
87	Nut M8	Nut M8	1
88	Bolt M8x60	Bolt M8x60	3
89	M6x40 ST3.8x9	M6x40 ST3.8x9	4



EC DECLARATION OF CONFORMITY

We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:

Designation: Petrol Lawnmower
Model(s): WERR17P & WERR17SP
Product No: 193865002 & 193806006
Type/Serial No. As per rating label on machine

Complies with the following directives:

2006/42/EC- Machinery Directive
2014/30/EU- Electro-Magnetic Compatibility Directive
2000/14/EC Annex VI and 2005/88/EC- Noise Emission in the Environment by Equipment for use Outdoors Directive.

The conformity assessment procedure followed was in accordance with
EN ISO 5395-1:2013, EN ISO 5395-1:2013, EN ISO 14982:2009

Notified Body:

TÜV SÜD Product Service GmbH

Addresses:

Ridlerstrasse 65-80339 München (Germany)
Westendstrasse 65-80686 München (Germany)
No. 88 Heng Tong Road, Shanghai 200070, (P.R. China)

Measured Sound Power Level: 92dB(A)
Guaranteed Sound Power Level: 96dB(A)

Authorised signatory and technical file holder

Date: 11/12/2019

Signature:

A handwritten signature in black ink, appearing to read "S Belcher", written over a horizontal line.

Name: Mr Simon Belcher

Position: Chairman

Company: Handy Distribution Ltd

Address: Murdock Rd, Swindon, Wiltshire, SN3 5HY.





INSTRUCTION MANUAL

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the conditional manufacturer domestic warranty*.

Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

Ride On Lawn Tractors
Cylinder Lawnmowers
Petrol Rotary Lawnmowers
Petrol Hand Held Range

Please register your machine using the following pages or at www.webbgardenpower.co.uk. By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. (Not applicable for Webb electric handheld machines). You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.

Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:



1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.
Sections marked* must be completed to validate Warranty.

1. Users Statement of Warranty

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser, is not transferable and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

2. Period of Warranty

Webb (excludes Electric Handheld) & Webb Pro, 2 year conditional warranty from the original date of sale to the first domestic user.

Webb Electric Handheld & Dynamic, Legacy & Heritage 1 year warranty from the original date of sale to the first domestic user.

90 days from the original date of sale to the professional/commercial or for hire user.

Engine warranty as per the engine manufacturer's warranty, which will be supplied with the machine.

90 days from the original date of sale for Replacement Spare Parts

All machines' must be serviced within the first 14 months from the original date of purchase, to qualify for a second year parts & labour warranty, details of the service must be recorded in the service record within this manual.

A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear and in normal use, will need replacement or adjustment.

These items are chargeable after 90 days of ownership.

Filters
Tyres / Wheels
Drive chains and belts
Brake & clutch friction components
Control cable & starter cords
Fluids & lubricants
Spark plugs
Blades (Lawnmowers & Brushcutters)
Cutter bars (Hedgecutters)
Drive & clutch cable surfaces
Nylon Lines (Line Trimmers)
Carburettor cleaning
Bearings
Bushes
Electric cable
Grass collectors

3. Not covered by this warranty

(a) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.

(b) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operators manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.

(c) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy & Co Ltd.

(d) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.

(e) The warranty policy is non-transferable and is only applicable to the original purchaser.

4. Disclaimer

(a) This warranty is only a remedy for defect of products. GJ Handy & Co Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.

(b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of



INSTRUCTION MANUAL

GJ Handy & Co Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.

(c) Neither GJ Handy & Co Ltd nor any company affiliated with GJ Handy & Co Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

5. General

(a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.

(b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.

(c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

Protecting your machine

Maintenance

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

Fuel (if applicable)

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.

Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

Storage

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded. If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.

Always store fuel away from direct sunlight, in a dark, cool environment.

Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.
PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service

This must be stamped by an approved service dealer to qualify for a free second year warranty.
(Excluding the Webb Electric Handheld machines)

12 Months

Date

24 Months

Date


36 Months

Date




INSTRUCTION MANUAL

48 Months

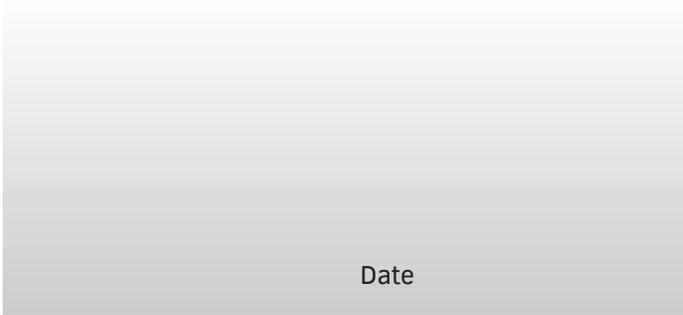


Date

60 Months

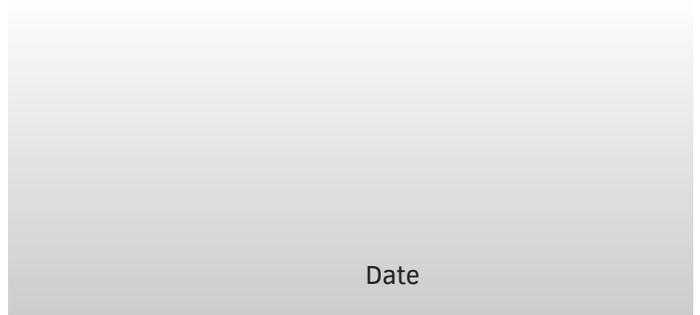


Date

72 Months

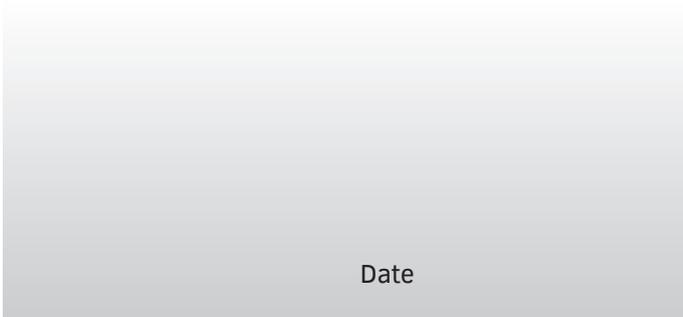


Date

84 Months

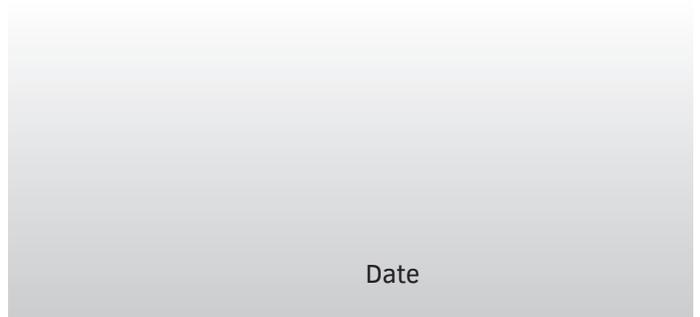


Date

96 Months

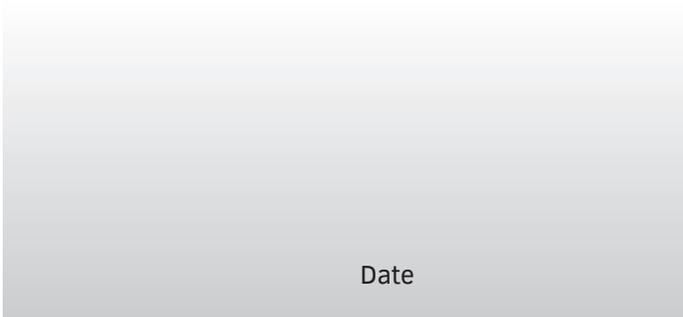


Date

108 Months

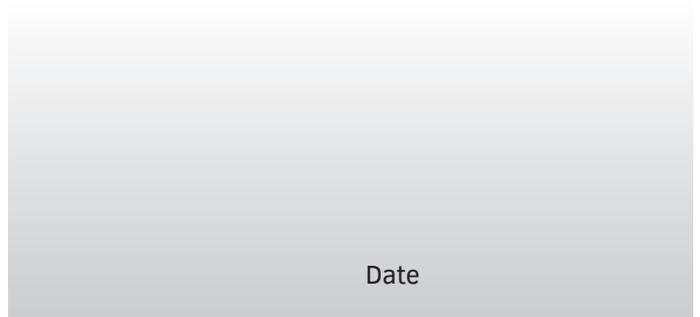


Date

120 Months

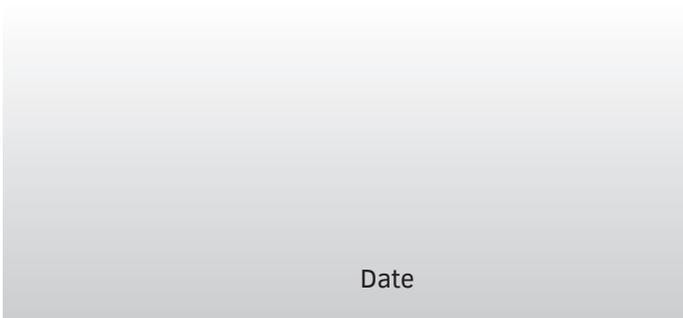

Date

132 Months

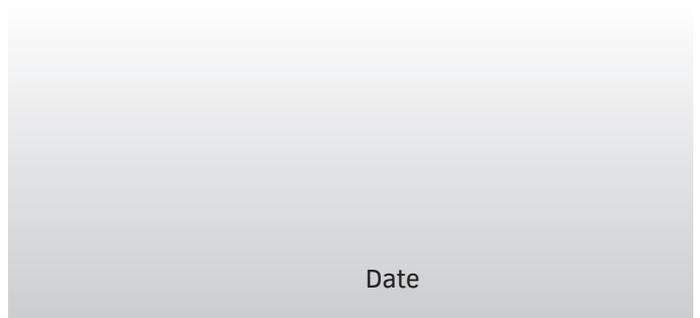

Date

If you have registered online, this form is not necessary.
PLEASE POST THIS COPY TO THE ADDRESS OVERLEAF

Product Information (* Compulsory)

*Model No:	
*Product No:	
*Serial No:	
*Date of Purchase:	

Personal Information (* Compulsory)

*Title		*Forename		*Surname		
*House Number		*House Name				
*Address 1						
*Address 2						
*Town						
*County						
*Postcode						
Home Tel				Mobile Tel		
Email						

Age	18 to 25	26 to 35	36 to 45	46 to 60	61 to 80	81 & over
*Usage	Domestic Use			Commercial/Professional/Hire Use		

*Dealer Stamp (if available)



*Selling Retailer (If dealer stamp not available)

*Dealer Name	
*Dealer Address	
*Date of Purchase	

Webb Lawnmowers privacy commitment to machine owners.
The information supplied, helps us to improve the products & services we provide, including information that we believe is relevant to your and/or your machine. We value your trust by giving us this information about yourself and we are committed to protecting your privacy.

Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding **PRODUCT RECALLS** specific to your machine. Please advise how you wish to be contacted for this specific reason only:

Post Telephone Email

From time to time Webb, its associated companies, authorised dealers or third parties working on our behalf may wish to contact you regarding our products, services, offers or just opinions, which may be used for marketing, research or analysis purposes.
If you wish to be contacted by any of the following methods, please tick the relevant boxes:

Post Telephone Email

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications

Webb Lawnmowers
Murdock Road
Dorcan
Swindon
Wiltshire
SN3 5HY