 


assembly instructions

premium wooden see saw

assembly requires 2 adults
(approx. 2 hours assembly time)

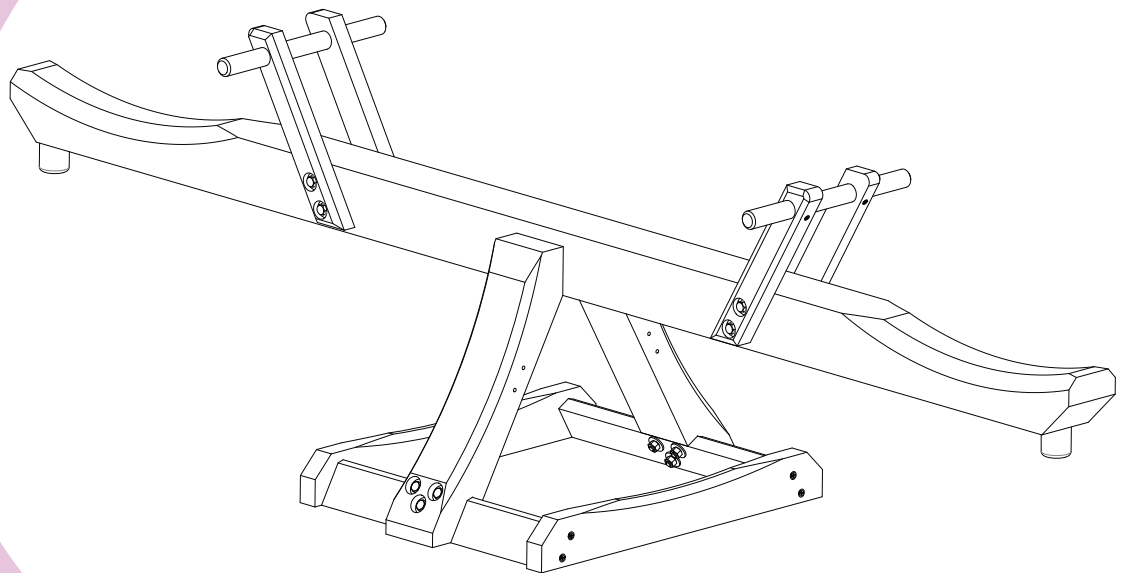

WARNING! Not suitable for children under 36 months – fall hazard/small parts -choke hazard. Min user age 3 years. Max user weight 50kg. Only for domestic use. Outdoor use only. Adult assembly required. Adult supervision recommended at all times.

Advisory Section

To ensure the safety of you, the installer and your children, it is important that these instructions are read fully before commencing the positioning and installation of this product. Assembly is to be carried out by a competent adult only. During assembly children should be kept away from the product due to possible risk of injury. Do not use this item if any components are missing or damaged.

Keep your product safe for the children

1. Use on a flat surface and not to be installed over concrete, asphalt and any other hard surface.
 2. Installation on a suitable surface (i.e. it should not be installed over concrete, asphalt, tarmac or any other hard or broken surface).
 3. Use within a clear area where the nearest obstruction (fence, tree, laundry line, cable, etc.) is more than 2 metres away.
 4. In windy and adverse weather conditions place the product in a safe area. In these conditions the product may become a hazard.
 5. Under no circumstances must modifications or repairs not approved by the manufacturer be conducted
-

Timber Advice

This product has been made from premium timber. Great care has been taken in selecting, treating and machining the timber before it is presented to you. Timber is a natural product and as such may experience changes throughout the course of its life. This means it may:

- ☒ Develop openings (gaps, slits, apertures, cracks, splits) along the line of the grain. These openings are due to the difference in moisture content between the internal and outer surfaces of the timber. This is to be expected, is totally acceptable and will not affect the integral strength, life or guarantee of the product.
 - ☒ Warp and distort its shape. Any distortion will be slight and will not affect the safety or enjoyment of this product.
 - ☒ Fade as the timber reacts with sunlight. The timber should be treated with a proprietary product to act as a protective barrier, i.e. a water repellent, on an annual basis.
 - ☒ After first year of service treat product with a good quality treatment safe for children's use.
-

Routine Maintenance

It is advised that on a regular basis (i.e. at the beginning of the season and monthly thereafter) all main parts/ fixings are checked as secure, well oiled (if metallic), have no sharp points/edges and are intact. Replace, oil and/or tighten when necessary. Failure to do so may result in an injury or hazard.

Remember to keep these instructions in a safe place for future reference.

Plum Products Ltd,
The Cliff, Middle Street
Ingham, Lincolnshire, LN1 2YQ, UK
Tel: +44 (0) 844 880 5302,
Fax: +44 (0) 152 273 0379
customerservices@plumproducts.com
www.plumproducts.com

Copyright Plum Products 2013

Plum Products Australia Pty Ltd,
303/154-158 Military Road,
Neutral Bay, NSW 2088, Australia
Tel: 02-99605500
Helpline: 1800 900 161
Email: aushelpdesk@plumproducts.com



SAFETY INSTRUCTIONS

WARNING!

Minimum user age 3 years
Maximum user weight 50kgs
Not suitable for children under 36 months – small parts
Adult assembly required
Adult supervision recommended at all times
Only for domestic use
Outdoor use only
Not suitable for children under 36 months – fall hazard

AVERTISSEMENT !

Age minimum de l'utilisateur 3 ans
Poids maximum de l'utilisateur 50kgs
Ne convient pas aux enfants de moins de 36 mois - petites pièces
Assemblage par un adulte nécessaire
Ne jamais laisser un enfant jouer sans surveillance
Usage domestique uniquement
Destiné à l'usage externe uniquement

ACHTUNG!

Das Mindestalter für Benutzer beträgt 3 Jahre
Höchstgewicht des Benutzers 50kgs
Nicht für Kinder unter 36 Monaten geeignet – Kleinteile
Montage muss durch einen Erwachsenen erfolgen
Sollte nur unter unmittelbarer Aufsicht von Erwachsenen benutzt werden
Nur für den Hausgebrauch
Nur zur Nutzung im Freien geeignet

ATTENZIONE!

Età minima dell'utente 3 anni.
Peso massimo dell'utente 50kgs
Non adatto a bambini al di sotto dei 36 mesi. Contiene pezzi piccoli. Pericolo di soffocamento
È necessario l'assemblaggio di un adulto
Si raccomanda sempre la supervisione di un adulto
Solo per uso domestico
Solo per uso esterno

WAARSCHUWING!

Minimum leeftijd van gebruiker: 3 jaar
Maximum gewicht van gebruiker 50kgs
Niet geschikt voor kinderen jonger dan 36 maanden – kleine onderdelen, verstikkingsgevaar
Montage door een volwassene vereist
Toezicht van een volwassene te allen tijde aanbevolen
Alleen voor gebruik binnenshuis
Alleen voor gebruik buiten

AVERTENCIA!

Edad mínima del usuario 3 años

Peso máximo del usuario: 50kgs

No es conveniente para niños menores de 36 meses, ya que posee partes pequeñas

El montaje de este juguete debe llevarlo a cabo un adulto.

Se recomienda en todo momento la supervisión de un adulto.

Utilícese exclusivamente en el ámbito doméstico.

Utilícese exclusivamente al aire libre.

VAROVÁNÍ!

Minimální věk uživatele je 3 let

Maximální hmotnost uživatele 50kgs

Není vhodné pro děti mladší 36 měsíců – drobné součásti

Vyžaduje se montáž dospělou osobou

Doporučuje se po celou dobu dozor dospělé osoby

Pouze pro domácí použití

Pouze pro venkovní použití

UPOZORNENIE!

Minimálny vek používateľa je 3 rokov

Maximálna hmotnosť používateľa 50kgs

Nevhodné pre deti mladšie ako 36 mesiacov - malé častice

Vyžaduje sa montáž dospelou osobou

Dozor dospelšej osoby sa odporúča po celú dobu

Iba pre domáce použitie

Iba pre vonkajšie použitie

تحذير!

الحد الأدنى لعمر المستخدم

الحد الأقصى لوزن المستخدم 50kgs

لا يصلح لاستخدام للأطفال دون 36 شهر - قطع صغيرة،

يتطلب لتجميع أجزاء الجهاز شخص بالغ

ينصح بضرورة وجود إشراف دائم من كبار السن عند استخدام الجهاز.

للاستخدام الداخلي فقط

للاستخدام في الهواء الطلق فقط

OSTRZEŻENIE!

Minimalny wiek użytkownika: 3 lat

Maksymalna waga użytkownika 50kgs

Nie nadaje się dla dzieci w wieku poniżej 36 miesięcy – małe elementy

Wymaga montażu przez osobę dorosłą

Zalecany jest stały nadzór osoby dorosłej

Tylko do użytku domowego

Tylko do stosowania na dworze

ADVARSEL!

Minimum bruger alder 3 år
Maksimum brugervægt 50kgs
Ikke egnet til børn under 36 måneder - små dele, fare for kvælning
Skal samles af en voksen
Bør altid anvendes under opsyn af en voksen
Kun til hjemmebrug
Kun til udendørs brug

 
 
 
 
 
 
 
 
UYARI!

Minimum kullanıcı yaşı 3 yıl
Maksimum kullanıcı ağırlığı 50kgs
36 aylıktan küçük çocuklar için uygun değildir – küçük parçalar
Bir yetişkin tarafından monte edilmesi gerekir
Her zaman yetişkin gözetimi önerilir
Yalnızca ev kullanımı için
Yalnızca dış mekan kullanımı


FIGYELMEZTETÉS!

Minimális felhasználók kora 3 év
Max. terhelhetőség 50kgs
Nem alkalmas 36 hónapnál fiatalabb gyerekek számára - apró részek
Felnőtt összeszerelése szükséges
Minden alkalommal egy felnőtt felügyelete mellett ajánlott
Csak otthoni használatra
Kültéri használatra

WOOD: PARTS LIST





PART ID		QUANTITY
D1648		2
D1649		2
D1650		2
D1651		1
D1652		2
D1653		2
D1654		2
D1655		2

 HARDWARE: PARTS LIST







PART ID		QUANTITY
BUSH		4
PIVOT BAR		1
STOPPER		2

TOOLS REQUIRED:

    PZ1,
PZ2



FASTENER LIST:

      
M8 x 70		x6
M8 x 60		x16
M6 x 12 Washer		x2
M8 Washer		x28
M8 Spring Washer		x16
M8 Nut		x6
M8 Dome Nut		x6
M3x 20		x4
M4 x 40		x2
M4 x 50		x4
M4 x 70		x8

1

D1650 300 x 25 x 25mm x2

D1648 300 x 44 x 28mm x2

 D1649 300 x 44 x 28mm x2

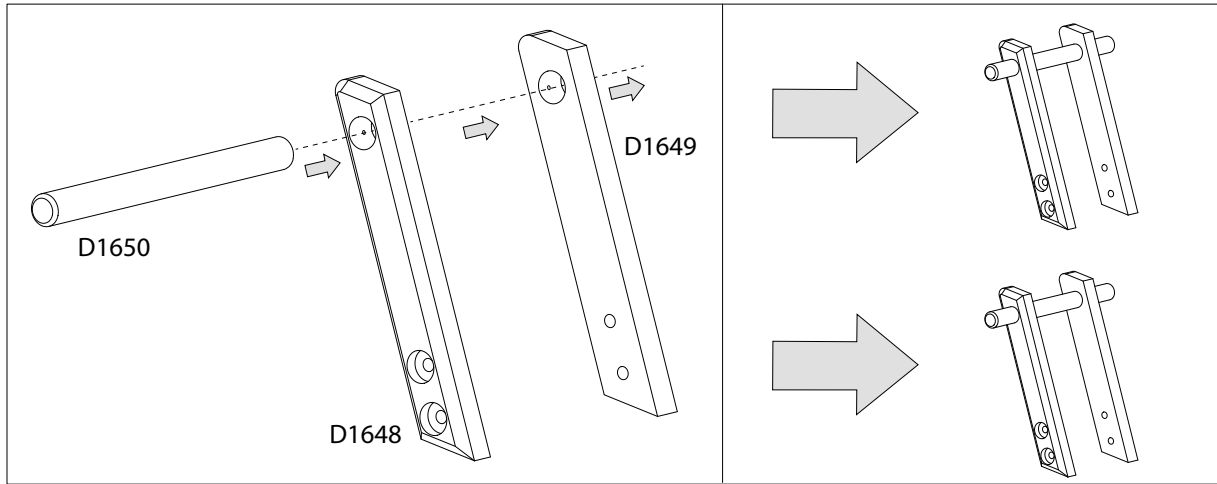


2

D1651 2000 x 88 x 88mm x1


M8 x 60 60mm x8


M8 WASHER x8

 M8 SPRING WASHER x8

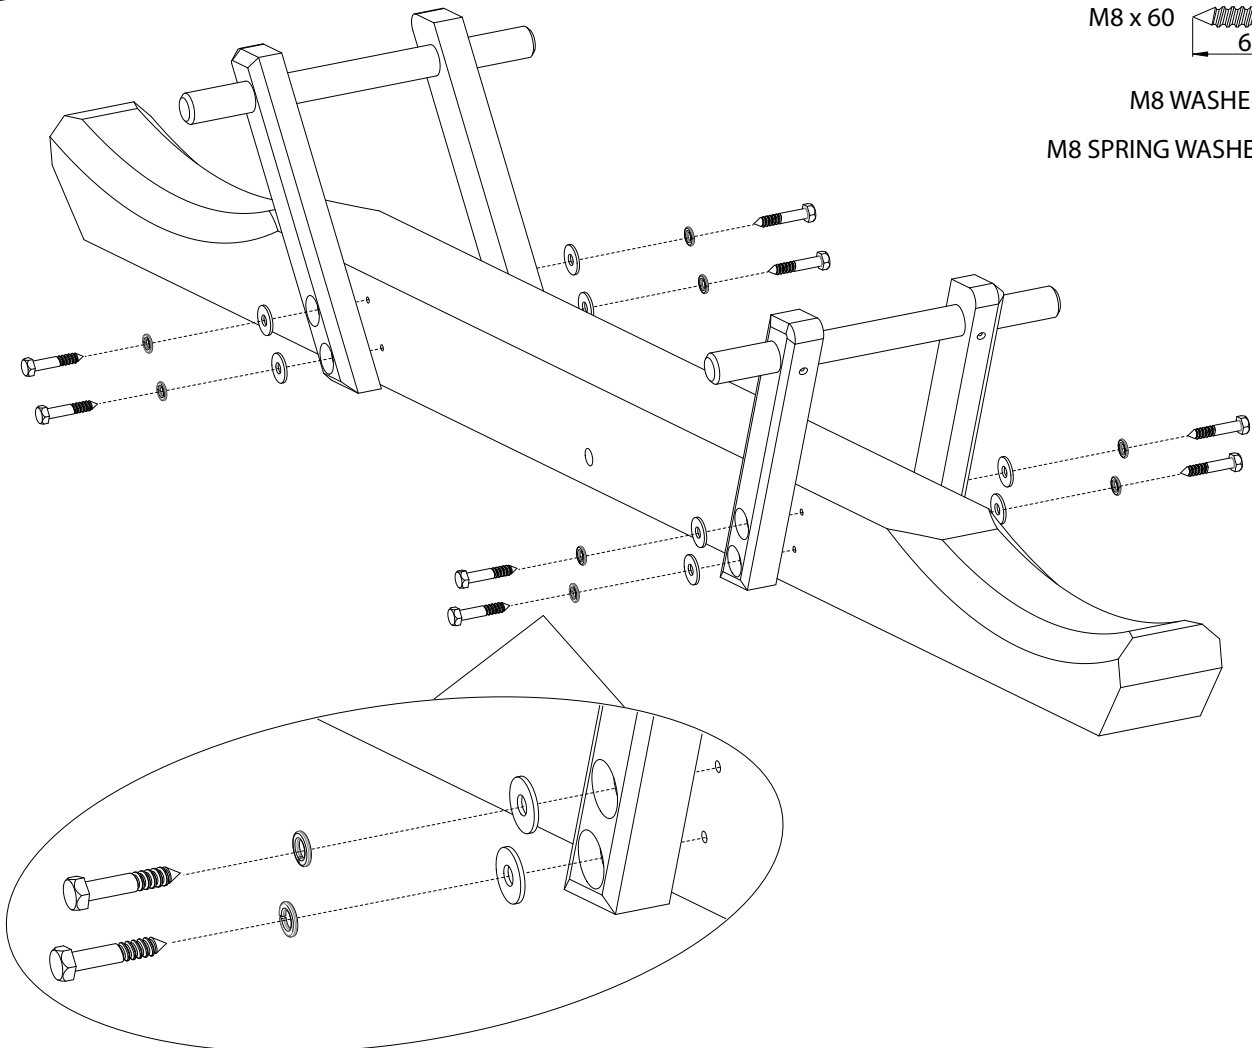


3

 M3 x 20  20mm x4

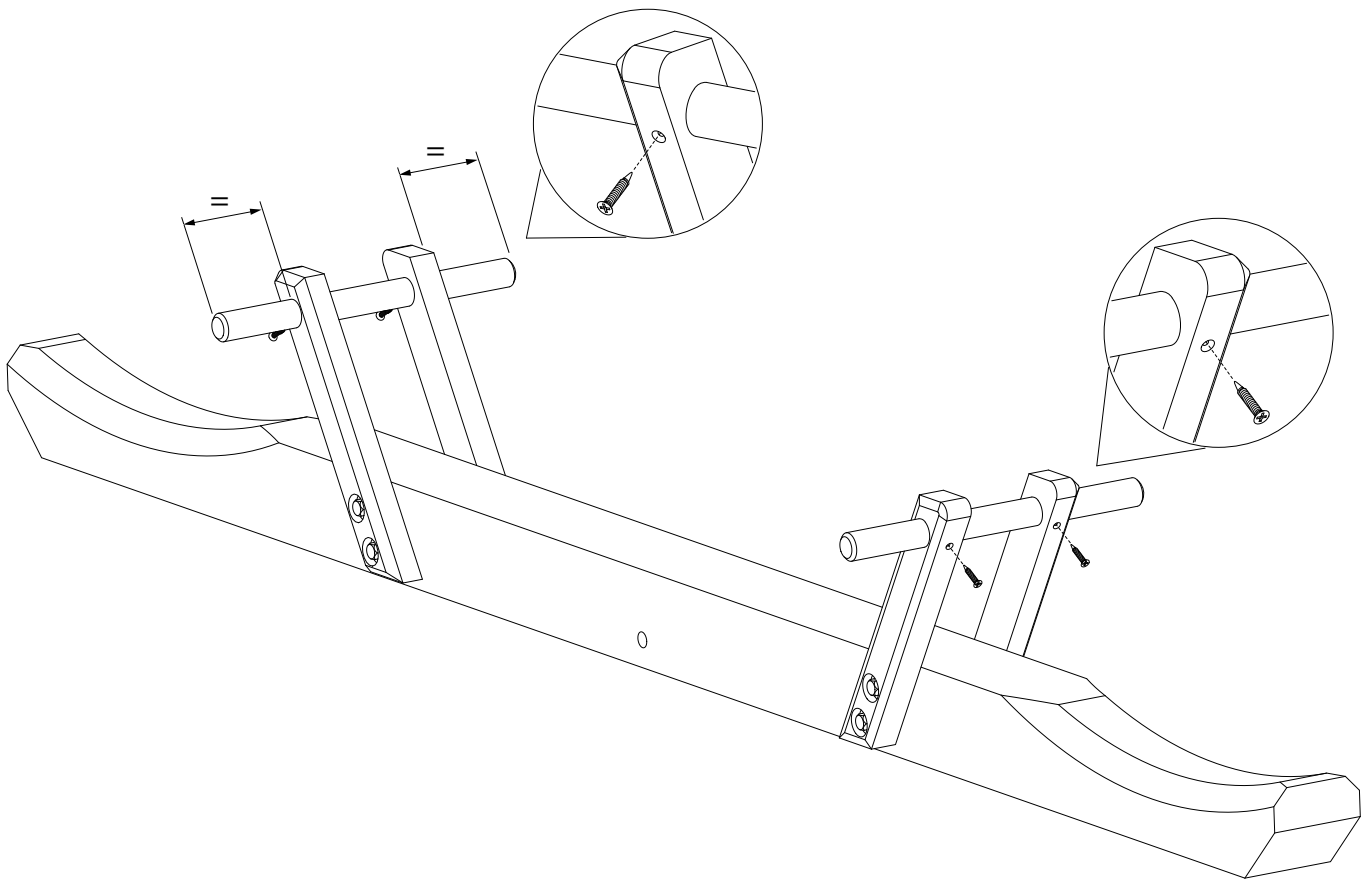 


4

 
STOPPER  x2

M4 x 40  40mm x2

 
M6 x 12mm Washer  x2

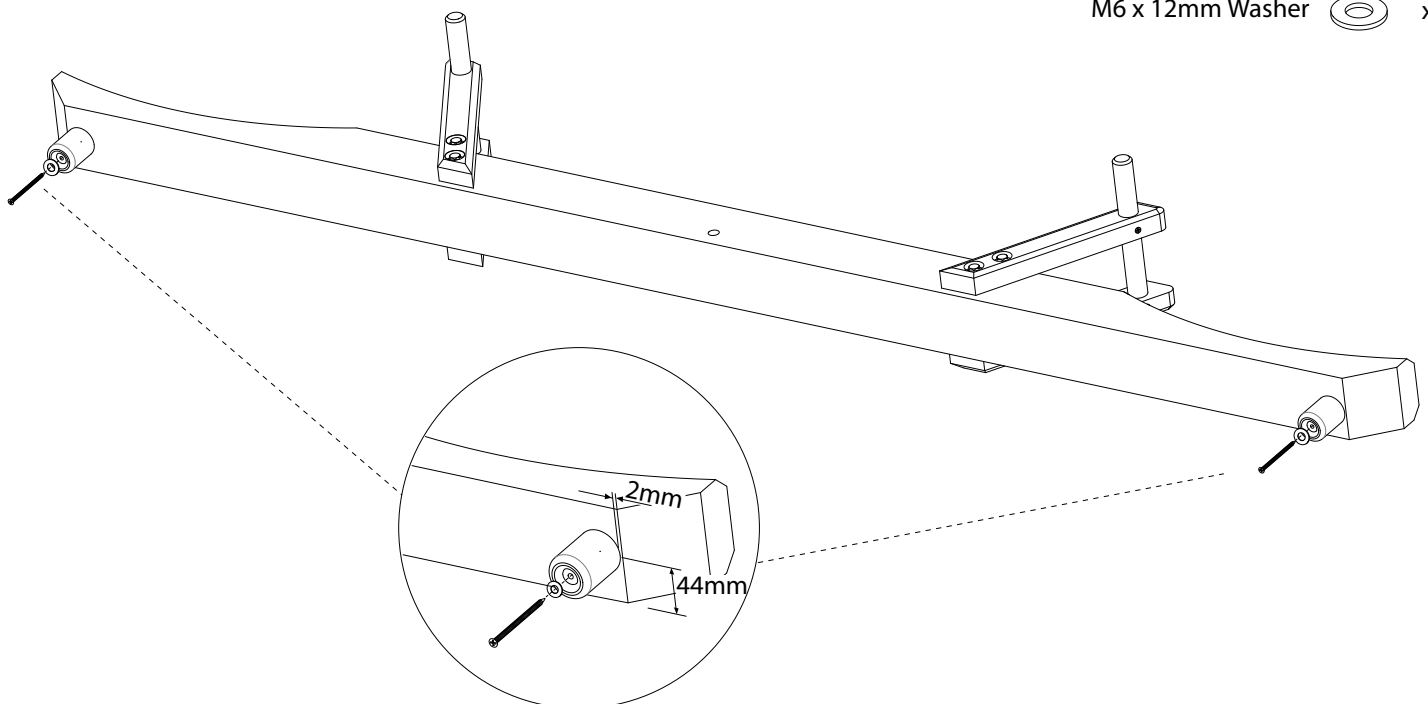


5

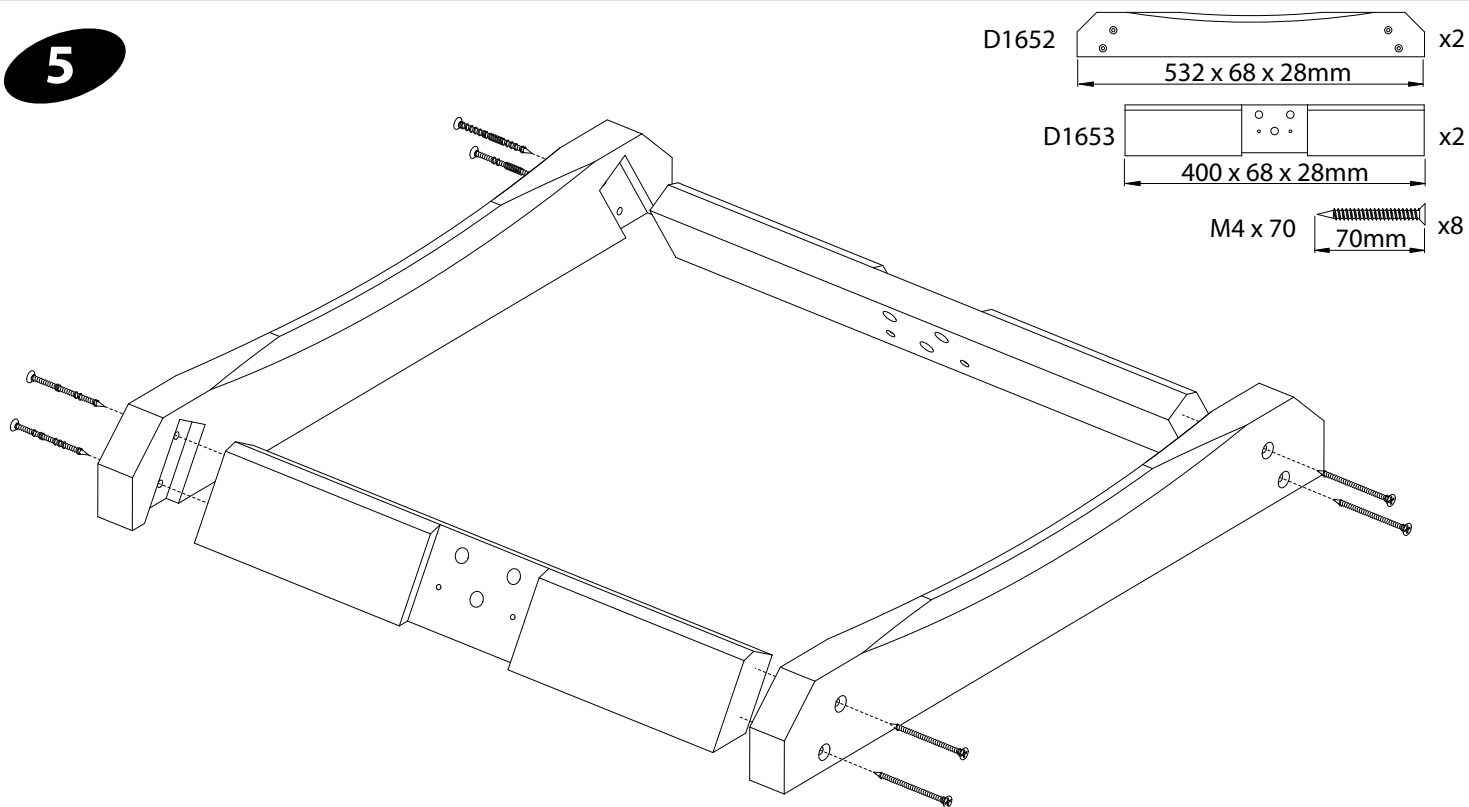 


6

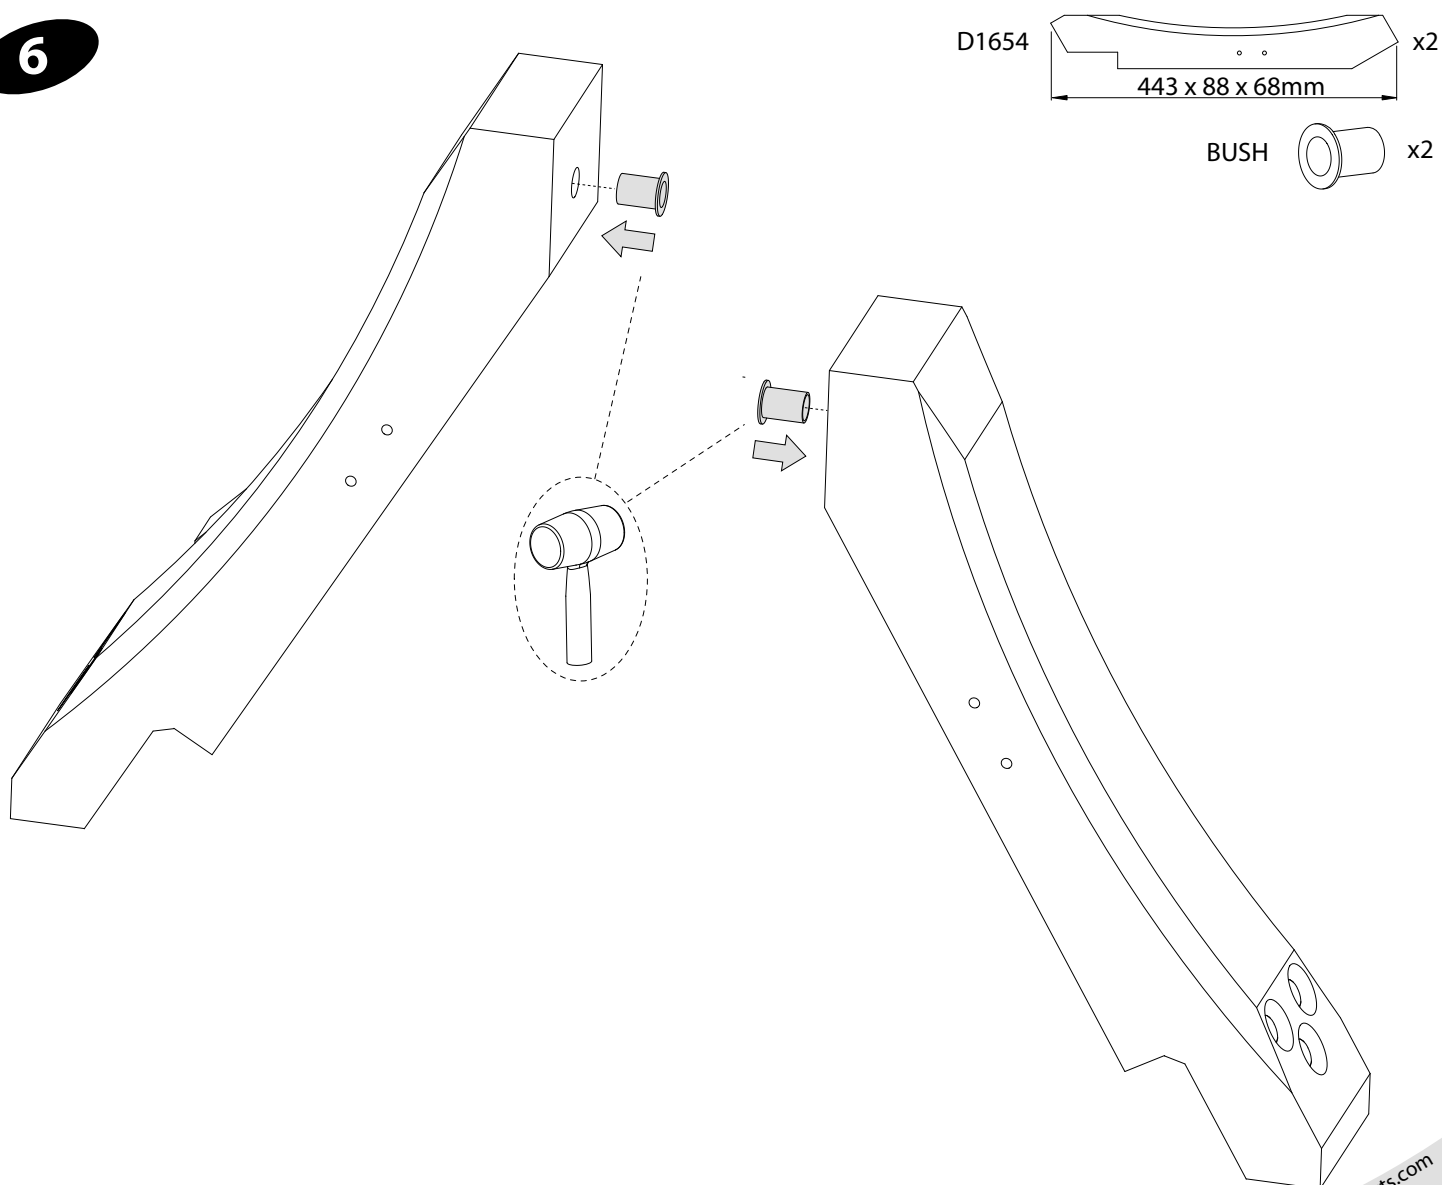 


7

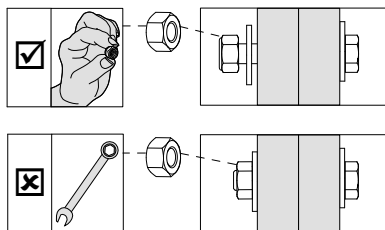 

 
M8 x 70  x6
70mm

M8 Washer  x12

 
M8 Nut  x6

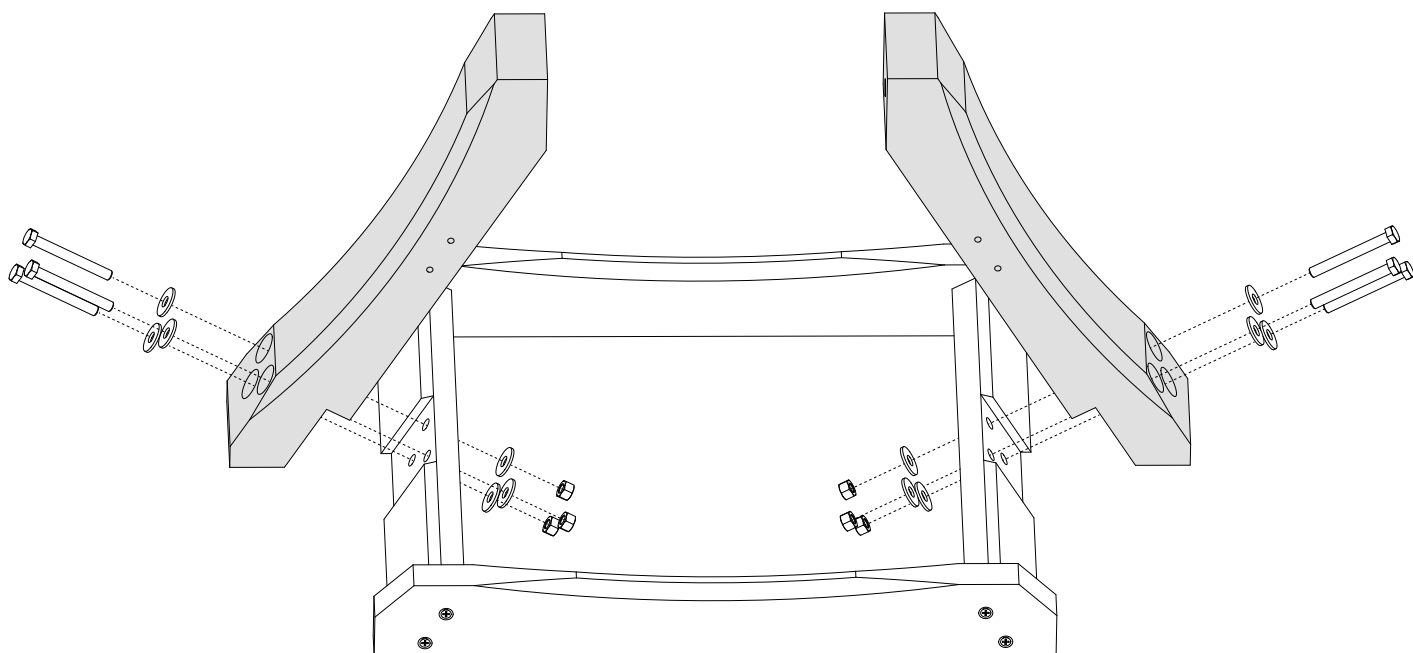


8

 PIVOT BAR  x1
135x 12 x 12mm

 BUSH  x2

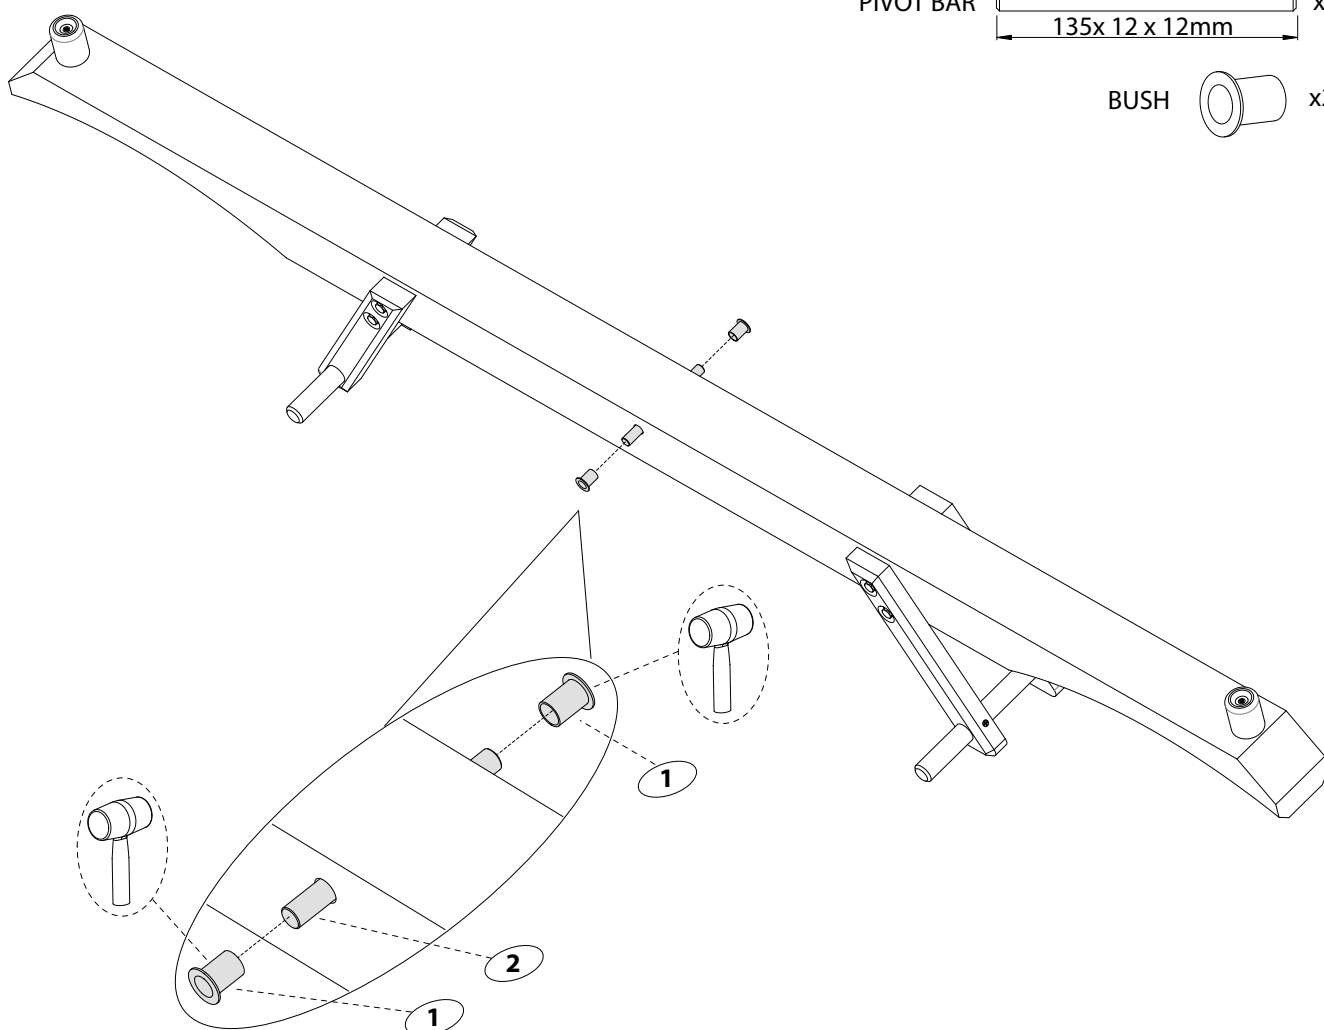

9

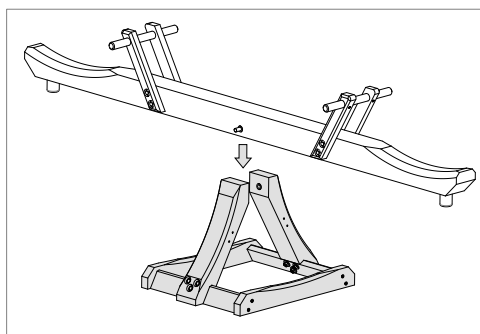 







M4 x 50



x4




      x6

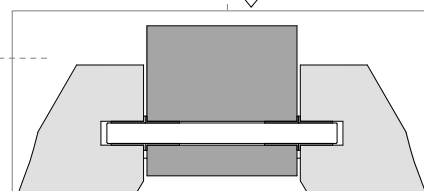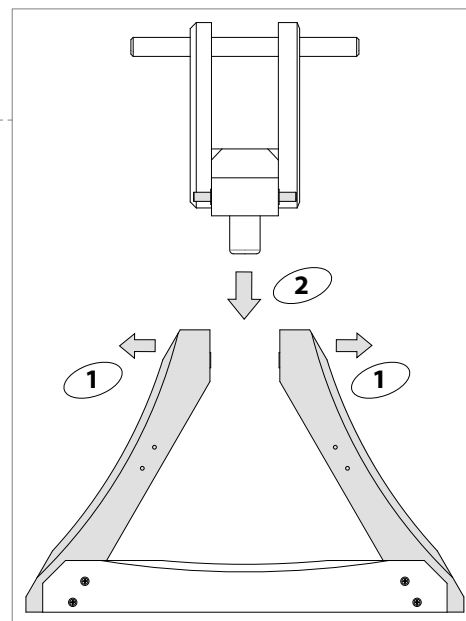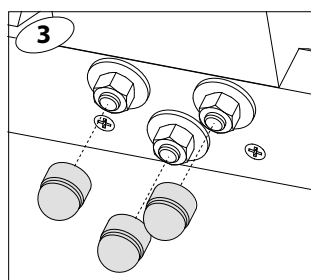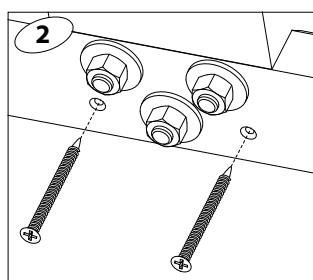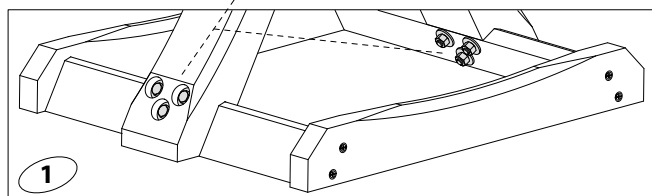

10

 M8 x 60



x8

M8 WASHER



 
x8

M8 SPRING WASHER









x8

D1655



x2

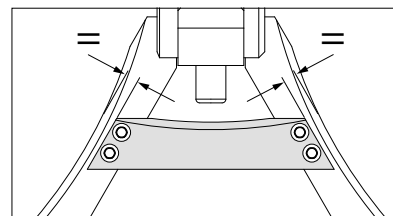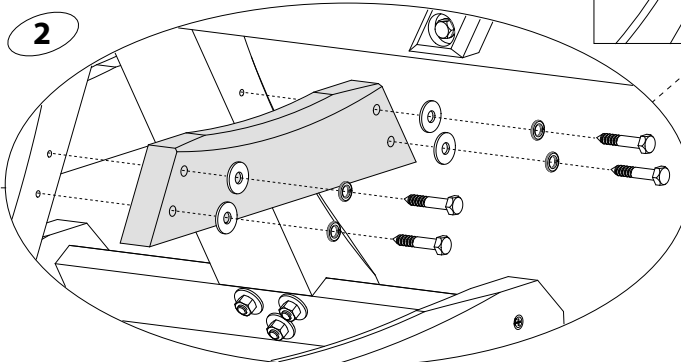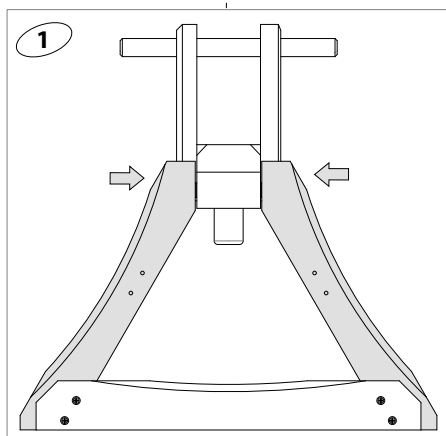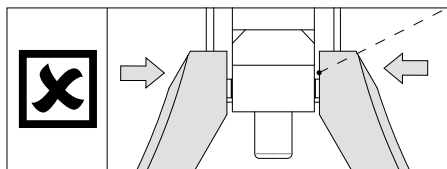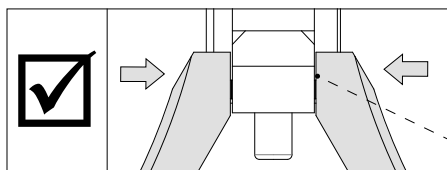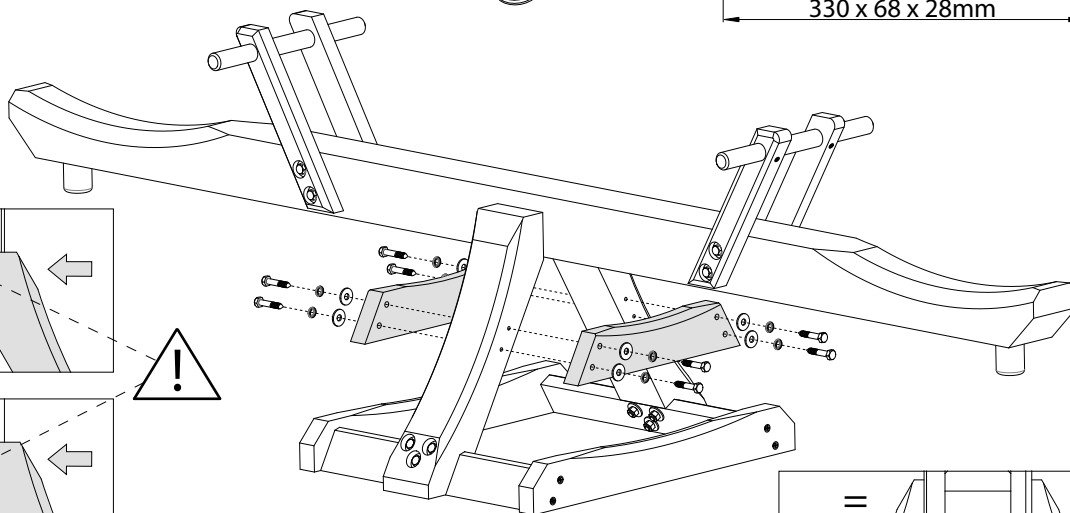      

UK

Plum Products Warranty

This product is guaranteed for twelve months from the date of purchase against manufacturing defects. The warranty is conditional on proof of purchase being presented in the event of a claim.

The warranty is registered to the original owner and is non-transferable. Regular maintenance is required to ensure safety, maximum life and performance of the product. Failure by the owner to maintain the product according to the maintenance requirements may render this warranty void. Maintenance guidelines are in the Instruction Manual provided with the product.

Plum Products® Ltd supplies safe, quality products. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Modification shall render the warranty void and Plum Products® Ltd will accept no liability for any modified products or any consequences resulting from the failure of a modified product.

This product is warranted for domestic use only. Under no circumstance should the product be used in public or commercial settings such as schools or playgrounds, any such use may lead to product failure and potential injury. Any public or commercial use will render this warranty void.

These conditions do not affect your statutory rights as a consumer.

AUSTRALIA

Plum Products Warranty

Subject to proper installation and normal residential use, Plum Products ("Plum") play products are warranted, subject to the limitations stated below, to the original retail purchaser or owner to be free from manufacturers defects in material or workmanship for a period of 1 (one) year from the date of original retail purchase.

All warranties may be registered. To register your warranty please visit www.plumproducts.com and retain your proof of purchase for the warranty period.

Goods covered under this limited warranty will be replaced or repaired, at our option, and returned to the customer at no cost to the customer. Plum reserves the right to examine photographs or physical evidence of goods claimed to be defective and to recover the goods prior to settling a warranty claim.

Non-residential use of the play products is prohibited and there will be no warranty for any commercial, competition or playground use as these products are designed for residential use only. No warranty shall apply on equipment subjected to abuse, negligence, improper installation or use, vandalism, acts of God, unauthorised alteration or attachment to other equipment, improper use or repair by the customer or a third party.

Whilst every endeavour is made to ensure the highest degree of safety in the product, freedom from injury cannot be guaranteed. It is essential to install correctly in accordance with installation instructions, supervise your children's play activity and maintain your play equipment periodically according to manufacturer guidelines.

This warranty does not cover scratching or scuffing of the product as a result of normal wear and tear and any minor defects which do not affect the functionality of the product. This warranty is expressly in lieu of all other warranties, express or implied given by Plum.

Your statutory rights remain unaffected. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law under which you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major one.

To make a claim please contact us immediately on our customer service number or email below.
Telephone Plum Customer Services: 1800 900161
Email: Aushelpdesk@plumproducts.com

All claims must be made within 14 days of purchase or within a reasonable time of awareness of defect and must be accompanied by proof of purchase. Please therefore retain proof of purchase. Plum may reject claims which are not made within a reasonable time and/or where there is no proof of purchase. Plum will meet the cost of all agreed and validated claims.

Thank you for purchasing our product.

Plum Products Australia Pty Ltd, 303/154-158 Military Road, Neutral Bay, NSW 2089, Australia.