

Assembly Instructions




SHL301K2-G/K




SHL300K2-G/K


Assembly note:

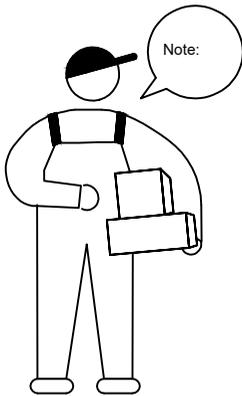


- ① Use a protective mat and handle the product with care.

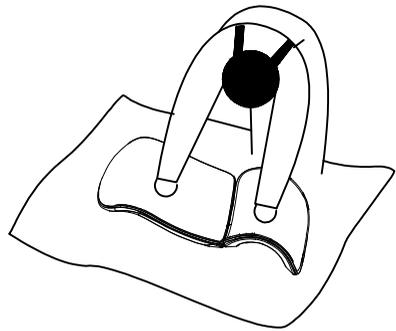


- ② At least two people are required.

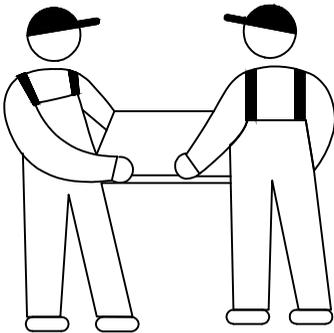

- ③ Contact Dams if you require any further assistance.




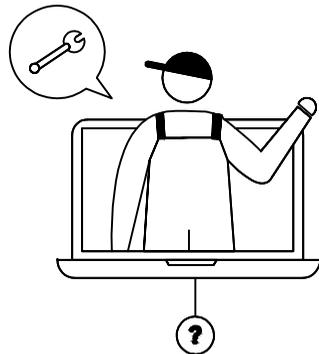


Exploded
diagram:

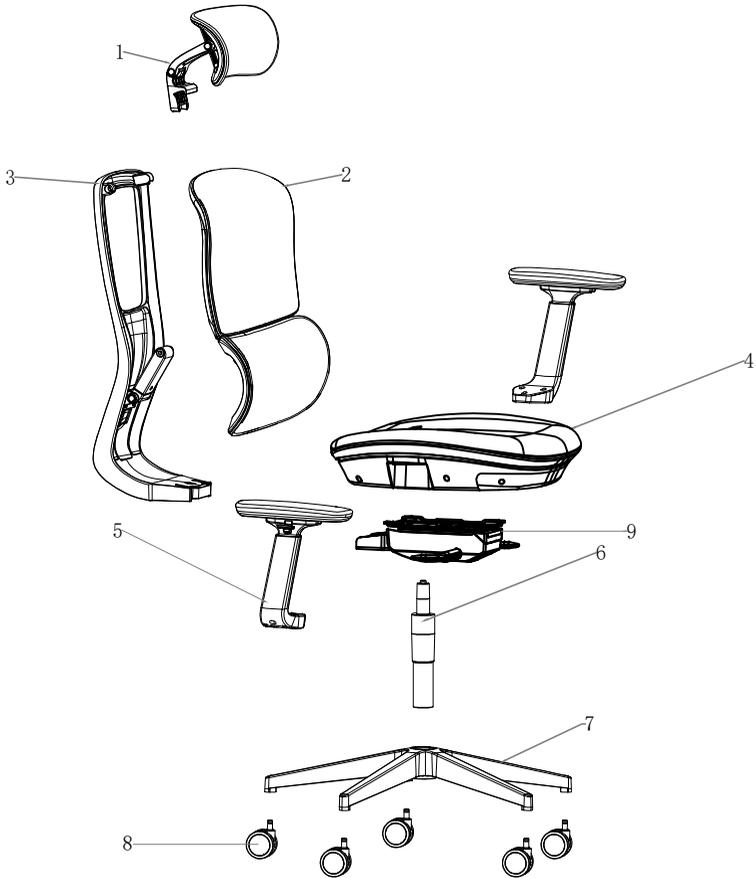


No.	Name	Pcs
1	headrest	1
2	backrest	1
3	back frame	1
4	seat	1
5	armrest	2
6	gas lift	1
7	five-star base	1
8	caster	5
9	mechanism	1

  Accessory list:
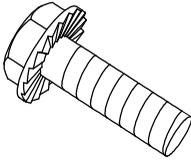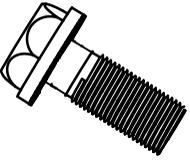
<p>A NOTE: Two of these screws pre-installed on the headrest when ordered (supplied in a separate box)</p> 			<p>B</p> 		
hex half-round head screws	M6*20	4	spring gasket	φ6	2
<p>C</p> 			<p>D</p> 		
gasket	φ6	2	cap		2
<p>E</p> 			<p>F</p> 		
internal/external hex screw	1/4*3/2	6	three-in-one internal/external hex screw	M8*20	3
<p>G</p> 			<p>H</p> 		
Allen key with round ball	4#	1	Allen key with round ball	5#	1

1. Use half-round head hex screw, spring gaskets and gaskets to assemble the backrest and back frame.


1

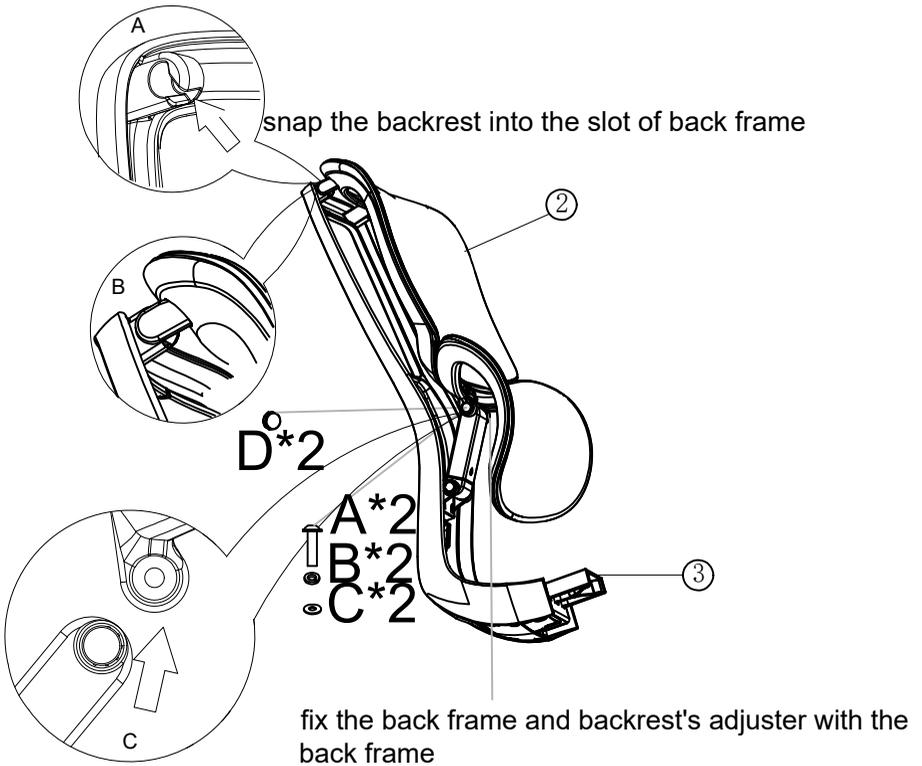

-  A M6*20 (X2)
-  B $\phi 6$ (X2)
-  C $\phi 6$ (X2)
-  D (X2)

1. Use internal/external hex screws to fix the seat and armrest.


2

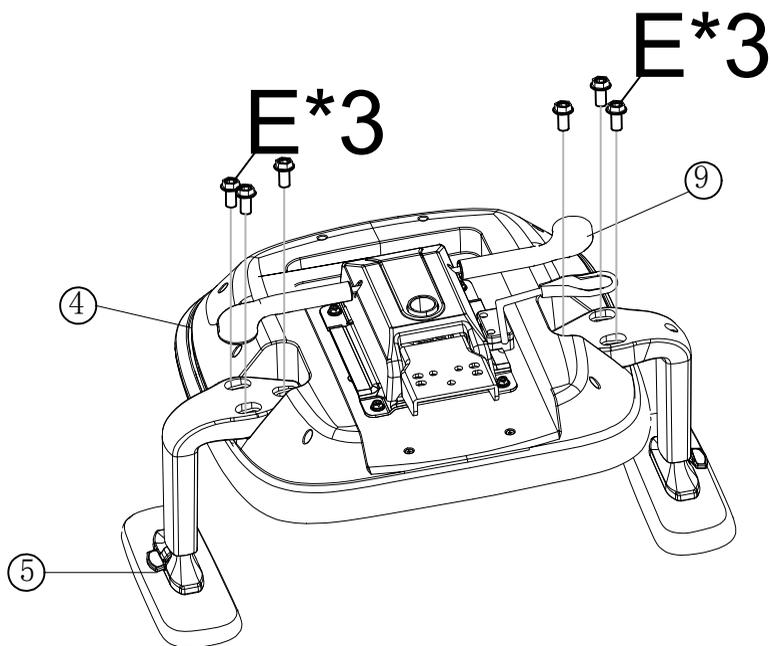

⊕ 1/4*3/2(X6)

1. Use three-in-one internal/external hex screws to fix the fully-assembled back with the seat.


3

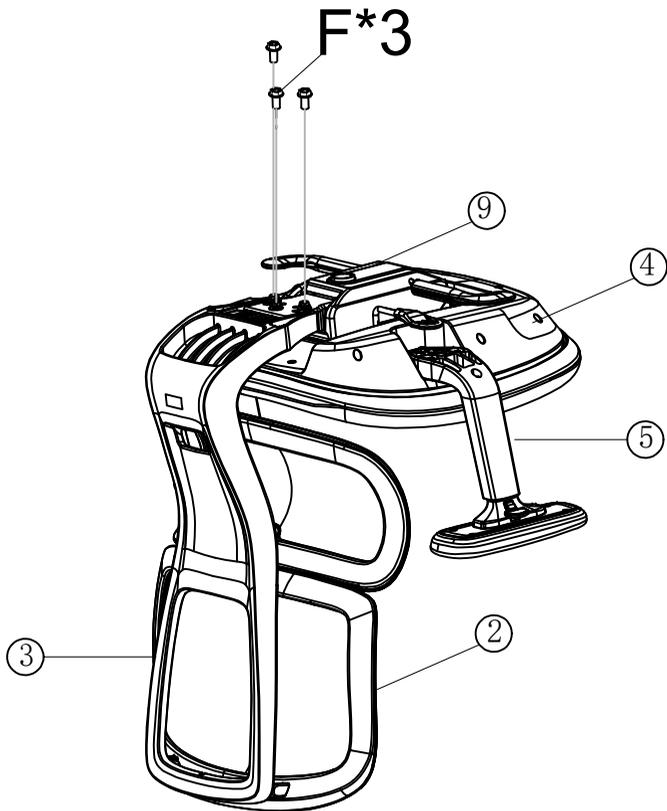

Ⓔ M8*20(X3)

1. Align the castors with the holes of five-star base. Put the gas lift into the round holes of five-star base.


4

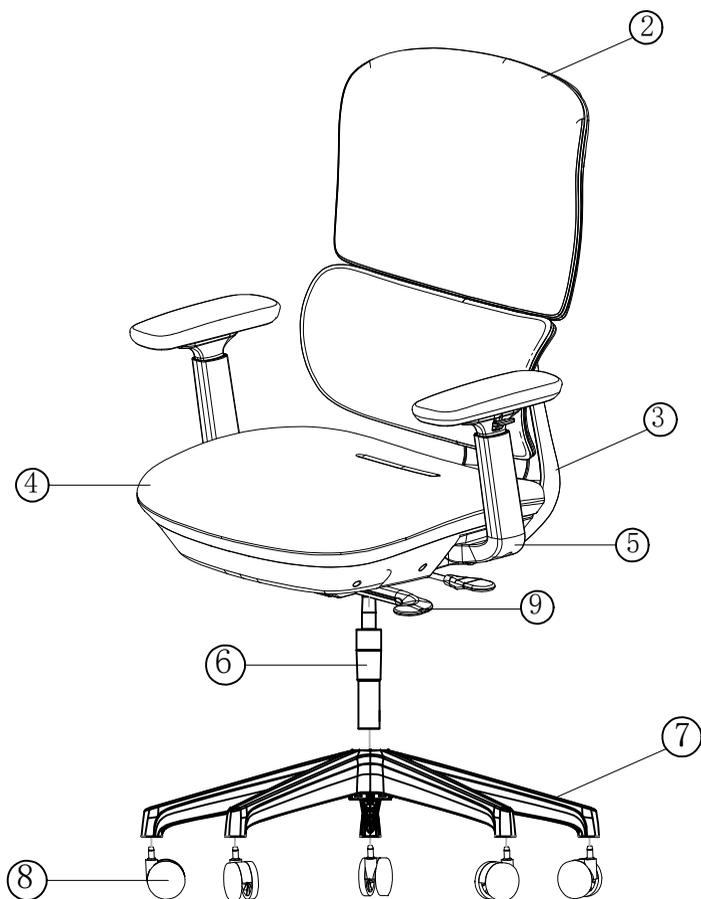

1. First loosen two screws pre installed on the headrest, and then use hex half-round-head screws to fix the headrest.

NOTE: Headrest is supplied in a separate box.

5

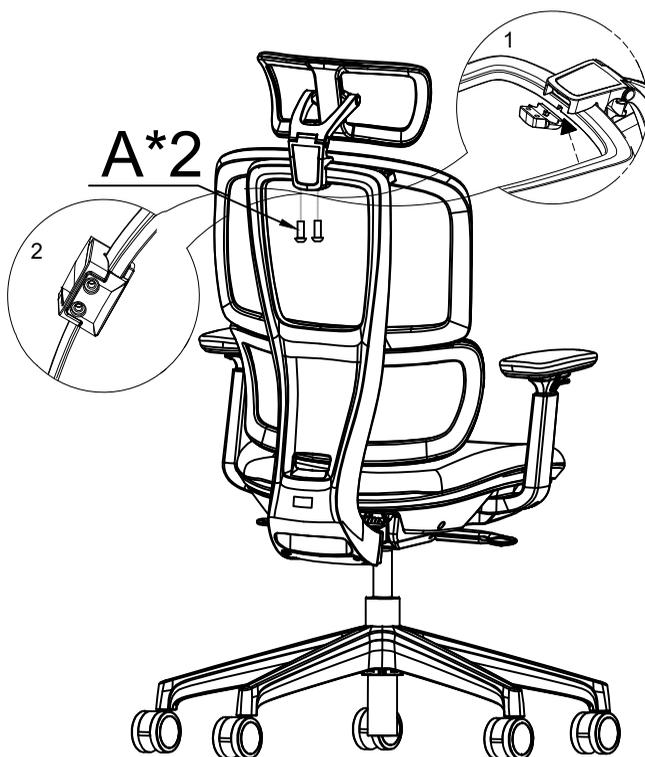

Ⓐ M6*20
(X2)

Done!




Function introduction.

1. Lumbar and headrest adjustment

The adjustable lumbar support can be moved backward and forward for increased comfort to better support your back.

Forward: grasp the two lower ends of back frame with your hands and lift it to appropriate position. Reset: grasp the two lower ends of back frame with your hands, lift it to the highest position, then pull it down to reset.

The headrest can be adjusted up and down and rotated.

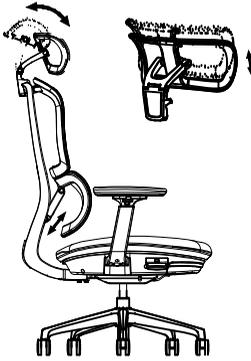

①

2. 4D adjustable arms

4D adjustable arms can be moved up and down, to the left and right, forward and backward, and rotated.




②

3. Seat height adjustment

Leave the seat and lift the lever to raise the seat to the appropriate height.

Without leaving the seat, lift the lever to lower the seat.

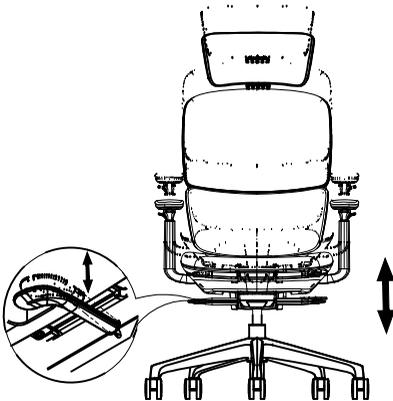


③

4. Tilt lock/seat depth adjustment

Lift the lever to adjust to an appropriate tilting degree, then push down the lever to lock.

The back is lockable in 4 positions.

Lift the lever to adjust to a comfortable seat depth, snap the lever into the slot, there are five levels of seat depths to choose.

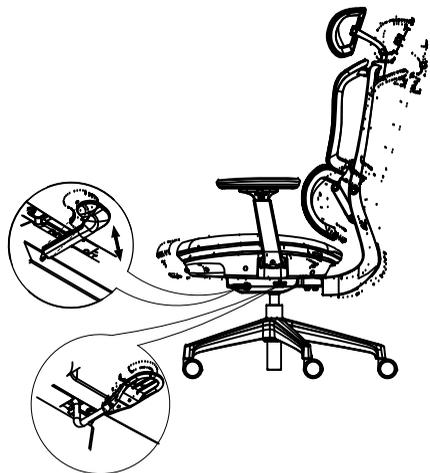

④