




Please retain your assembly instruction for future use.




This assembly requires two people.

Ensure your area is clear from any unnecessary packaging and you have enough space to lay out the parts before assembly.

Step 1

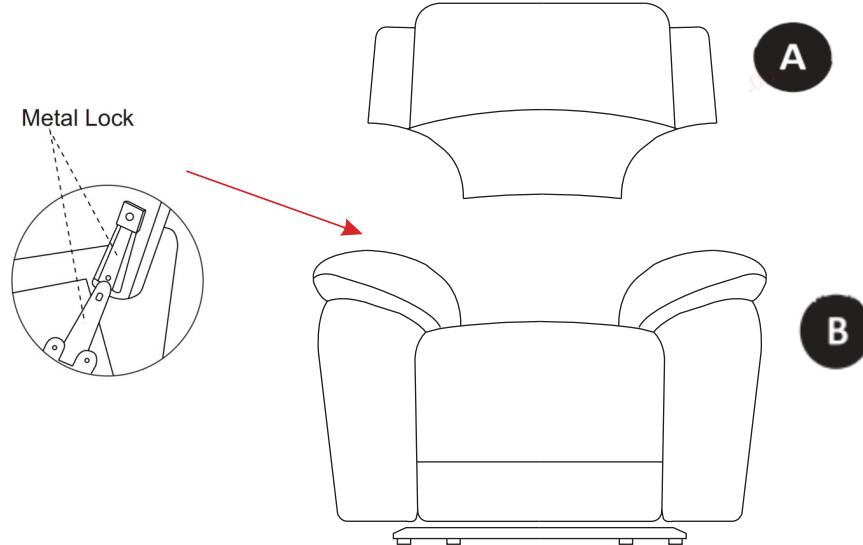

Step 2

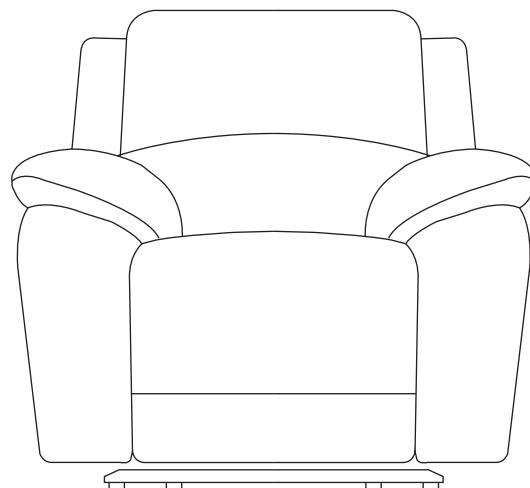

Ensure both pins are securely located into the slots.



CAUTION:

DO NOT ALLOW CHILDREN TO PLAY WITH MOTION FURNITURE OR OPERATE MOVING PARTS UNATTENDED. USERS SHOULD ALWAYS OPERATE WITH CARE AND FOR OTHERS AROUND THE FURNITURE

USB and/or USC

This item is fitted with a USB charging point:

This is designed for charging only small handheld electronic devices such as mobile phones and game controllers only.

USB ports are not suitable for charging large electronic devices. This is for your safety



Please retain your assembly instruction for future use.



This assembly requires two people.


Ensure your area is clear from any unnecessary packaging and you have enough space to lay out the parts before assembly.

Step 3




WARNING

Before connecting to power supply ensure all cables and transformers are free from moving parts.

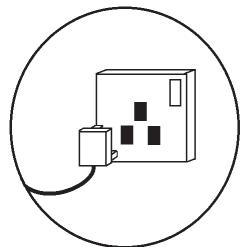

Operating Instructions

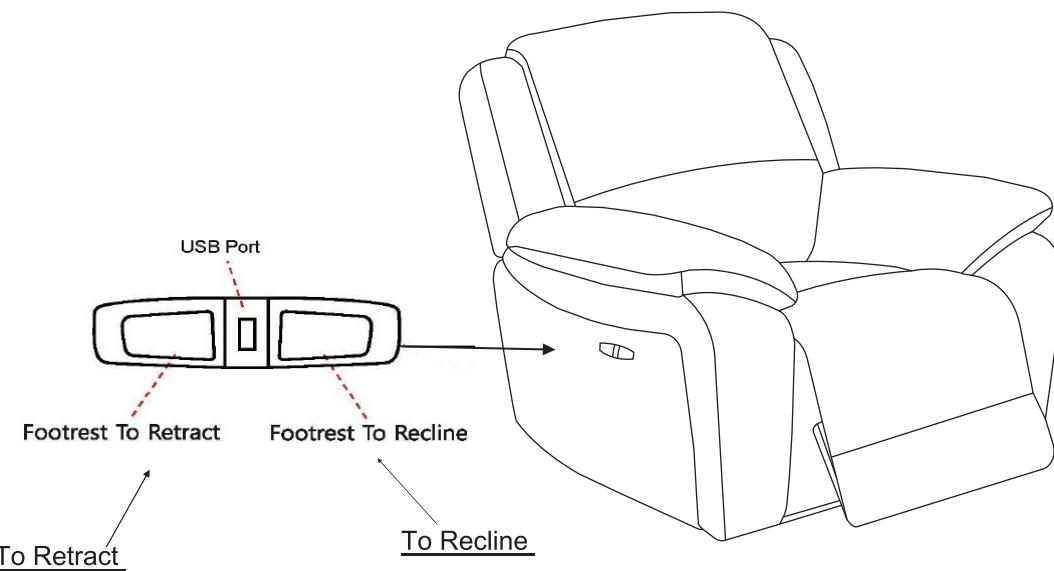

Press the rear button found on the side of the sofa until the footrest returns to the closed position.

Press the front button found on the side of the sofa. The footrest will extend out. Keep the button pressed until it reaches the desired position.



CAUTION:

DO NOT ALLOW CHILDREN TO PLAY WITH MOTION FURNITURE OR OPERATE MOVING PARTS UNATTENDED. USERS SHOULD ALWAYS OPERATE WITH CARE AND FOR OTHERS AROUND THE FURNITURE

USB and/or USC

This items is fitted a with USB charging point:

This is designed for charging only small handheld electronic devices such as mobile phones and game controllers only.

USB ports are not suitable for charging large electronic devices. This is for your safety