



Jackson 55178M

CORNER GROUP WITH ELECTRIC

CORNER GROUP WITH ELECTRIC Assembly

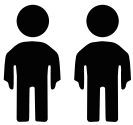


PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list.

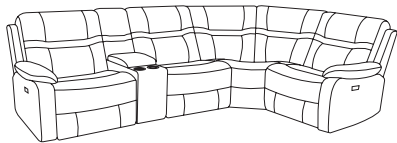

Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.
Please ensure that the packaging is disposed of in a safe and environmentally friendly way.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of chocking hazards.

VISUAL IDENTIFICATION & FITTINGS

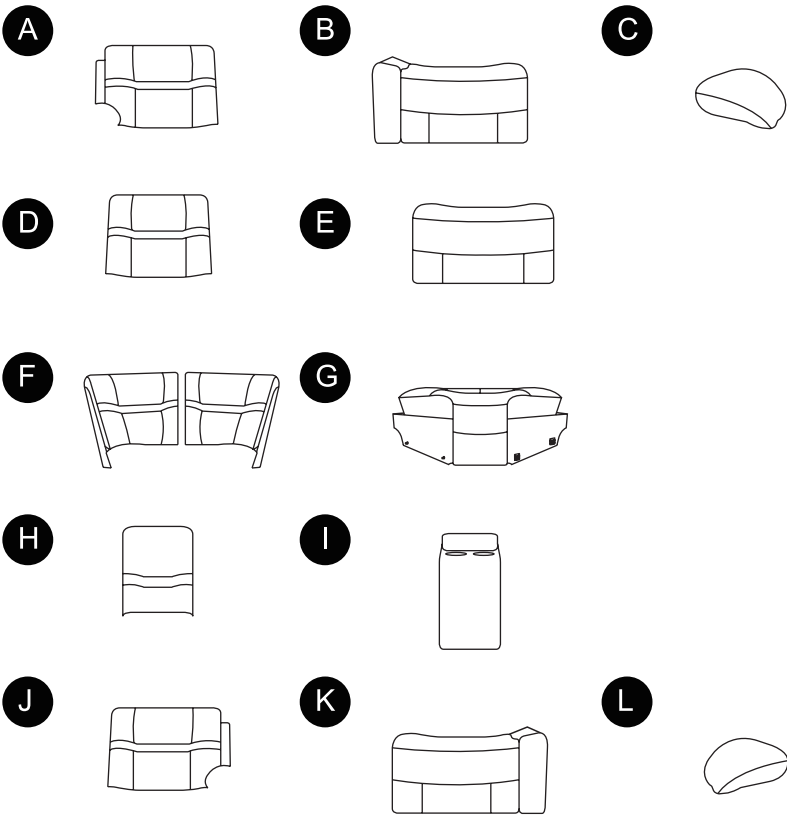

ITEM	DESCRIPTION	QTY
A	LEFT SEAT BACK	1
B	LEFT SEAT SECTION	1
C	LEFT WING	1
D	MIDDLE SEAT BACK	1
E	MIDDLE SEAT SECTION	1
F	CORNER SEAT BACK	1
G	CORNER SEAT SECTION	1
H	CONSOLE SEAT BACK	1
I	CONSOLE SEAT SECTION	1
J	RIGHT SEAT BACK	1
K	RIGHT SEAT SECTION	1
L	RIGHT WING	1

FITTINGS CHECKLIST

Code	Description	Qty	Code	Description	Qty	Code	Description	Qty
------	-------------	-----	------	-------------	-----	------	-------------	-----

THERE ARE NO FITTINGS FOR THIS ITEM

TOOLS REQUIRED

THERE ARE NO TOOLS REQUIRED FOR THIS ITEM

CARE & MAINTAINANCE

For Care & Maintenance information please refer to the attached leaflets.




Please retain your assembly instruction for future use.



This assembly requires two people.

Ensure your area is clear from any unnecessary packaging and you have enough space to lay out the parts before assembly.


Step 1

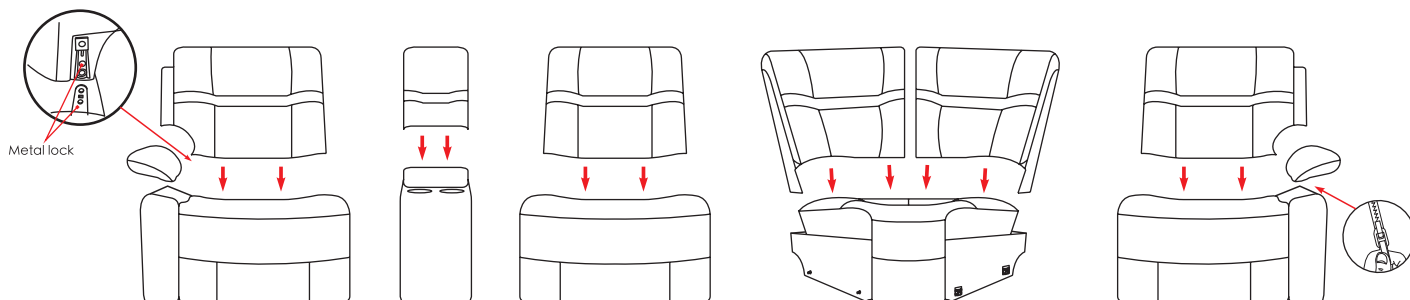

Move sleeves over uprights and click securely into place.

Once done secure the velcro to the frame.

Step 2

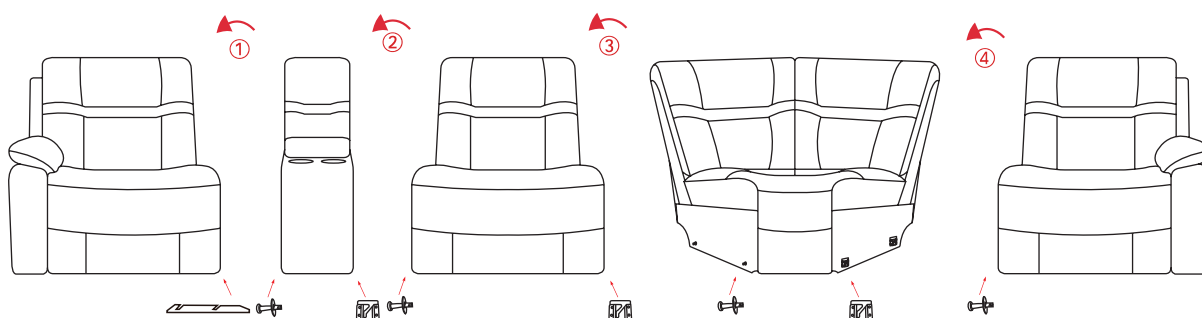



Ensure both pins are securely located into the slots.



CAUTION:



DO NOT ALLOW CHILDREN TO PLAY WITH MOTION FURNITURE OR OPERATE MOVING PARTS UNATTENDED. USERS SHOULD ALWAYS OPERATE WITH CARE AND FOR OTHERS AROUND THE FURNITURE

Step 3

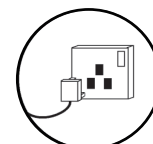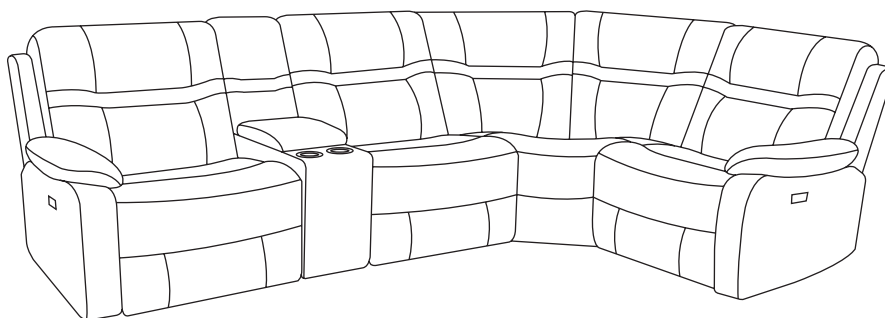**WARNING**

Before connecting to power supply ensure all cables and transformers are free from moving parts.

Operating Instructions

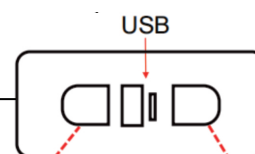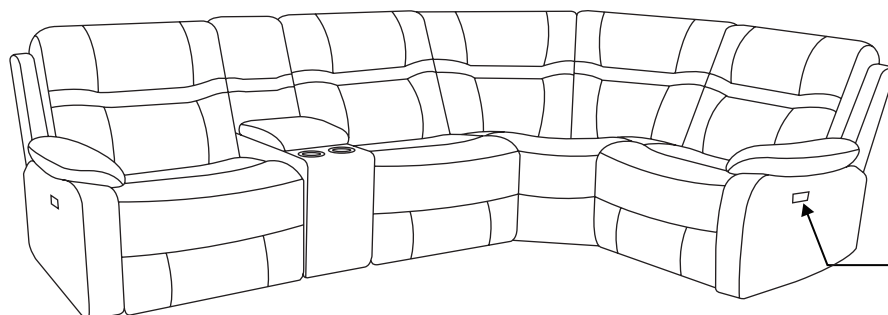

Footrest To Retract

Footrest To Recline

To Retract

Press the rear button found on the side of the sofa until the footrest returns to the closed position.

To Recline

Press the front button found on the side of the sofa. The footrest will extend out. Keep the button pressed until it reaches the desired position.

**CAUTION:**

DO NOT ALLOW CHILDREN TO PLAY WITH MOTION FURNITURE OR OPERATE MOVING PARTS UNATTENDED. USERS SHOULD ALWAYS OPERATE WITH CARE AND FOR OTHERS AROUND THE FURNITURE