
#### WIDE SIDEBOARD


Stock number: 6048-15

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

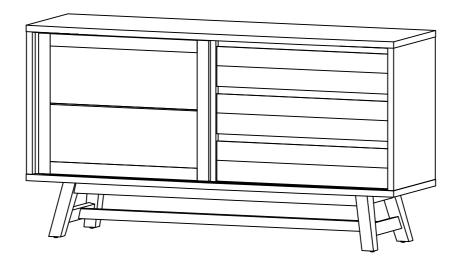

#### **Pre-assembly preparation**

 Please ensure instructions are read in full before attempting to assemble this product.



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product takes approximately 40 MINUTES to assemble with 2 PEOPLE.

All assembly should be performed on a flat, stable, clean and soft surface.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

**IMPORTANT:** Retain these instructions for future reference.

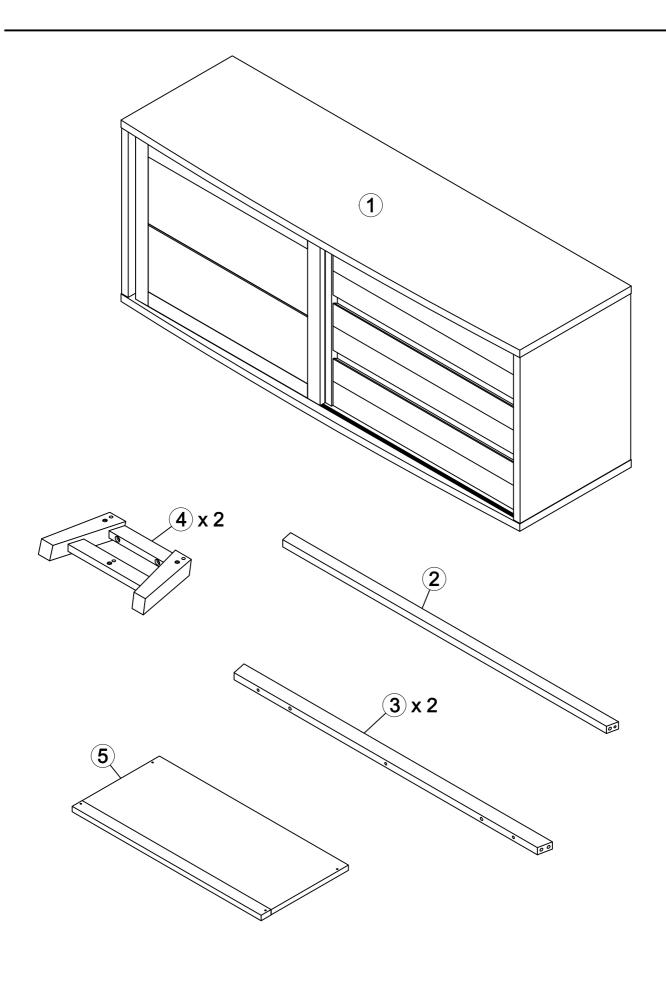


# Fittings and parts checklist

ltem	Description		Qty.	ltem	Description	Qty.
1	Top unit		x 1	4	Leg frame	x 2
2	Stretcher		x 1	5	Adjustable Shelf Frame	x 1
3	Apron		x 2			
Α	Steel dowel Ø7x72.5mm		x 2	Н	Housing Ø15x17mm	x 4
В	Grub screw M8x8mm		x 2	J	Steel dowel Ø10x67mm	x 4
С	Housing Ø15x13.5mm		x 2	K	Grub screw M10x10mm	x 4
D	Wooden dowel Ø10x30mm		x 14	L	Felt Ø20x6mm	x 4
E	Flat Washer Ø8.4x17x1.6mm		x 10	M	Wood shelf support	x 4
F	Lock washer Ø8.4x2mm		x 10	Z	Large allen key M5x30x110mm	x 1
G	Hex head bolt M8x60mm		x 10	Р	Small Allen Key M4x30x110mm	x 1


# Step

- (1)
- 1.1: Lay all parts on a flat, stable, clean and soft surface.
- 1.2: Insert 14x wooden dowels (D) into the pre-drilled holes on parts (2), (3), (4) as shown.
- 1.3 : Insert 2x steel dowels (A) onto the pre-drilled holes on legs frame (4) as shown. Use a pozi screwdriver to turn fittings (A) clockwise to fix
- 1.4: Insert 4x steel dowels (J) into legs frame (4) by screwing fittings (J) into the inset fittings that are located on legs frame (4) as shown. Ensure the direction of the holes on fittings (J) are facing correctly as per diagram.

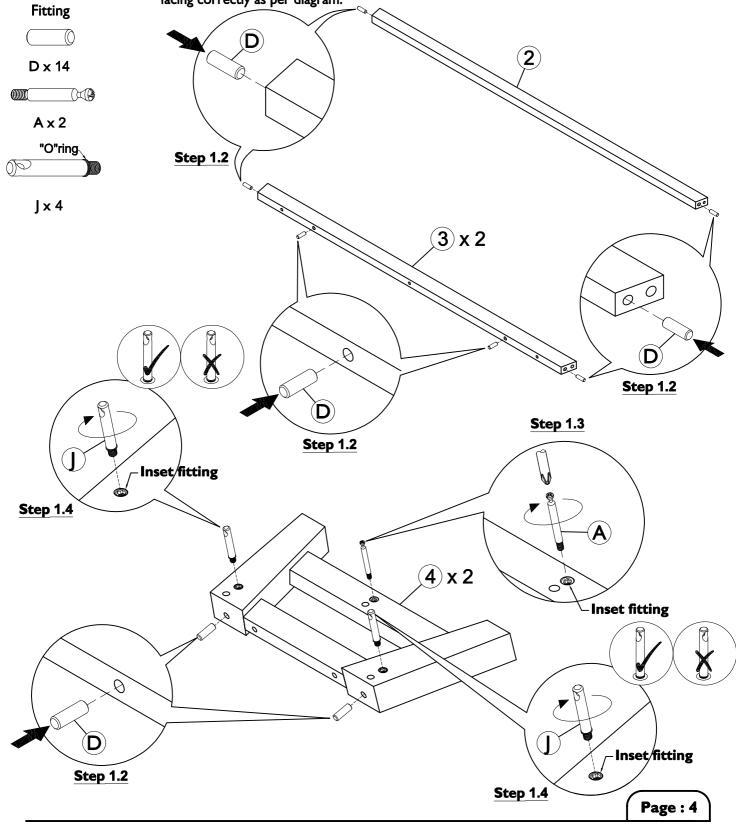


# Step (2)

- 2.1: Insert 2x housings (C) into the pre-drilled holes on stretcher (2) as shown.
- 2.2: Insert 4x housings (H) into the pre-drilled holes on aprons (3) as shown.
- 2.3: Attach legs frame (4) onto stretcher (2) and aprons (3) as shown. Ensure steel dowels (A), steel dowels (J) and wooden dowels (D) are aligned correctly with the holes of mating parts before attaching.

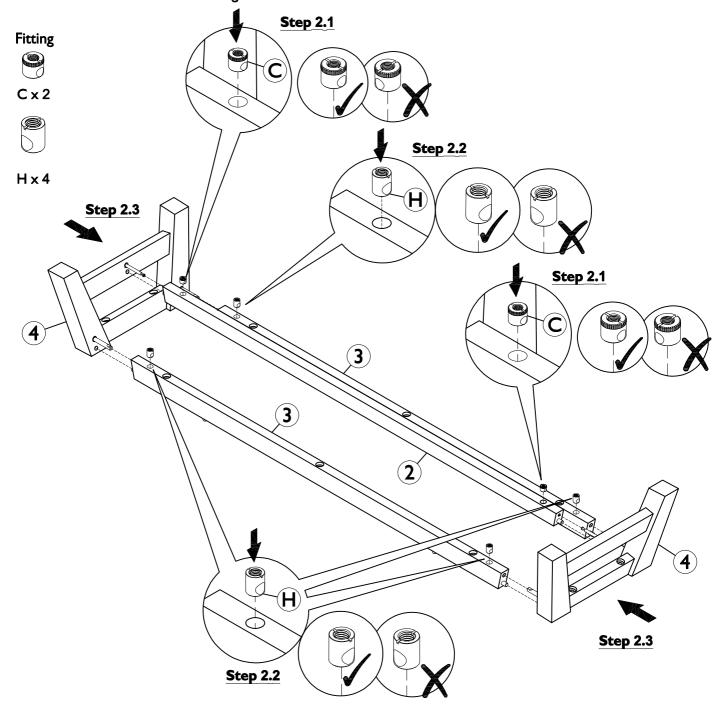

# Step (3)

- 3.1 : Secure parts (4) to parts (2) using 2x grub screws (B) as shown. Use a small allen key (P) to turn fittings (B). Do not fully tighten grub screw.
- 3.2 : Secure parts (4) to parts (3) using 4x grub screws (K) as shown. Use a large allen key (N) to turn fittings (K). Do not fully tighten grub screw.

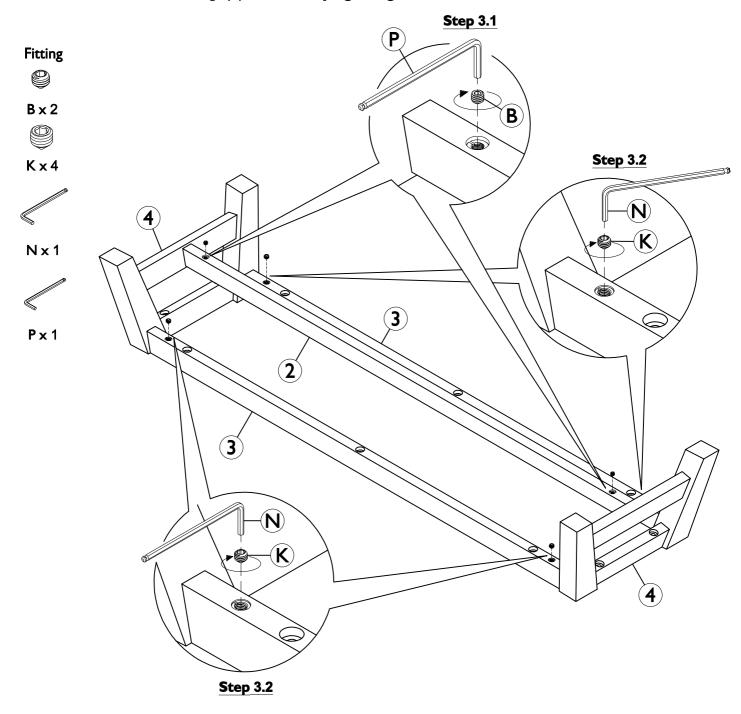


#### Step

**Fitting** 


- 4
- 4.1: Attach the structure assembled in **step 3** onto top unit (1) as shown. Ensure wooden dowels (D) and the pre-drilled holes on aprons (3) and leg frames (4) are aligned correctly to the holes on top unit (1) before attaching.
- 4.2 : Secure the structure assembled in **step 3** onto top unit (1) using 10x hex head bolts (G), 10x lock washers (F) and 10x flat washers (E) as shown. Use small allen key (P) to turn fittings (G) clockwise to fix.
- 4.3 : Using small allen key (P), large allen key (N) to re-tightening all grub screw (B),(K)

4.4: Remove the plastic from 4x felts (L) and stick felts (L) onto under legs frame as shown.

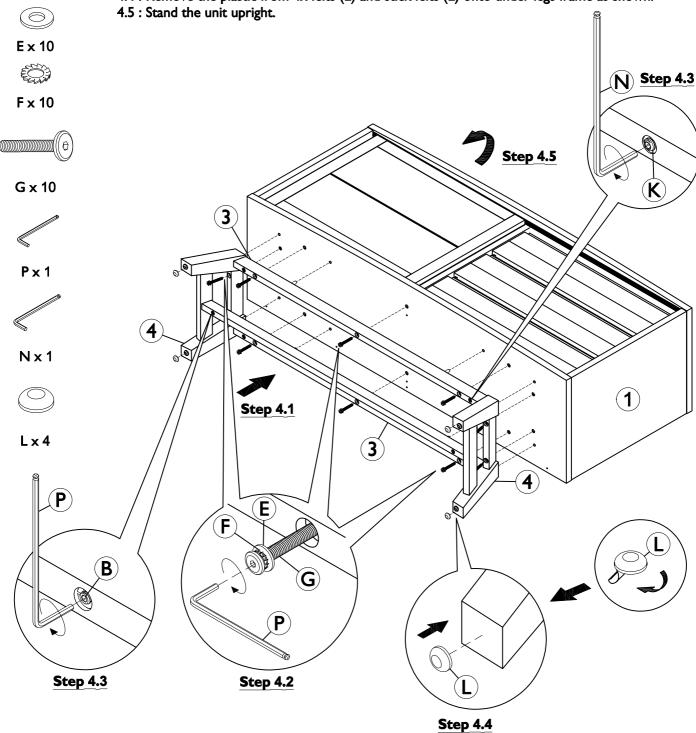



# Step

- **(5**
- 5.1 : Slide door from left to right as show.
- 5.2: Insert 4x wood shelf supports (M) into the pre-drilled holes in the top unit as shown.
- 5.3: Tilt adjustable shelf (5) to a suitable angle as show in picture so as to slide it in.
- 5.4: Slide adjustable shelf (5) into the unit. Ensure the holes on adjustable shelf (5) are facing down then place them onto the pins of wood shelf supports (M) as shown.

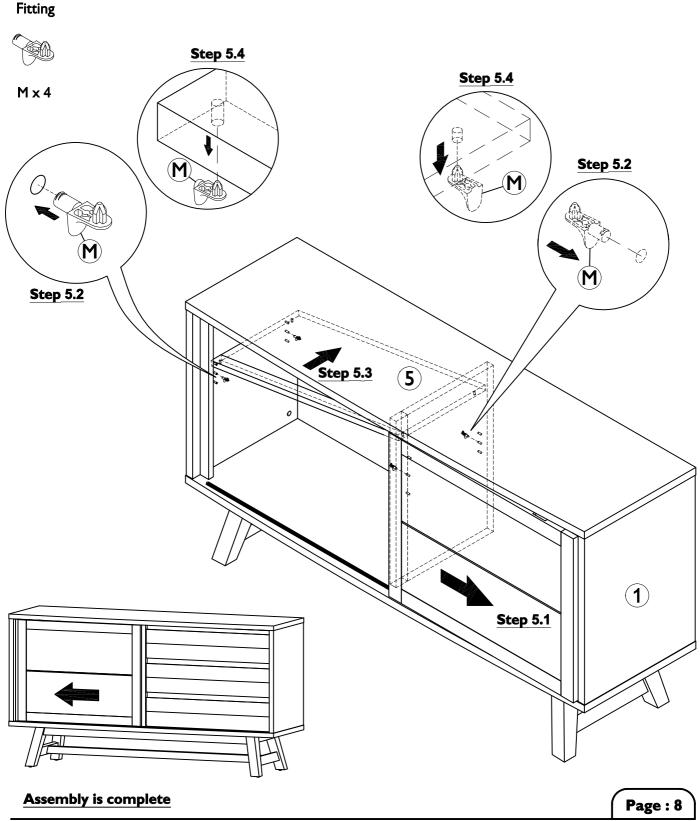


# TANDEM RUNNER ADJUSTMENT INSTRUCTION

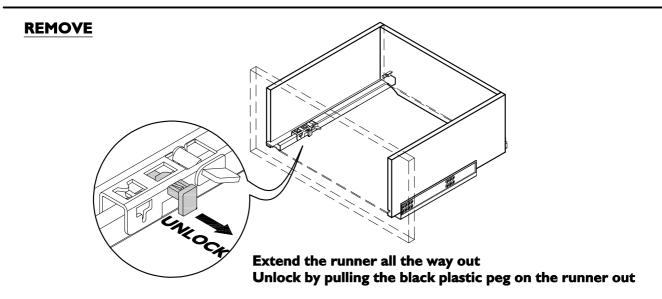

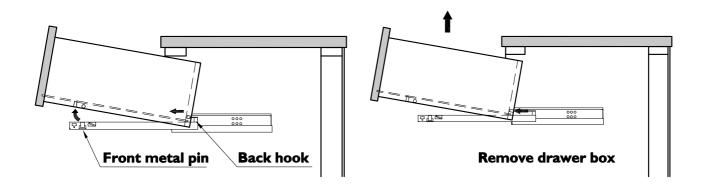



Hold both runners with both of your hands. Carefully lift the drawer front up from the front metal pin, then slide forward to remove from back hooks


#### **VERTICAL ADJUSTMENT (± 2.5mm)**

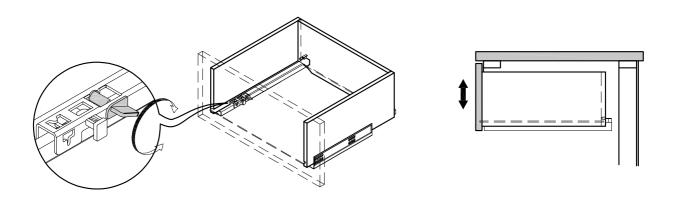

# TANDEM RUNNER ADJUSTMENT INSTRUCTION

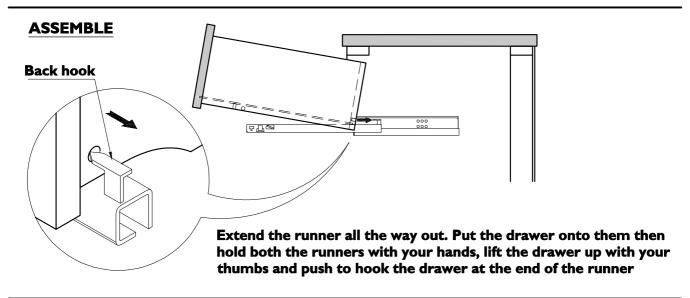

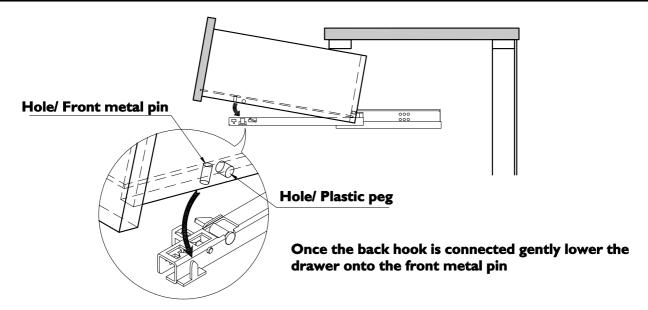

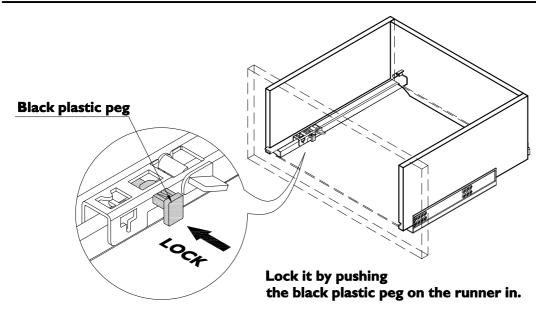

**Page: 10**