


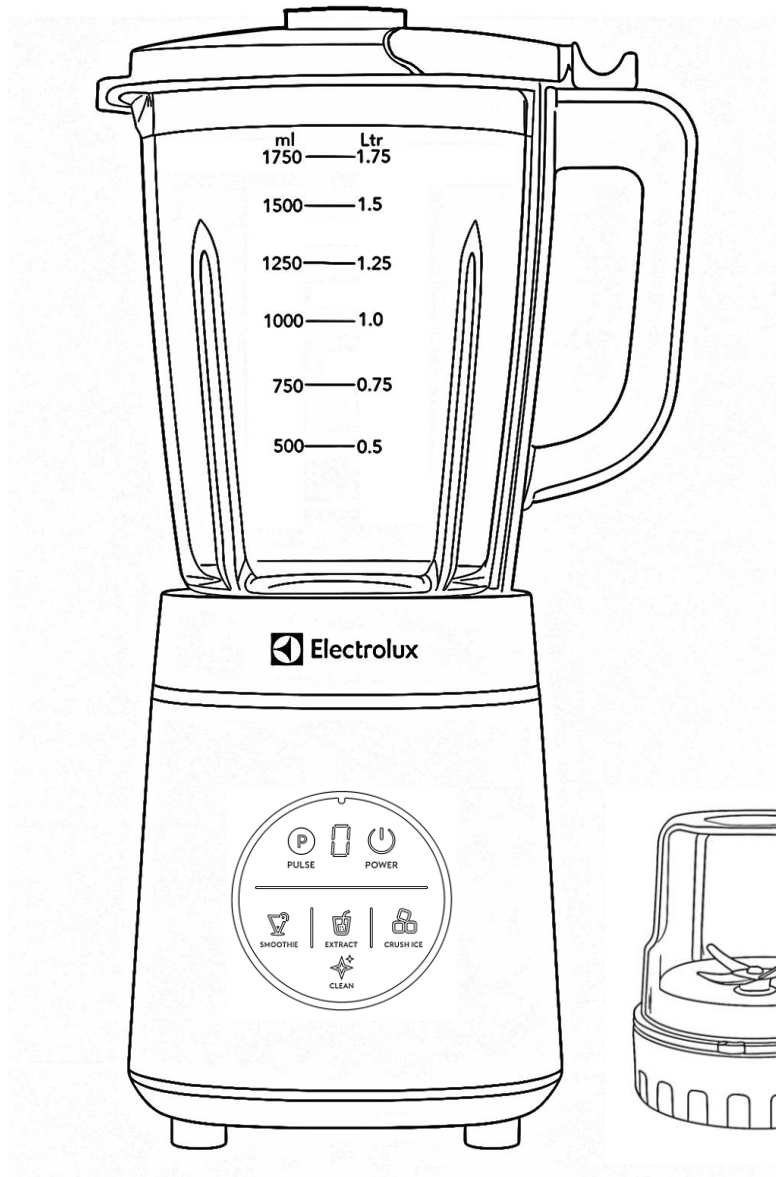

Electrolux



**1400W Digital Blender with Grinder
SDA2877**

Contents

Page No.

2	Contents
3	Reading and Storing the User Manual
3-5	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	What's in the Box
8	Description of Parts
8	Description of Control Panel
9	Before First Use of Your Jug Blender
9	Using Your Jug Blender
9-11	Blending Vegetables or Fruit
12	Smoothie Preset
13	Extract Preset
14	Crush Ice Preset
15	The Grinder
16-17	Cleaning and Maintenance
17	Mains Plug Information
17	Technical Specification
18	Recycling Information
19	Customer Support
20	Troubleshooting
21	FSC and Safety Marks
22-23	Recipe Ideas
24	Warranty

Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

Whilst using electrical appliances, basic safety precautions should always be followed.

- **Read and familiarise yourself with all operating instructions before using this Jug Blender.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Important Safety Instructions for Proper Use

- Children of less than 3 years should be kept away unless continuously supervised.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- This appliance is intended for household use only and should not be used for industrial purposes.




Important Safety Instructions for Proper Use

- **DO NOT** use any accessories or attachments with this appliance other than those supplied.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** operate this blender without the jug lid fitted.
- Before cleaning, changing accessories or approaching parts that move in use, disconnect the appliance from the mains supply and allow to cool.
- To clean the inside of the jug, rinse to remove any large food particles. Wash in warm soapy water and rinse.
- **CAUTION: the blades inside the jug are not removable and are very sharp; extreme caution should be taken whilst cleaning the inside of the jug.**

Explanation of Symbols


The following warning symbols or words are used in this instruction manual:

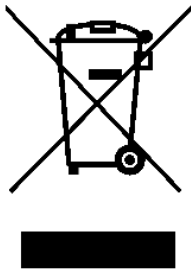	Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.
	Products labelled with this symbol conform to applicable provisions of the European Economic Area.
	You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.
	This symbol indicates that the supply uses an alternating current mains supply.
WARNING!	This designates a hazard with moderate risk, which may result in severe injury if not adhered to.
	This Class II symbol indicates that this product is double insulation and therefore does not require an earth connection.


What's in the Box

- Motor Unit
- Glass Jug
- Jug Lid
- Grinder Attachment
- User Manual (This Booklet)


Description of Parts

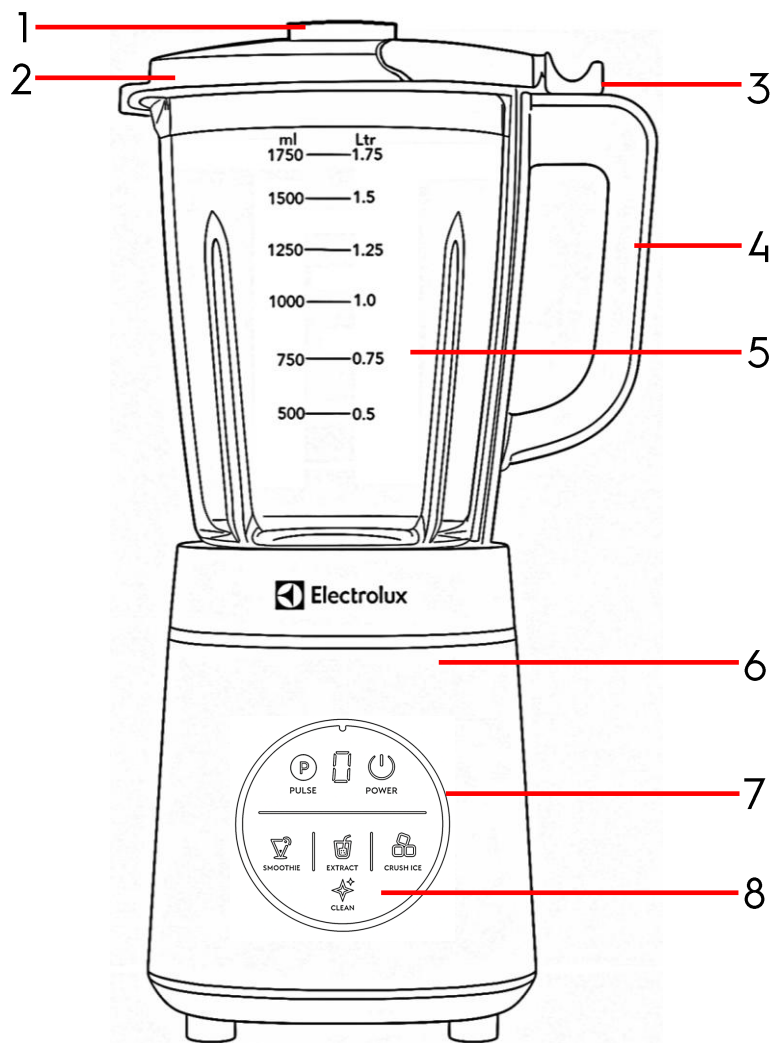

1. Filling Cup (and Chute)
2. Lid
3. Safety Catch
4. Handle
5. Glass Jug
6. Motor Unit
7. Speed Control
8. Control Panel
9. Grinder Attachment

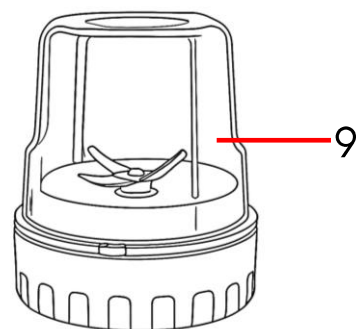

Description of Control Panel

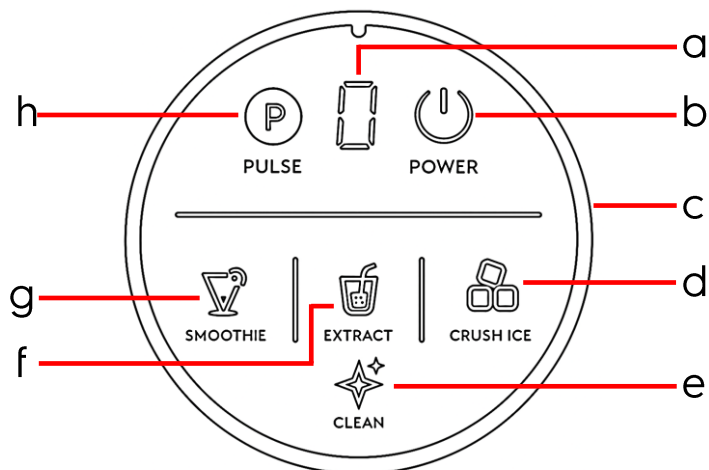

- a. Speed Display
- b. Power Button
- c. Speed Control
- d. Crush Ice Preset
- e. Clean Preset
- f. Extract Preset
- g. Smoothie Preset
- h. Pulse Button



Before First Use of Your Jug Blender

Remove all packaging materials and discard responsibly.


Before using the Jug Blender for the first time, wash the Glass Jug, the Lid and the Grinder in warm soapy water and dry thoroughly afterwards. Do not immerse the Jug Blender or its cord in water or any other liquids.

WARNING! – the blades in this blender are extremely sharp and care must be taken whilst cleaning.

DO NOT under any circumstances use this blender to process hot foods or liquids.

Using Your Jug Blender

1. Ensure that the Jug Blender is disconnected from the mains supply.

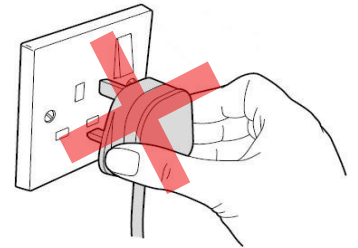


Blending Vegetables or Fruit

2. To prepare for blending, cut the food into cubes approximately 15mm square. Pull the **Safety Catch** (3) back and remove the **Lid** (2) and place the cubes into the **Glass Jug** (5).
3. Add water to the jug using a ratio of Vegetables/Fruit to water of 2:3. Ensure the level does not go over the maximum level on the Glass Jug.
4. Place the **Lid** (2) onto the **Glass Jug** (5) ensuring the **Safety Catch** (3) engages.
Ensure that the **Filling Cup** (1) is fitted to the **Lid** (2) before blending.

Using Your Jug Blender


5. Place the **Motor Unit** (6) onto a solid, level, non-flammable surface.

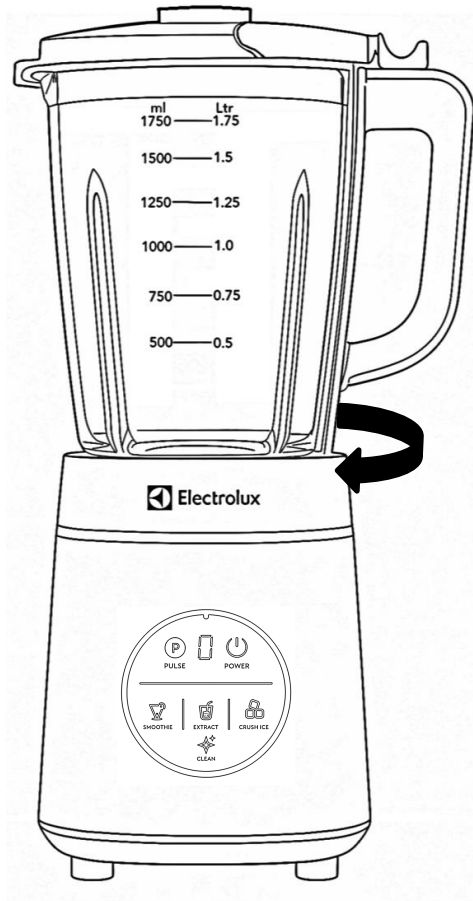

6. Place the **Glass Jug** (5) onto the **Motor Unit** (6).


7. Hold the **Handle** (4) and rotate the **Glass Jug** (5) towards the **Control Panel** (8) to lock the jug in place.

8. Insert the mains plug into the nearest socket. The **Power Button** (b) will flash to show the unit is connected to the mains and in standby mode.

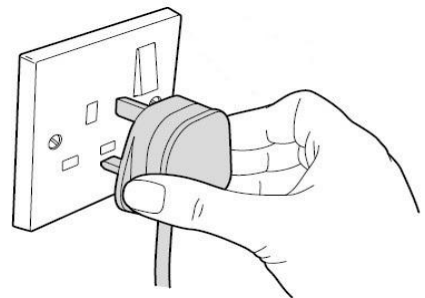

Using Your Jug Blender

9. Press the **Power Button** (b) to power up the blender. The **Pulse Button** and the **Smoothie, Extract, Crush Ice, Clean Presets** on the **Control Panel** (8) will flash. **NB** if the blender is left idle for 30 seconds or more, the unit will revert to standby mode i.e. just the **Power Button** (b) will be flashing.
10. Briefly press the **Pulse Button** (h) several times for pre-blending.

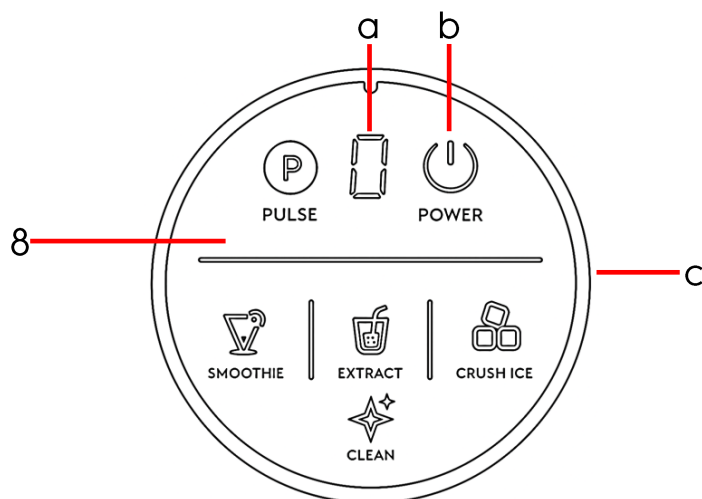


11. Rotate the **Speed Control** (c) on the outside of the **Control Panel** (i) for speeds from 1 to 9. The speed selected will be shown by the **Speed Display** (a)
12. Ideally, start blending on speed 1 and increase to speed 9 until the desired consistency is reached. For ingredients that require short burst of power, use the pulse function.
13. If you wish to add further ingredients, switch off the blender by returning the speed to 0, twist off the **Filling Cup** (1) and add the ingredients through the chute, then refit the **Filling Cup** (1) by twisting it back on and continue blending.
14. Once the ingredients are blended, return the speed to 0 and remove the mains plug.
15. To remove the **Glass Jug** (5), hold the **Motor Unit** (6), grasp the **Handle** (4) push the jug back and lift upwards. Remove the **Lid** (2) and pour the blended contents out.

Using Your Jug Blender


Smoothie Preset

Use this preset to automatically make smoothies.

1. Ensure that the Jug Blender is disconnected from the mains supply.

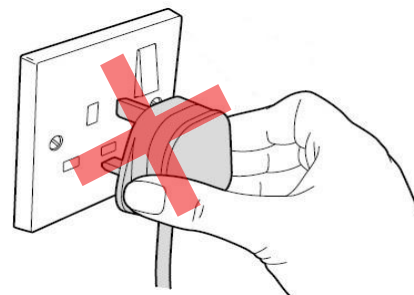

2. Remove the **Lid** (2) and place the Smoothie ingredients in the **Glass Jug** (5). Replace the **Lid** (2) ensuring the **Safety Catch** (3) engages.

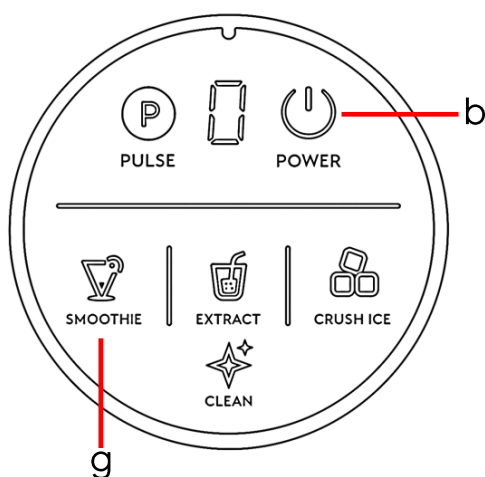

3. Insert the mains plug into the nearest socket and press the **Power Button** (b) to power up the blender. The **Pulse Button** and the **Smoothie, Extract, Crush Ice and Clean Presets** will flash.

4. Press the **Smoothie Preset** (g) and the blender will automatically start to create the smoothie.
5. After 1 minute the smoothie will be made, the blender will stop and the **Pulse Button** and the **Smoothie, Extract, Crush Ice and Clean Presets** will flash.
6. Remove the mains plug from the socket.
7. To remove the **Glass Jug** (5), hold the **Motor Unit** (6), grasp the **Handle** (4) push the jug back and lift upwards. Remove the **Lid** (2) and pour the smoothie out.


NB the **Speed Control** (c) will not operate whilst using the Smoothie Preset.

Using Your Jug Blender


Extract Preset

Use this preset to break down vegetables, fruits, nuts, seeds, etc. so that locked in nutrients and vitamins can be released.

1. Ensure that the Jug Blender is disconnected from the mains supply.

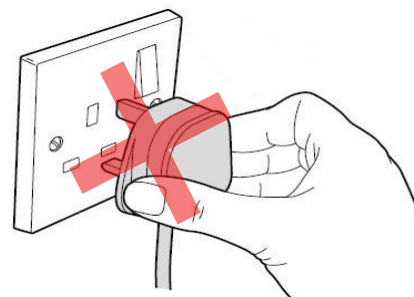

2. Remove the **Lid** (1) and place the ingredients in the **Glass Jug** (5). Replace the **Lid** (1) ensuring the **Safety Catch** (3) engages.

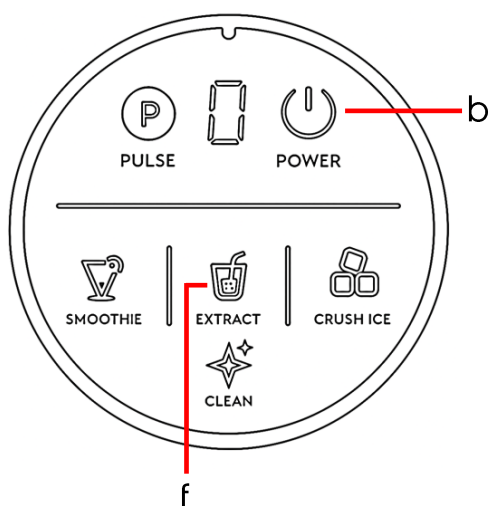

3. Insert the mains plug into the nearest socket and press the **Power Button** (b) to power up the blender. The **Pulse Button** and the **Smoothie, Extract, Crush Ice and Clean Presets** will flash.

4. Press the **Extract Preset** (f) and the blender will automatically start the extract process.
5. After 1 minute the extract will be complete, the blender will stop and the **Pulse Button** and the **Smoothie, Extract, Crush Ice and Clean Presets** will flash.
6. Remove the mains plug from the socket.
7. To remove the **Glass Jug** (5), hold the **Motor Unit** (6), grasp the **Handle** (4) push the jug back and lift upwards. Remove the **Lid** (2) and pour out the extracted vegetables, fruit, nuts, seeds, etc.


NB the **Speed Control** (c) will not operate whilst using the Extract Preset.

Using Your Jug Blender


Crush Ice Preset

Use this preset to automatically crush ice cubes.

1. Ensure that the Jug Blender is disconnected from the mains supply.

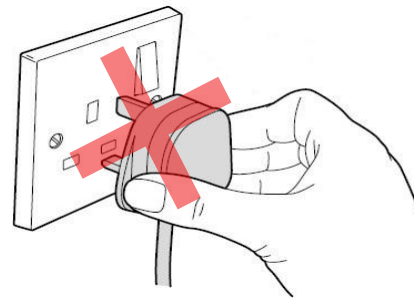

2. Remove the **Lid** (2) and place the ice cubes in the **Glass Jug** (5). Replace the **Lid** (2) ensuring the **Safety Catch** (3) engages.

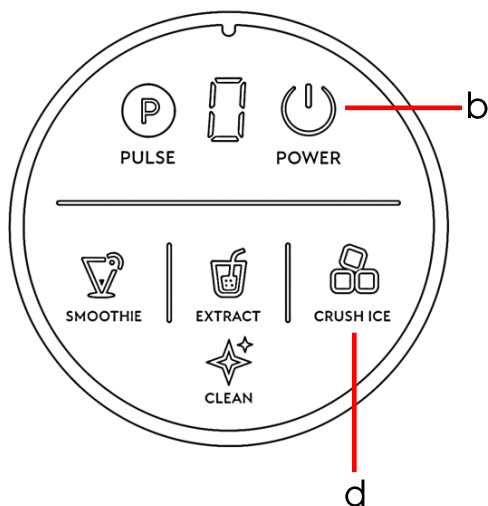

3. Insert the mains plug into the nearest socket and press the **Power Button** (b) to power up the blender. The **Pulse Button** and the **Smoothie, Extract, Crush Ice and Clean Presets** will flash.



4. Press the **Crush Ice Preset** (d) and the blender will automatically start to crush the ice.
5. After 1 minute the ice crush will be complete, the blender will stop and the **Pulse Button** and the **Smoothie, Extract, Crush Ice and Clean Presets** will flash.
6. Remove the mains plug from the socket.
7. To remove the **Glass Jug** (5), hold the **Motor Unit** (6), grasp the **Handle** (4) push the jug back and lift upwards. Remove the **Lid** (2) and pour out the crushed ice.

NB the **Speed Control** (c) will not operate whilst using the Ice Crush Preset.

Using Your Jug Blender

The Grinder



1. Ensure that the Jug Blender is disconnected from the mains supply.

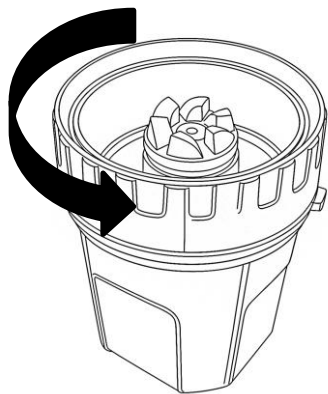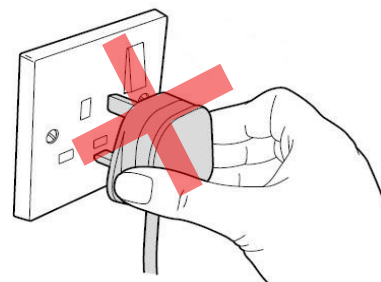

2. Remove the **Glass Jug** (5).
3. Turn the **Grinder** (9) upside down and unscrew the base in an anticlockwise direction.
4. Add the Coffee beans, etc. to the cup, up to the 'MAX' mark.
5. Screw the base on in a clockwise direction.

6. Attach the **Grinder** (9) to the **Motor Unit** (6) as follows:

- j. Push the **Grinder** (9) down onto the top of the **Motor Unit** (6).
- k. Twist the Grinder (9) to the left to lock it in place.

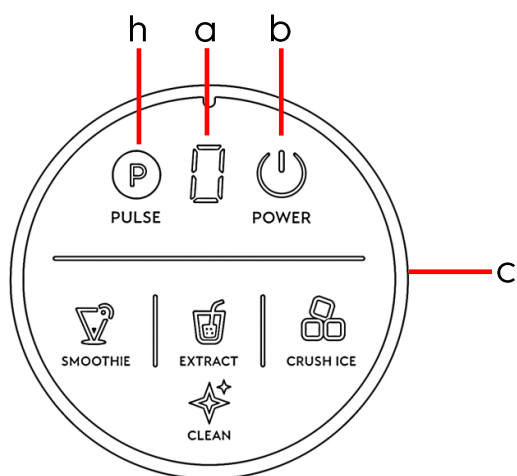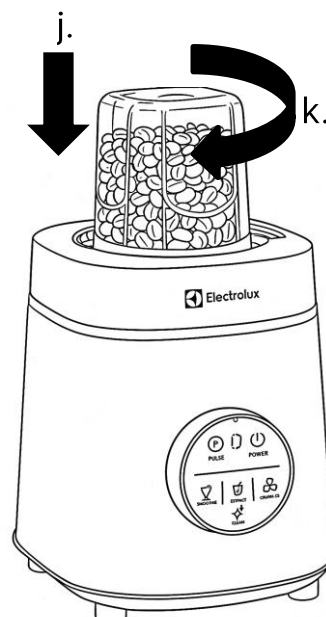


7. Insert the mains plug into the nearest socket
8. Briefly press the **Pulse Button** (h) several times for pre-blending.
9. Rotate the **Speed Control** (c) on the outside of the **Control Panel** (8) for speeds from 1 to 9. The speed selected will be shown by the **Speed Display** (a). Continue until the grinding is sufficient.

Care & Maintenance of Your Blender


Clean Preset

Use this preset to automatically clean the inside of the **Glass Jug** (5).

1. Ensure that the Jug Blender is disconnected from the mains supply.

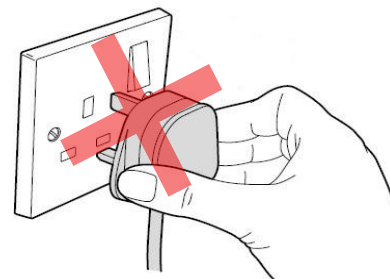

2. Remove the **Lid** (2) and pour in 500ml of warm water (40°C max). Replace the **Lid** (2) ensuring the **Safety Catch** (3) engages. **DO NOT** use boiling water.

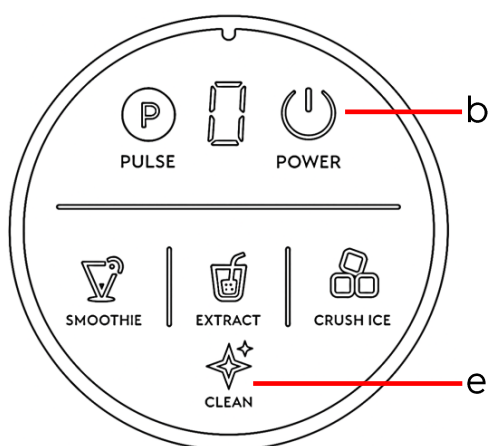

3. Insert the mains plug into the nearest socket and press the **Power Button** (b) to power up the blender. The **Pulse Button** and the **Smoothie, Extract, Crush Ice and Clean Presets** will flash.

4. Press the **Clean Preset** (e) and the blender will automatically start to clean the glass jug.
5. After 1 minute the cleaning will be complete, the blender will stop and the **Pulse Button** and the **Smoothie, Extract, Crush Ice and Clean Presets** will flash.
6. Remove the mains plug from the socket.
7. To remove the **Glass Jug** (5), hold the **Motor Unit** (6), grasp the **Handle** (4) push the jug back and lift upwards. Remove the **Lid** (2) and pour out the dirty water.
8. Repeat the above steps if more cleaning is required.

NB Extreme care must be taken whilst handling the **Glass Jug** (5) as the blades are very sharp.

Care & Maintenance of Your Blender

- Always disconnect the Blender from the mains power supply before cleaning.
- Clean the Lid by wiping with a clean damp cloth and dry thoroughly.
- Clean outside of the Blender with a clean damp cloth.
- Use a small brush to remove particles lodged around the blades. Care must be taken whilst cleaning the blades as they are very sharp.
- Do not submerge either the Motor Housing or the Glass Jug in water or any other liquids.
- Never clean any part of the Blender with harsh chemicals or abrasive cleaners.

Mains Plug Information

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug **-DISCONNECT FROM THE MAINS-** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical Specification


Model Number	SDA2877
Rated Voltage	220-240V~ 50-60Hz
Rated Power	1400W
Protection Class	II
Power consumption of equipment in Standby Mode shall not exceed 0,50W	0.23W
This Equipment complies with Annex III of the Commission Regulation (EU) 2023/826	

Recycling Information

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

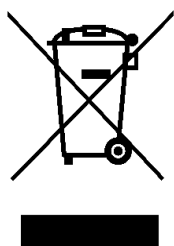

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie to find your nearest recycling point.



Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email:


help@electroluxsmalldomesticappliance.co.uk

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Electrolux parts or accessories be used with this appliance.


Troubleshooting

Problem	Possible Cause	Possible Solution
Won't Switch on	Not plugged in properly	Ensure the power cord is securely inserted into the wall socket.
	Faulty wall socket	Try plugging the blender into a different socket
	Lid not correctly seated onto the glass jug	Ensure the lid is properly aligned and the lid socket and plug are properly connected
	Blown Fuse or damaged cable	Inspect the cord for damage. Replace if frayed or melted. Check home fuse box or circuit breaker
Blend is not as required (ingredients are too large)	Vegetables/Fruit not cut small enough.	Pre-chop large vegetables into 15mm cubed pieces.
Blend is not as fine as required	Too many ingredients or overfilled	Do not exceed the maximum capacity of the glass jug. Remove some ingredients and try again.
	blending long enough/too lower speed	Increase blending time/increase blending speed.
Loud or unusual noise	Foreign object inside jug	Unplug and check the inside of the jug for utensils, bones, or hard debris.
	Loose blades or motor issues	If the sound is grinding or screeching, stop use immediately.

**UK
CA**

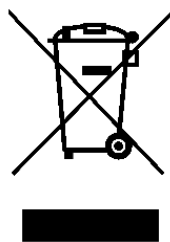

Insert FSC Logo here

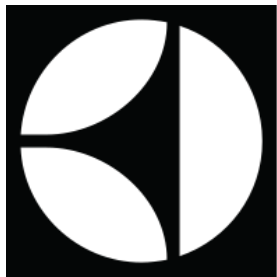

Electrolux

WARRANTY

Thank you for purchasing your Electrolux Product.

As part of our commitment to quality, we are offering you an extra 4 years warranty in addition to your 1 year guarantee

Your Electrolux product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 4-year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

help@electroluxsmalldomesticappliance.co.uk

or

Contact Us: www.electroluxfloorcare-sda.co.uk

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Produced and imported under licence by

Eurosonic Group Limited

Brightgate House

1 Brightgate Way

Manchester M32 0TB UK

EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006

www.esgltd.com

ELECTROLUX is a pending or registered trademark used under

license from AB Electrolux (publ)

Made in China