


DREO

Tower Heater 718

USER MANUAL

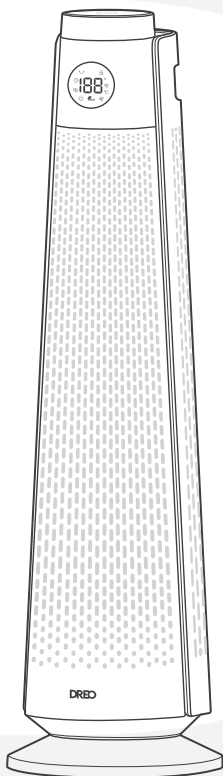

The device is only suitable for well insulated spaces or occasional use.

//

Thanks for Choosing **DREO!**

Your support means the world to us.
We hope you enjoy our product as much as
we did creating it.

CONTENTS

01

KNOWING YOUR
APPLIANCE

1

02

USING YOUR
APPLIANCE

2-6

03

CLEANING AND
MAINTENANCE

7-8

04


TROUBLESHOOTING

9-12

KNOWING YOUR APPLIANCE

01

Package Contents

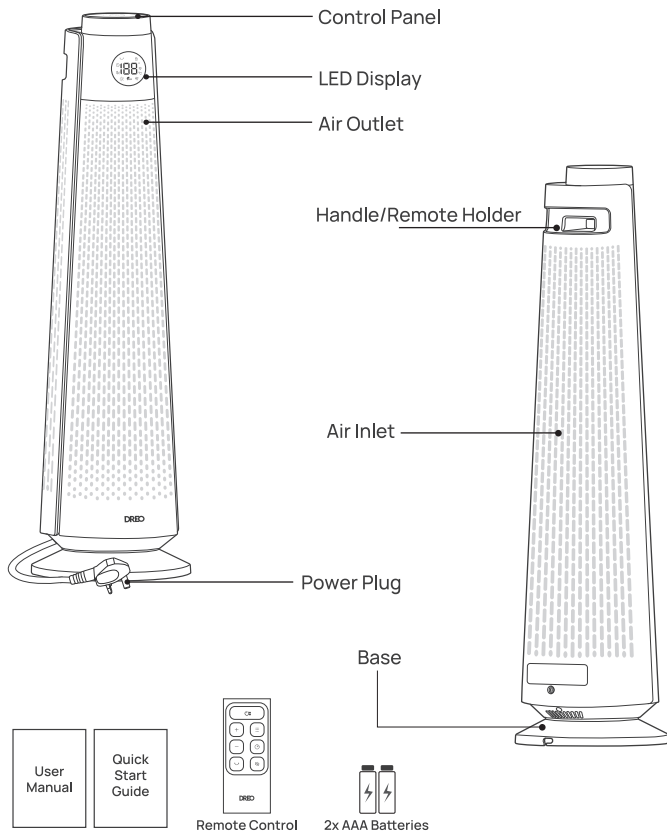

Control Panel



Power Button

Touch to turn the heater on or off.

Note:

When the heater is plugged into the electric outlet, the power indicator  will light in red.

Once turned off, a 30-second countdown will show up on the display as the fan will continue to run for 30 seconds to blow out the remaining heat.



Mode Button

Touch to switch between:  → ECO → .



Power Heat with five heating levels: H1 (800W), H2 (1000W), H3 (1200W), H4 (1600W), H5 (2000W)

ECO The heater will automatically select its optimal heating power, ranging from 800W to 2000W, depending on the difference between the set temperature (5-35°C) and ambient temperature.



Fan Only mode with three speed levels: F1, F2, F3.



Oscillation Button

Touch to turn on or off oscillation (30°/60°/90°/120°).



Timer Button

- When the heater is on, touch to set a timer (0-12h). After the timer ends, the heater will turn off automatically.
- To cancel, set the timer to 0 hours.



Heat Level/Temperature Buttons

- In Power Heat mode, touch  or  to adjust the heating level.
- In ECO mode, touch  or  to adjust the set temperature.
- In Fan Only mode, touch  or  to adjust the fan speed level.
- When setting a timer, touch  or  to adjust the duration of timer.
- When changing oscillation settings, touch  or  to adjust the oscillation angle.

Note:

In ECO mode, the heater will turn off automatically when the set temperature has been reached. If your heater turns off frequently please raise the set temperature, or switch to Power Heat mode.



Child Lock


Long press  and  for 3 seconds to activate / deactivate the Child Lock function. When activated, the  on the display will light up, and all the buttons on the space heater will be locked.



Mute

To turn on/off the button sounds, long press  for 3s.

LED Display

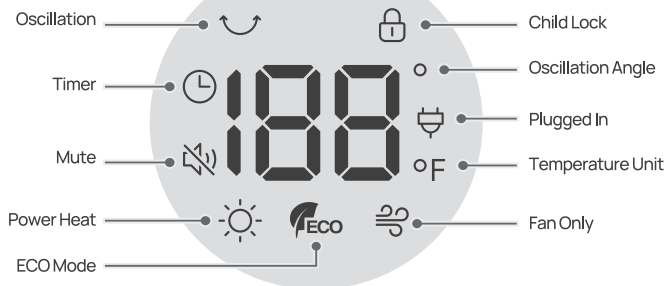

Power Heat with five heating levels:


H1 (800W), H2 (1000W),
H3 (1200W), H4 (1600W),
H5 (2000W)




The heater will automatically select its optimal heating power, ranging from 800W to 2000W, depending on the difference between the set and ambient temperature.

Ambient Temperature Indicator

Besides the LED display, your new heater comes with an additional LED indicator that lets you see the ambient temperature condition even from far away.

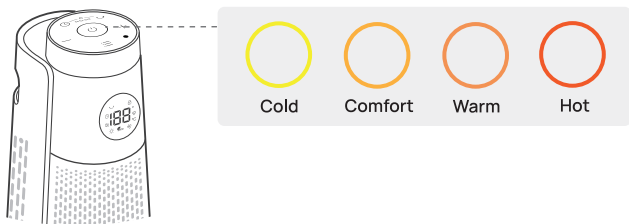

Remote Control

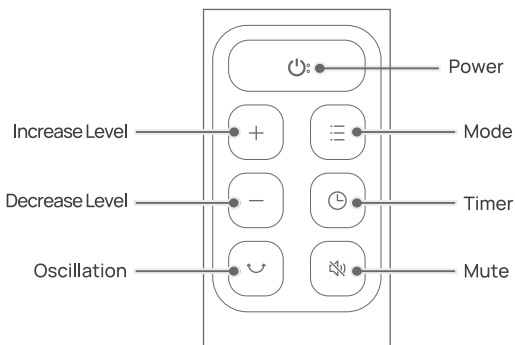


More Features

This appliance features auto-brightness

The display will stay on in bright environments and will turn off in dim / dark environments.

Touch  to activate the control panel and LED display.

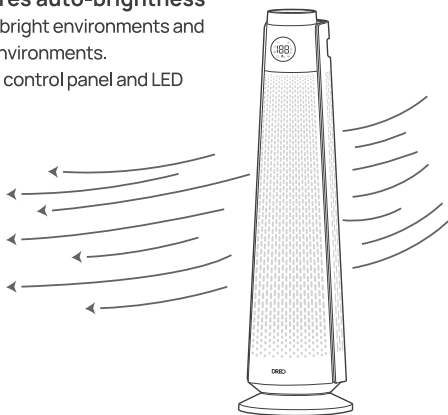

Memory

If the heater is turned OFF or disconnected from power, it will operate under the previous settings (except the Timer setting) when it is turned ON again.



Tip-over Protection

When the heater is tipped over, it will shut off automatically with the error code "P4" on the display.



24-Hour Auto Off

This feature is not ON by default.

When this feature is ON, the heater will shut off automatically after continuously running for 24 hours.

Long press the Timer button for 3 seconds to turn this feature ON/OFF when this heater is on standby. The display will show "ON" and "OFF" respectively.




Overheat Protection


When the heater overheats, it will shut off automatically with the error code "FF" on the display.

CLEANING AND MAINTENANCE

03

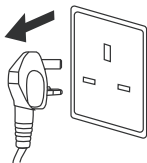


Always turn off and unplug before cleaning.

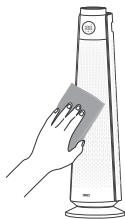

Outer Surface

Gently wipe off the dust with a soft, dry cloth.

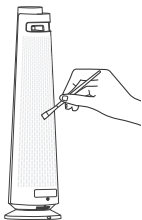

Air Inlet

Use a soft, dry cloth or a cotton-tipped swab to remove any dust from the air inlet.



ATTENTION



DO NOT unscrew
the unit.



DO NOT use
cleaning agents.



DO NOT use
abrasive scrubbers.



Fire or electrical shock hazard.
DO NOT immerse the main unit in water.
NEVER allow water to get inside the heater.



Except for cleaning, any servicing should
be performed by an authorized service
representative.



Store in a cool, dry area and keep the
cable out of high-traffic areas to avoid
tripping hazards.



Correct Disposal of this product

This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection system or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Problem	Possible Causes	Solution
Malfunction codes on LED display	E2 - Temperature sensor short circuit	Unplug it from the power source and contact Customer Support.
	E1 - Temperature sensor open circuit	Unplug it from the power source and contact Customer Support.
	FF - Overheat protection	Unplug and wait for it to cool down before plugging in again.
	P4 - Tip-over protection	Place the heater back on a flat, level and stable surface.
Heater does not start	Power cord is not properly plugged in.	Connect the plug to a powered electrical outlet.
	Overheat protection has been activated.	Unplug and wait for it to cool down before plugging in again.
		Remove any objects on or near the heater.

Heater does not start	No power is passing through the unit.	Ensure that your circuit breaker or fuse is working properly. Ensure that your heater is placed on a flat and even surface.
	The set temperature is lower than the ambient temperature.	Ensure that the temperature is set to be higher than the ambient temperature.
	The temperature exceeds the threshold of the thermal cutoff.	Turn off and unplug the unit. Allow it to cool and plug into the electrical outlet again.
The heater suddenly stops during heating	The heater is tipped over.	Place it on a flat, level and stable surface.
	In ECO mode, the heater will turn off automatically when the set temperature has been reached.	This is normal. If your heater turns off frequently, please raise the set temperature, or switch to Power Heat mode.

If your problem is not listed or still persists, please contact our Customer Support (see page 12).

Information requirement for the electric local space heaters:

Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	2,000	kW	manual heat charge control, with integrated thermostat	No
Minimum heat output(indicative)	P_{min}	0.900	kW	manual heat charge control with room and/ or outdoor temperature feedback	No
Maximum continuous heat output	$P_{max,c}$	2,000	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Power consumption				fan assisted heat output	No
In off mode	P_o	N/A	W	Type of heat input/room temperature control (select one)	
In standby mode	P_{sm}	0.44	W	single stage heat output and no room temperature control	No
In idle mode	P_{ide}	N/A	W	two or more manual stages, no room temperature control	No
In network standby	P_{nsn}	N/A	W	with mechanic thermostat room temperature control	No
Standby mode with display information or status			NO	with electronic room temperature control	Yes
Seasonal space heater energy	$\eta_{s, on}$	91.5	%	electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	No
				distance control option	No
				adaptive start control	No
				working time limitation	Yes
				black bulb sensor	Yes
				self-learning functionality	No
				control accuracy	No
Contact details	Hesung Innovation Limited Unit 32, L1 Floor, Mirror Tower, 61 Mody Road, Tsimshatsui East, Kowloon, Hong Kong,999077				

Model No.: DR-HSH008
Rev_UK_RTL_1.0

Reach out to us, it's easy!



uk-support@dreo.com



www.dreo.com



www.dreo.com

Reach out to us, it's easy!

Contact us to get expert support.



uk-support@dre0.com



www.dreo.com