



Micro Trimmer  
Instructions

Please read all instructions carefully to familiarise yourself with your new trimmer before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

**T:** 01227 740066

or visit

**W:** [www.wahl.co.uk](http://www.wahl.co.uk)

**E:** [customer.services@wahl.co.uk](mailto:customer.services@wahl.co.uk)

**CONTENTS**

**IMPORTANT SAFEGUARDS**

Page 3

**OPERATING INSTRUCTIONS**

Page 4

**USING YOUR TRIMMER**

Page 4

**CLEANING & MAINTENANCE**

Page 6

**GUARANTEE**

Page 7

## GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes



**DANGER**

Danger of electric shock which may result in serious physical injury or death.



**DANGER**

Danger of explosion which may result in serious physical injury or death.



**WARNING**

Warning of possible physical injury or a health risk.



**CAUTION**

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
- 1. Carry out these actions in the sequence described.
- List

Please retain this leaflet for future reference.

**READ ALL INSTRUCTIONS BEFORE USING.**

## IMPORTANT SAFEGUARDS

When using this electrical appliance, especially when children are present, basic safety precautions should always be observed including the following.

### Requirements

- ▶ This appliance can be used by children from aged 14 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Use this appliance only for its intended purpose.
- ▶ Do not use this trimmer with a damaged or broken blade, as injury may occur.
- ▶ When discarding an old battery, do not throw into fire or where heat could cause it to rupture or explode. Also, do not attempt to recharge alkaline heavy duty or regular batteries in battery charging devices.

**OPERATING INSTRUCTIONS**

**BATTERY INSTALLATION/REPLACEMENT**

1. With heads attached, hold the trimmer head, and simply slide the bottom compartment downwards to reveal the battery compartment.
2. Insert one AAA battery negative end first (towards the cutting head).
3. Replace the battery compartment cover.
4. Replace the battery as soon as you notice the trimmer running slower than normal to avoid pulling of hairs.

**INSTALLATION OF TRIMMING HEADS**

Some kits may not include all attachments.

1. Make sure trimmer is turned off.
2. Turn the trimmer head anticlockwise ¼ turn and lift off
3. Place trimmer head on trimmer and turn trimmer head clockwise ¼ turn to lock on.

**BEFORE TRIMMING**

Remove the protective cap and turn the trimmer "ON" by pushing the switch up.

**USING THE DETAILING HEAD** (If included)

**TRIMMING EYEBROWS**

Slowly move the head closer or further away from eyebrows to achieve desired length. Trimming with detailing attachment comb, place the comb over the trimmer head. The attachment comb allows you to trim and shape eyebrows. Trim by following in the direction of the hair growth.

**NOTE:** Only use on the eyebrows. Be cautious around the eye area.

Slide on the detailing attachment comb. The comb should slide easy, otherwise it may be misaligned. (Fig A)  
Slide the comb until you feel it fasten. The entire length of the blade should be covered.



**Fig A**

**TRIMMING THE BIKINI AREA**

For detailing the bikini area, slowly move the detailing attachment on the outside of the bikini area to trim and shape until desired look is accomplished.

**TRIMMING SIDEBURNS AND MOUSTACHE**

For detailing sideburns and moustache, slowly move reciprocating head across desired areas to neatly trim and shape.

**USING THE ROTARY HEAD** (if included)

**TRIMMING HAIR FROM NOSE**

Make sure the nasal passages are clean. Slowly move the rotary head in and out of each nostril no more than a 6 mm deep. Keep the side of the cutting head firmly against the skin to prevent a tickling sensation.

**TRIMMING HAIR FROM EARS**

Make sure the outer areas of the ears do not contain any wax. Hold the ear flat with one hand and carefully insert the rotary head no more than a 6mm into the outer ear.

**⚠ WARNING:** DO NOT INSERT THE HEAD OR ANY FOREIGN OBJECT INTO THE INNER EAR. FOR HAIR GROWING ON THE OUTSIDE OF THE EAR, SIMPLY MOVE THE HEAD SLOWLY ALONG THE EDGES ON THE EAR (EITHER CUTTING HEAD MAY BE USED TO TRIM HAIR FROM THE EARS).

### CLEANING & MAINTENANCE

Periodically after use, turn the trimmer "OFF" and rinse the cutting heads under warm, running water. For more thorough cleaning, remove the attached cutting head by turning it slightly anti clockwise. Then rinse the entire head under running water. After cleaning, replace desired cutting head by turning slightly clockwise and wipe the entire trimmer dry with a soft cloth. Always replace the protective cap before storing.

**NOTE:** Do not submerge the trimmer body in water, only the trimmer head should be rinsed clean.

### TROUBLESHOOTING

If your product fails to operate when switched 'ON' check your batteries to see if they are properly installed. Positive end should be located as shown in battery housing. Make sure switch is in the 'ON' position and check to be sure blades are free to move. If blades become clogged, manually pushing the blades back and fourth a few times while unit is turned 'OFF' may help free the blades and allow the trimmer to operate. If it still does not operate, your batteries have probably exceeded their useful life.

### DISPOSAL

**⚠ Handle with care! Environmental damage in the case of incorrect disposal.**

Correct disposal will ensure environmental protection and prevent any potentially harmful impacts on people and the environment.

Adhere to the relevant legal requirements when disposing of the appliance.

**Information on the disposal of electrical and electronic appliances in the European Community:**



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

## **GUARANTEE**

This product is guaranteed against defects in material and workmanship for a period of 3 years (Lithium models have 5 years) from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.  
This guarantee does not include blades, cables, shaver heads, foils and cutters etc., which are consumable parts.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.  
This guarantee in no way affects your rights under statutory law in the United Kingdom.

WAHL (UK) LIMITED  
STERLING HOUSE  
CLIPPER CLOSE  
RAMSGATE  
KENT  
CT12 5GG

CUSTOMER SERVICES T: 01227 740066  
[www.wahl.co.uk](http://www.wahl.co.uk)

Form No. 58992 Rev1 05/23