## LAN550B & LAN700B

# TAVISTOCK

## LANSDOWN 550 & 700 VANITY UNITS


INSTALLATION & AFTERCARE INSTRUCTIONS


### **Before installation**

It is recommended that the unit and basin are secured to a suitably reinforced wall to ensure stability. This can be done through the back rail (Fixings not included).

## Door adjustment

The unit doors can be adjusted or removed if necessary. There are two adjustment screws on the hinges which make the adjustments shown in the image below. Thw quick release button on the back of the hinge can be used to remove the door completely.

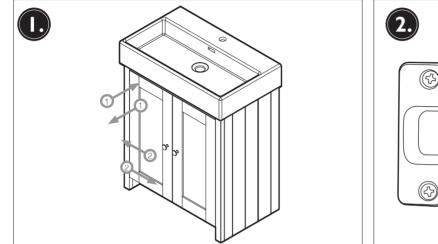


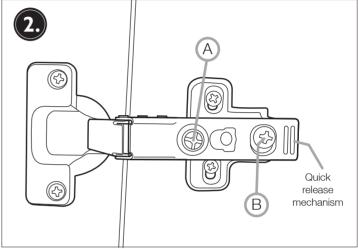

To make adjustment 1 tighten/loosen adjustment B. To make adjustment 2 simply turn screw A.

### **Basin installation**

Once the basin has been test fitted and plumbed in, finish by securing the basin to the unit using a silicone sealant (not supplied).

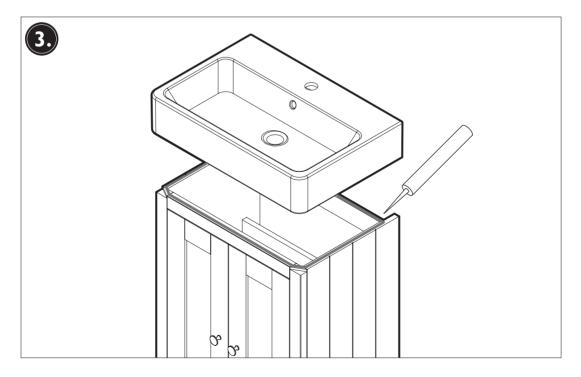

## LAN550B & LAN700B

# TAVISTOCK

## LANSDOWN 550 & 700 VANITY UNITS

### **Furniture Care Instructions**

As with all wooden furniture, this product should be treated with care.

#### We recommend...

Wipe away any water splashes or condensation after use. Excessive exposure to water will deteriorate the furniture.

All bathrooms should be well ventilated with a suitable extractor fan.

Clean with a soft damp cloth only.

Use a wax free polish if one must be used.

For removal of lime scale deposits use a suitable proprietary cleaner. If necessary test on an inconspicuous area first.

### Aftercare

Should you require any fitting advice or spare parts for this product please contact Tavistock Bathrooms using the contact details below.

#### Please DO NOT...

Do not scrub or scour.

Do not use abrasive cleaning agents.