







ASSEMBLY INSTRUCTIONS



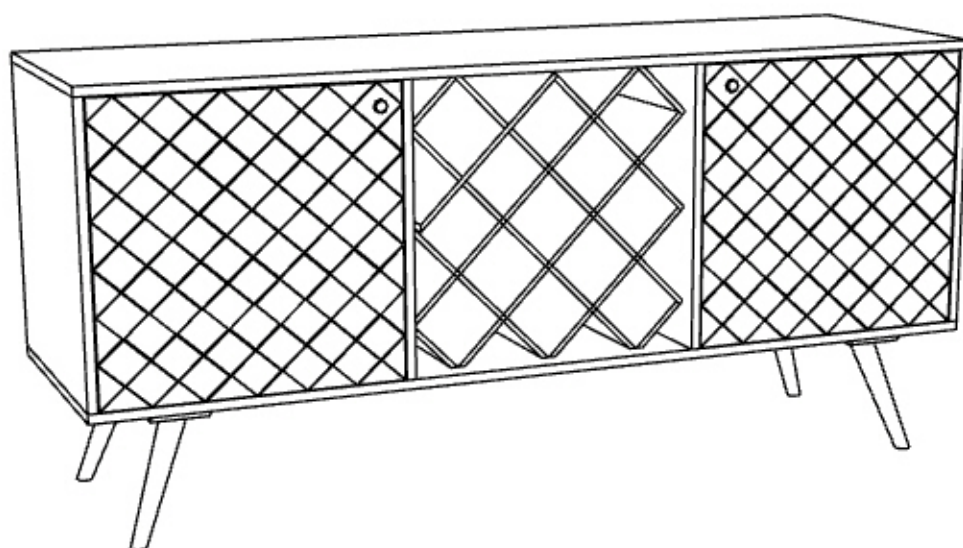

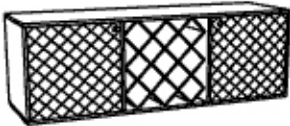TUSCANY SIDEBORD WITH WINE CABINET
5056272006672




Component List

| Label | Picture | Description | Qty |
|-------|---|----------------|-----|
| A |  | Sideboard Body | 1 |
| B |  | Leg | 2 |
| C |  | Wood Shelf | 2 |

Hardware List


| Label | Picture | Description | Qty |
|-------|---|----------------------|-----|
| H1 |  | Allen Bolt 6 x 40 mm | 6 |
| H2 |  | Washer 8 mm | 6 |
| H3 |  | Spring Washer | 6 |
| H4 |  | Shelf pin | 8 |


Tool List


| Label | Picture | Description | Qty |
|-------|---|----------------|-----|
| T1 |  | Allen Key 4 mm | 1 |


Assembly Prep

Before Beginning:

* Save all packing until finished. 


* Read Instructions, cover to cover. 

* Have 2 adults on hand for assembly. 

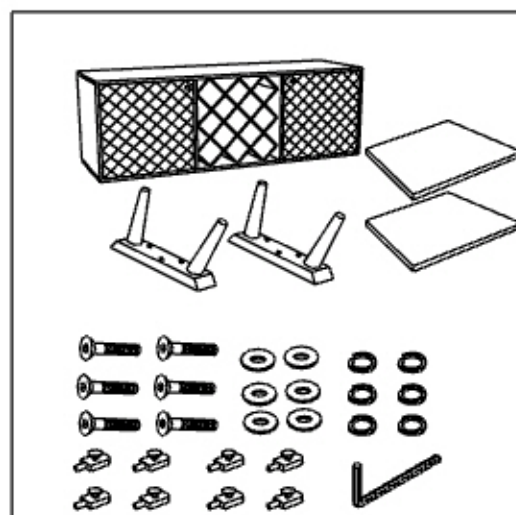


Assembly Steps

Step 1

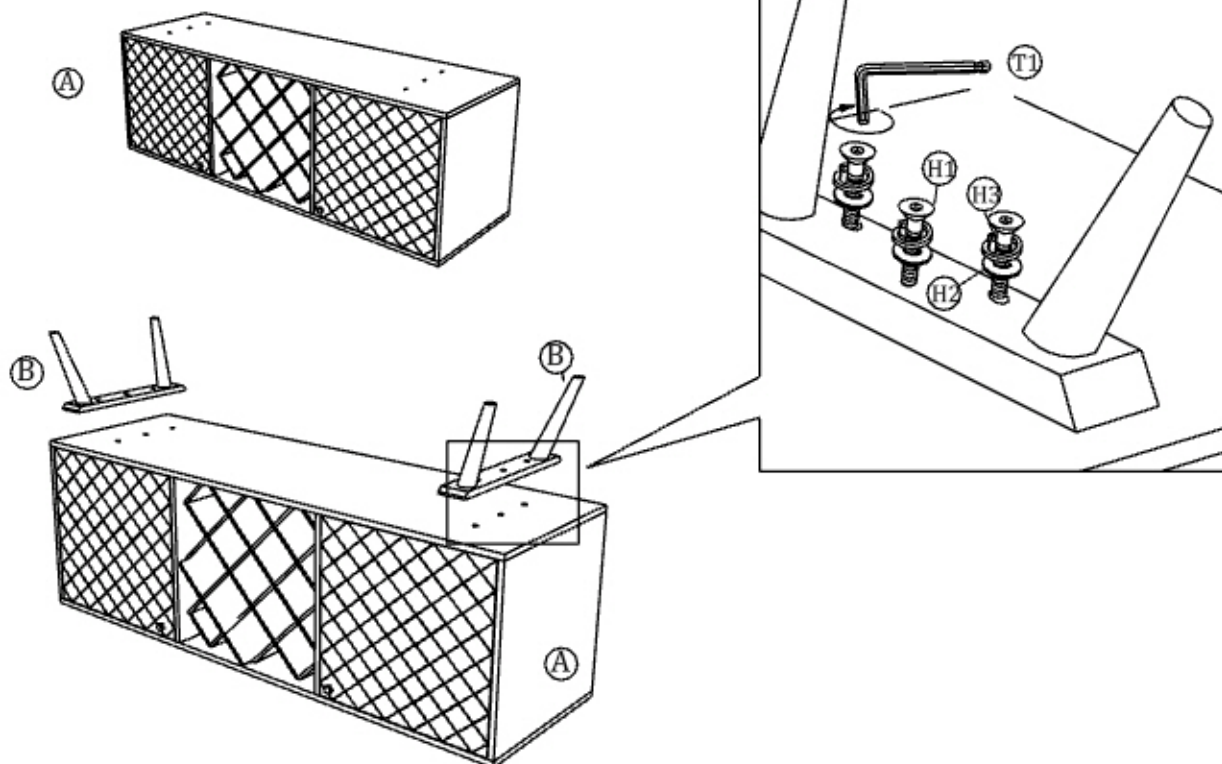

Place Sideboard Body (A) upside down on a non-damaging padded surface. Align Leg (B) with Sideboard Body (A) as shown above. Insert Allen Bolt (H1), Washer (H2) and Spring Washer (H3) and tighten it with Allen Key (T1). Follow the same process to attach other Legs (B). Fully tighten all connections with Allen key (T1). Turn the piece in upright position.

Step 2

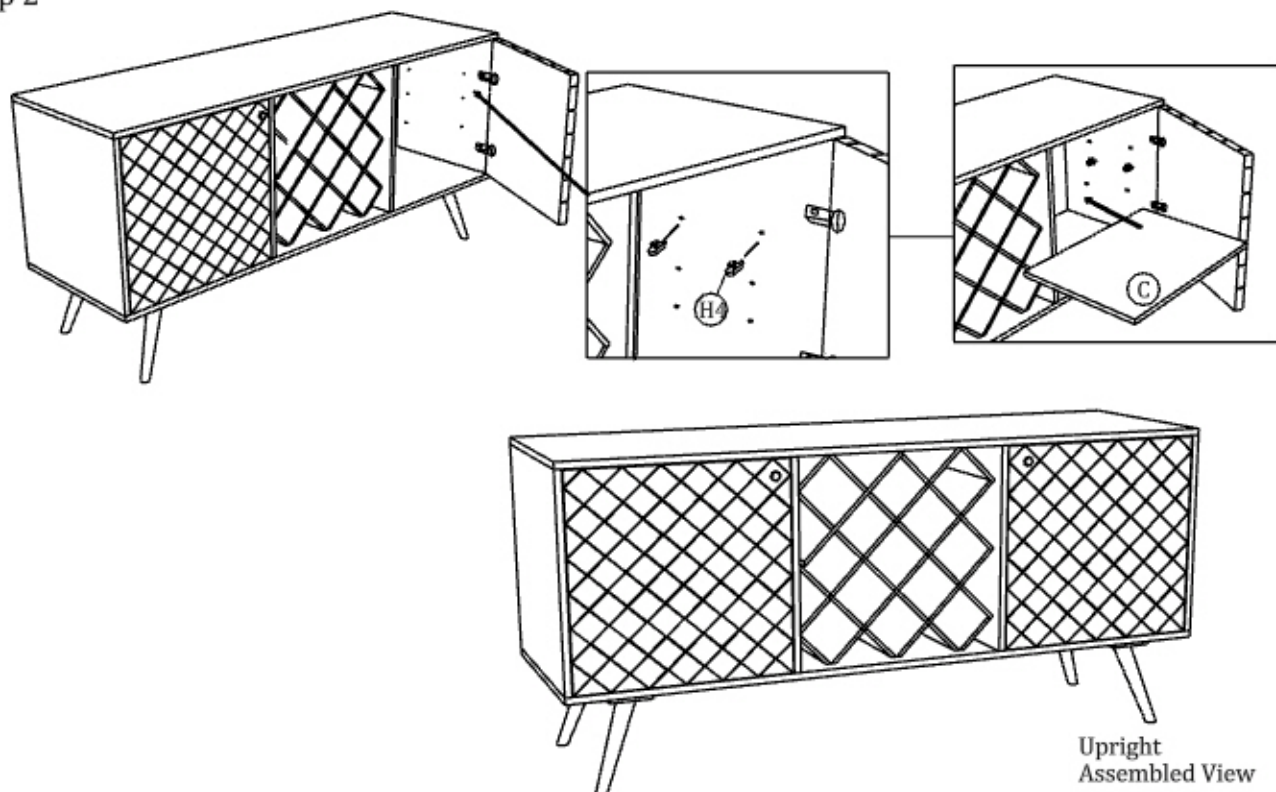

Open the door and fix the Shelf Pin (H4) in the desired holes, and place The Wood Shelf (C) on Shelf Pin as shown above in the drawing. Follow the same process to place the other shelf. Product is ready to use.