

Please read these instructions
carefully before assembling.



INSTRUCTION MANUAL

PULSE COMPACT CORNER DINING SET

LV-SF-1816-1C | Right Hand 3 Seat Sofa


Assembly Requirements:

Number of people required to assemble - 2

Approximate assembly time - 20 minutes

Dimensions:

220x88x67cm

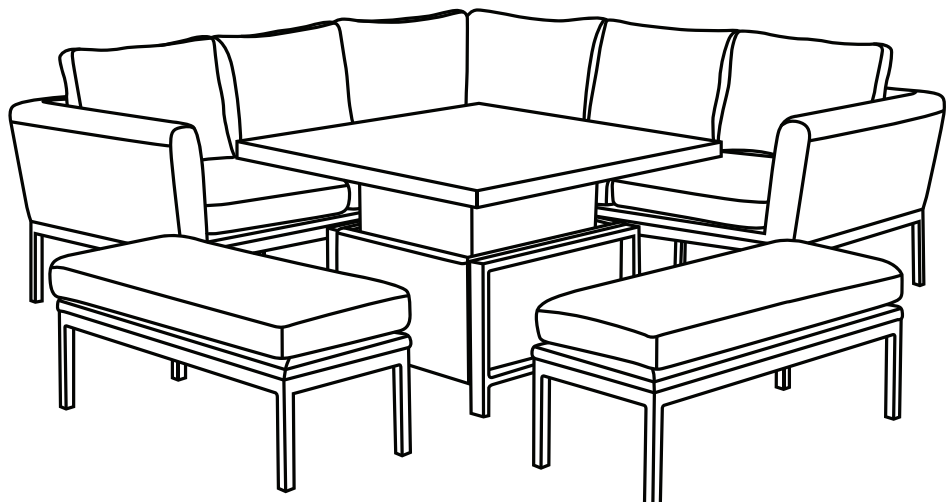


COMPONENT PARTS

Please check if you have all the parts as listed below. Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A SEAT BASE WITH 2 ARMS



B LEG FRAMES 69CM



x2

69CM LENGTH FOR 2 ARMS

C LEG BARS



x4

D 1/4 X 55mm BOLTS



x12

E WASHERS $\phi 6 \times \phi 18$



x12


F ALLEN KEY



ASSEMBLY INSTRUCTIONS

STEP 1

Ensure all the parts are at the correct positions, attached sofa leg frams and bars together

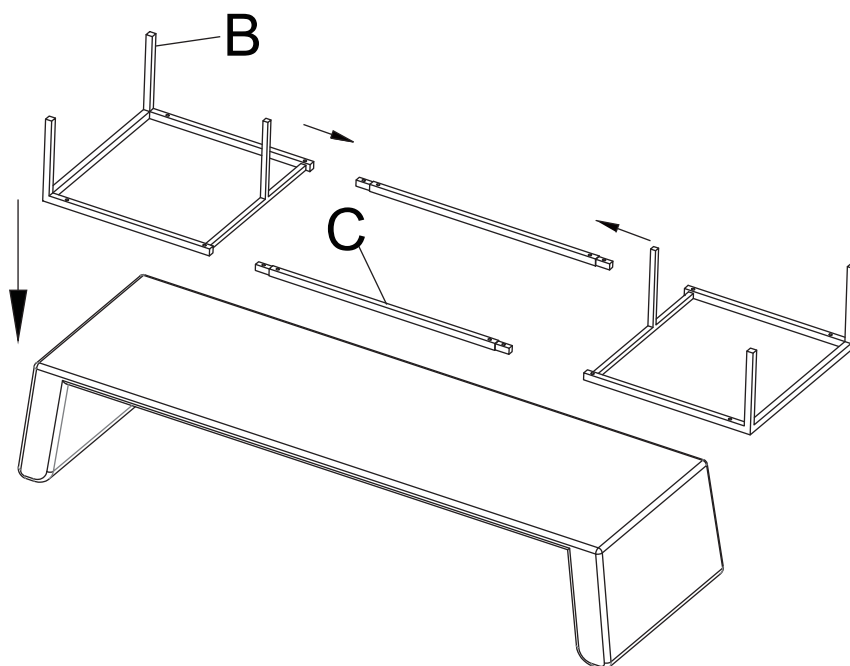


COMPONENT PARTS

Please check if you have all the parts as listed below. Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A SEAT BASE WITH 2 ARMS



B LEG FRAMES 69CM



x2

69CM LENGTH FOR 2 ARMS

C LEG BARS



x4

D 1/4 X 55mm BOLTS



x12

E WASHERS $\phi 6 \times \phi 18$



x12


F ALLEN KEY



ASSEMBLY INSTRUCTIONS

STEP 1

Ensure all the parts are at the correct positions, attach sofa leg frames and bars together

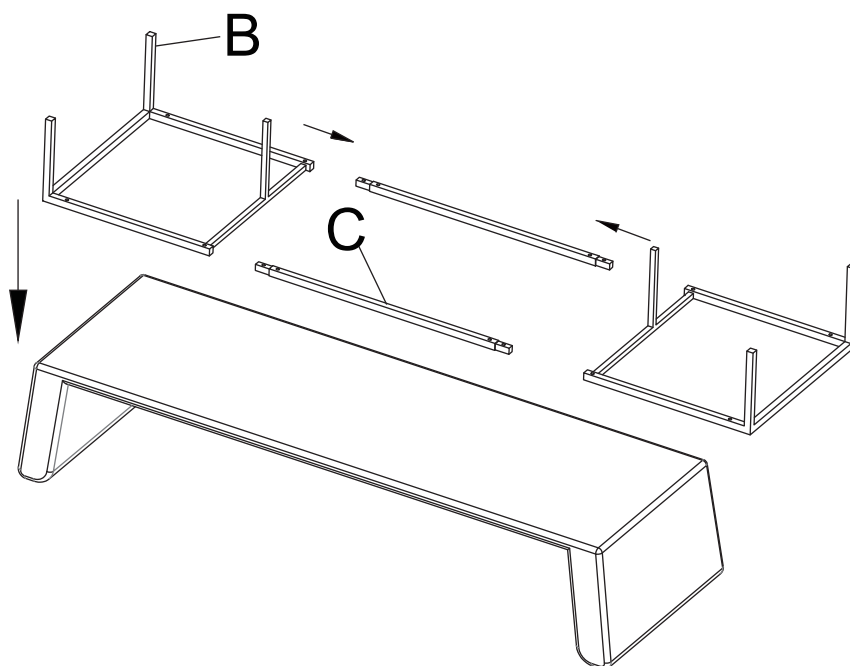

Safety and Care Advice

KEEPING OUTDOOR FABRIC LOOKING IT'S BEST IS SIMPLE AND EASY.

- Use a sponge or soft brush to apply mild soap and warm water to the fabric.
- Rinse thoroughly.
- Air dry.

FOR STUBBORN STAINS OR MILDEW:


- Add one cup of bleach per gallon of soap and water.
- Apply directly to the stain.
- Use a sponge or soft brush to clean.
- Rinse thoroughly.
- Air dry.
- If necessary, repeat with additional bleach.

Always rinse thoroughly. Bleach won't harm the fabric, but it could damage clothing if not rinsed away.

All-Weather fabric air dries very quickly. Machine drying is unnecessary and high heat may wash out any FR treatment.

STEP 2

Ensure all the screws are at the correct positions. Use the allen key (Part H) to tighten up all the bolts.

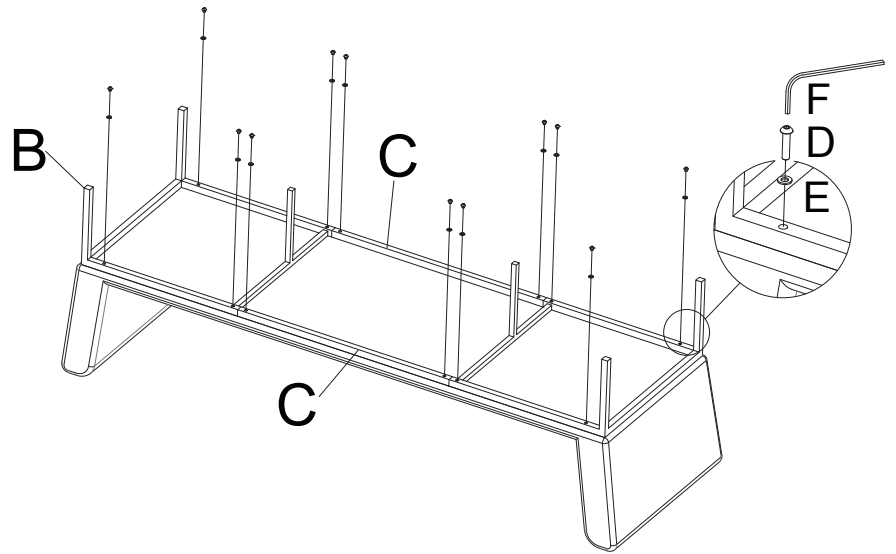

STEP 3

Carefully turn the assembled Sofa, and double check all the bolts are fully tightened.

