


# VANITY MIRROR

Stock number:3036-17

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

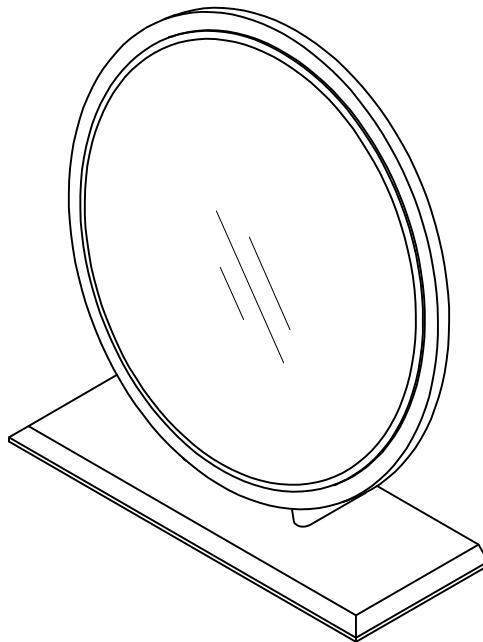


## Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

**Necessary Tools :** Pozi screwdriver



(Included)

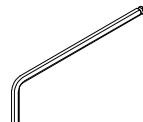


Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product takes approximately **15 MINUTES** to assemble with **1 PERSON**.

All assembly should be performed on a flat, stable, clean and soft surface.

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

**IMPORTANT:** Retain these instructions for future reference.

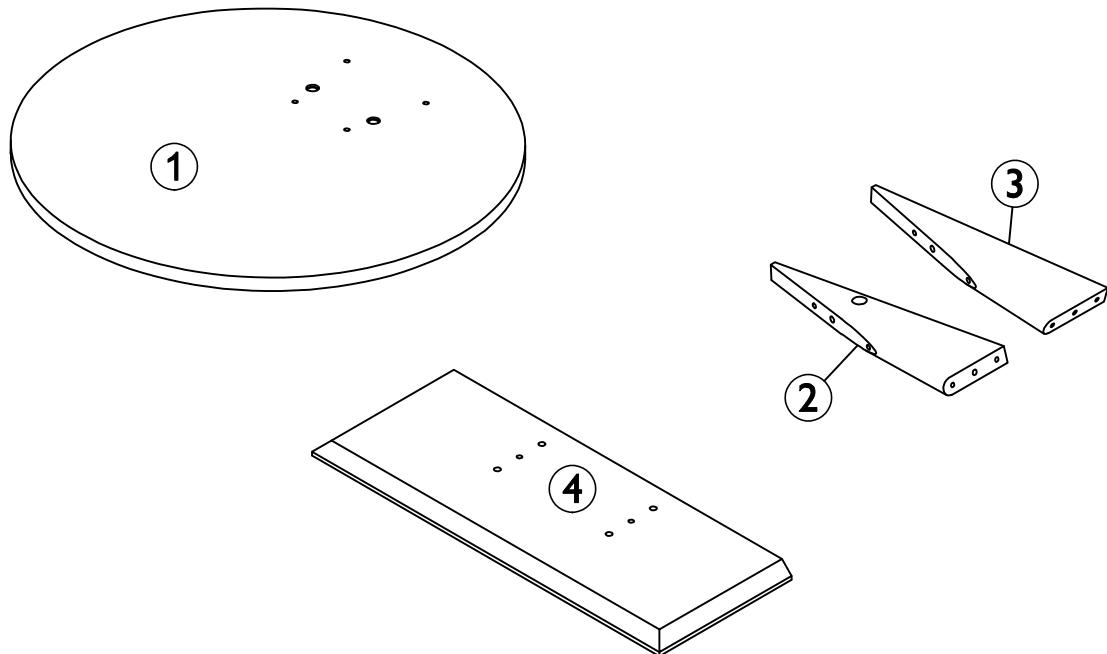

## Parts checklist


Item	Description	Qty.	Item	Description	Qty.
1	Mirror frame	x 1	3	Post right	x 1
2	Post left	x 1		4 Base panel	x 1
A	Steel dowel Ø7 x 52mm	x 2	D	Confirmat Screw Ø7 x 38mm	x 4
B	Grub screw M8 x 8mm	x 2	E	Allen key M4 x 30 x 110mm	x 1
C	Wooden dowel Ø6 x 30mm	x 6	F	Housing Ø15 x 13.5mm	x 2

# Step By Step Assembly Instructions


## Step 1

- 1.1 : Lay all parts onto a flat, stable, clean and soft surface
- 1.2 : Attach 2x steel dowels (A) into mirror frame (1) by screwing fittings (A) into the inset fitting that are located on part (1) as shown. Use a pozi screwdriver to turn fittings (A) clockwise to fix.

Fitting




A x 2

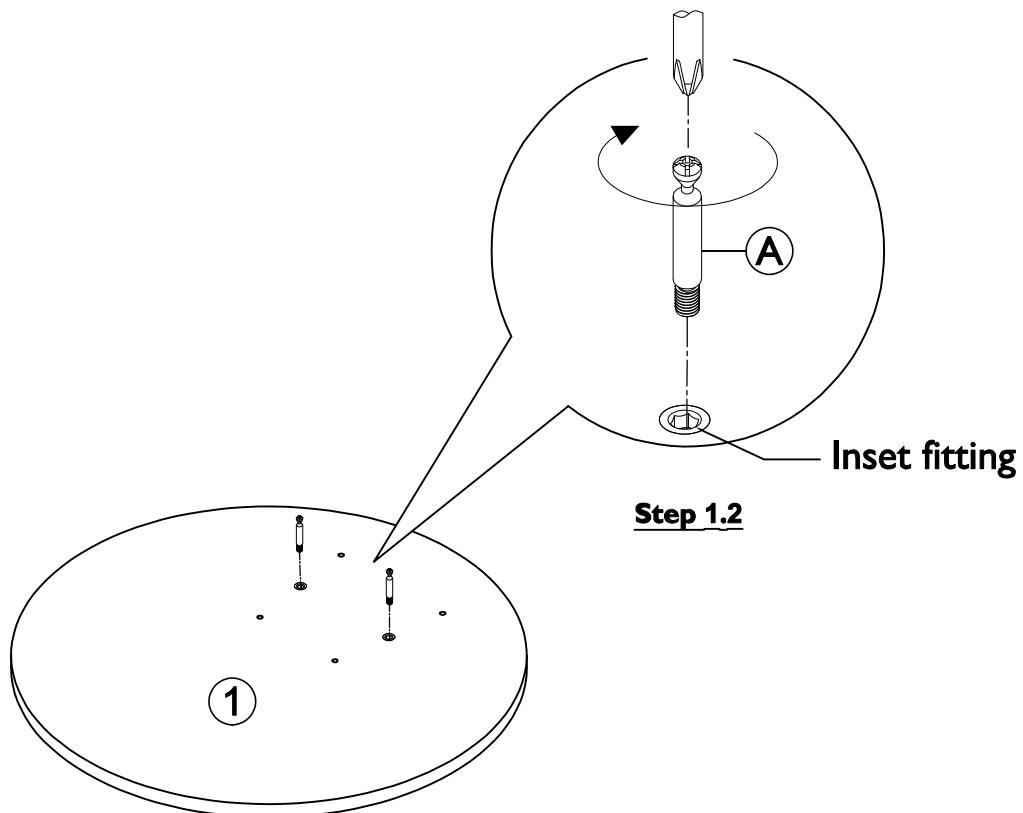


## Step 2

- 2 Attach 6x wooden dowels (C) into the pre-drilled holes on parts (2) & (3) as shown.

Fitting



C x 6

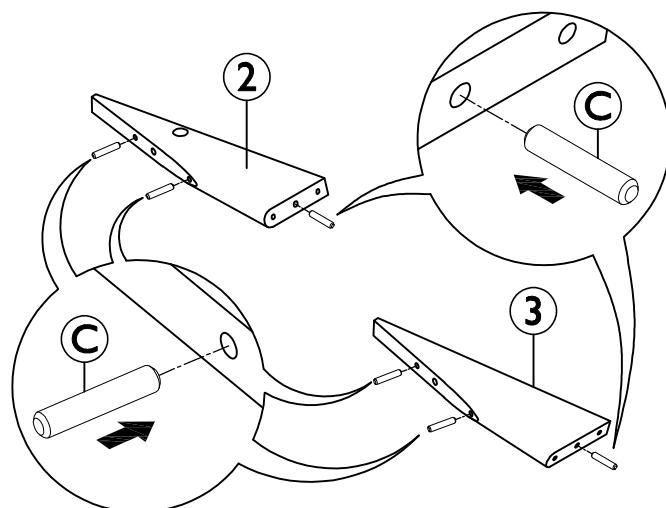

# Step By Step Assembly Instructions

**Step 3**

3.1 : Attach 2x housings (F) into the pre-drilled holes on parts (2) & (3) as shown.

3.2 : Attach leg (2) onto mirror frame (1) as shown. Ensure steel dowels (A) and wooden dowels (C) are aligned correctly with the holes of mating parts before attaching.

Fitting

3.3 : Secure part (2) to part (1) using 1x grub screw (B) as shown. Use allen key (E) to turn fitting (B) clockwise to fix.

3.4 : Attach leg (3) onto mirror frame (1) as shown. Ensure steel dowels (A) and wooden dowels (C) are aligned correctly with the holes of mating parts before attaching.

3.5 : Secure part (3) to part (1) using 1x grub screw (B) as shown. Use allen key (E) to turn fitting (B) clockwise to fix.




B x 2



E x 1



F x 2

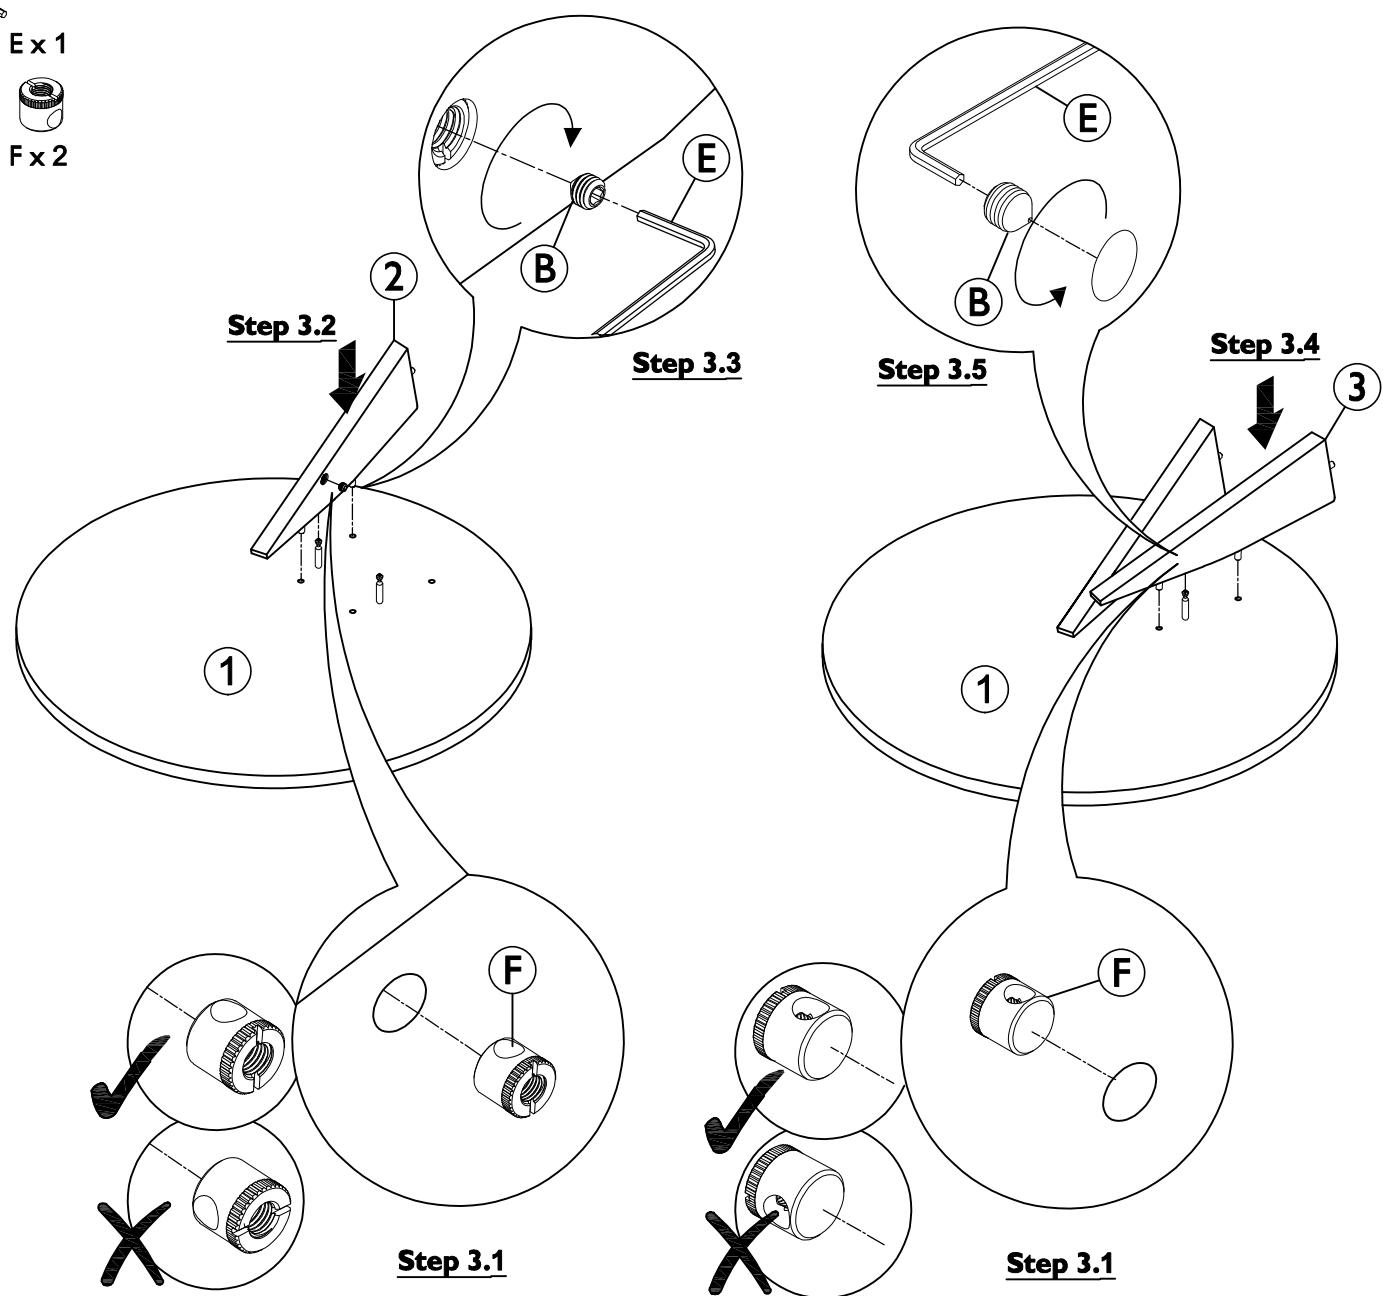

# Step By Step Assembly Instructions

**Step 4**

**Fitting**



- 4.1: Attach base panel (4) onto the structure assembled in **Step 3** as shown. Ensure wooden dowels (C) are aligned correctly with the holes of mating parts before attaching.
- 4.2: Secure part (4) to parts (2) & (3) using 4x conformate screws (D) as shown. Use allen key (E) to turn fittings (D) clockwise to fix.
- 4.3: Stand the unit upright.



D x 4



E x 1

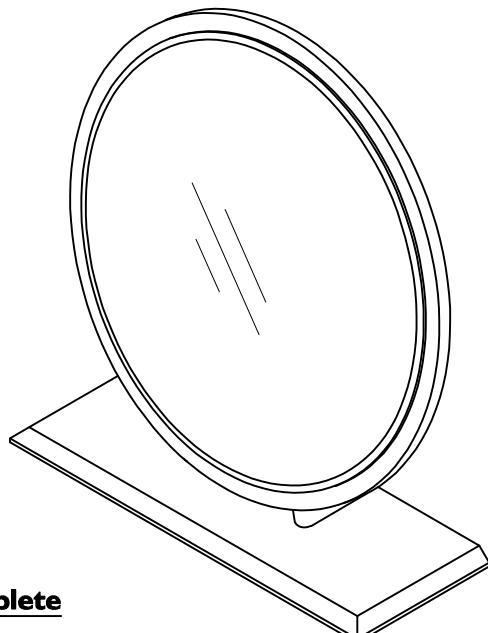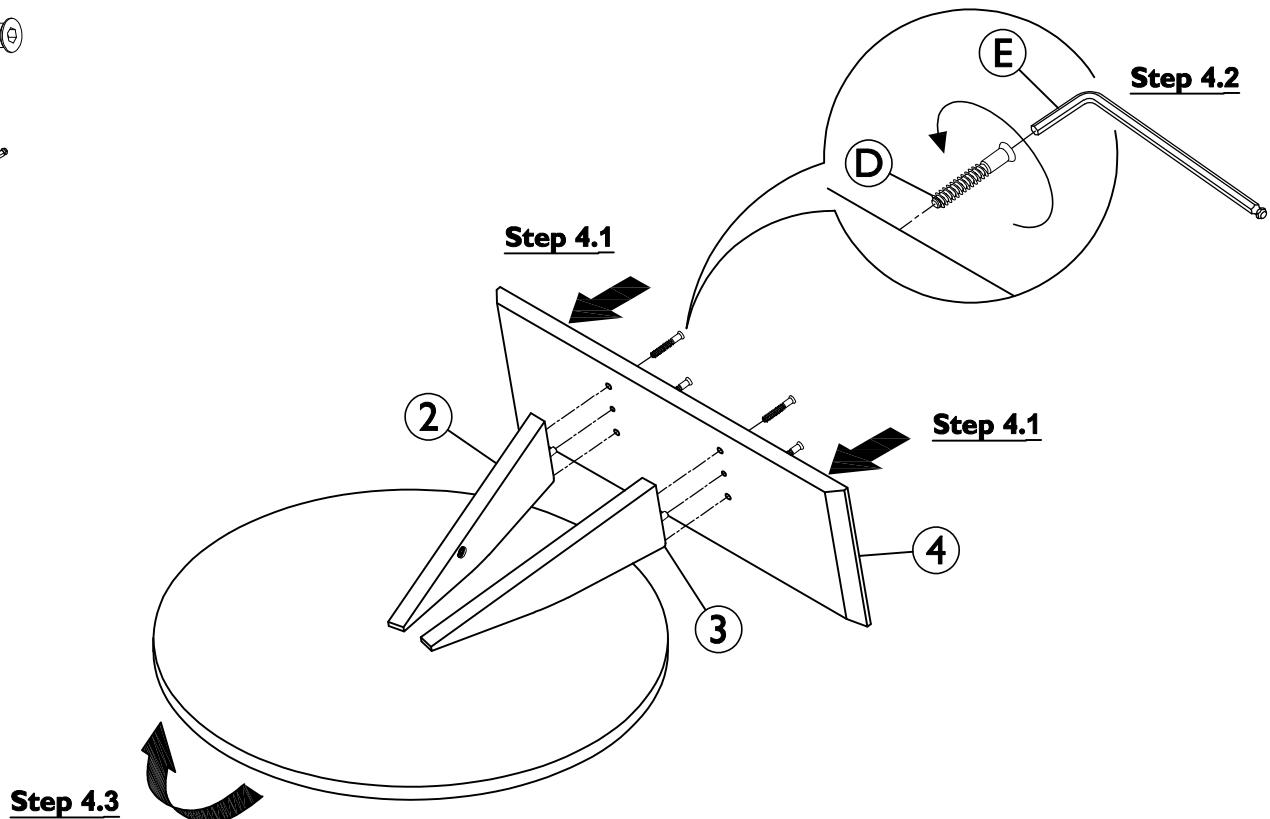

**Assembly is complete**