


# DOUBLE WARDROBE

Stock number: 3036-82


Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

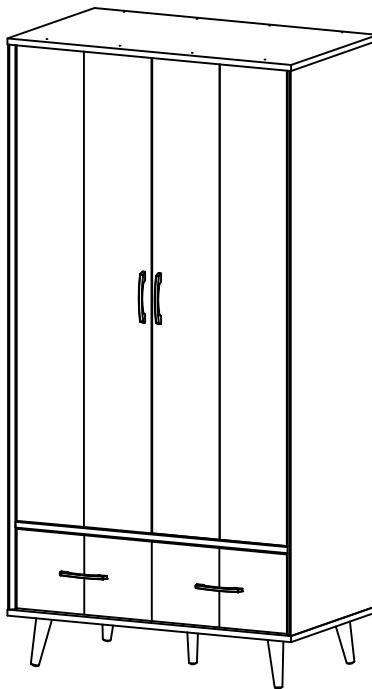


## Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

**Necessary Tools :** Pozi screwdriver and Phillips screwdriver

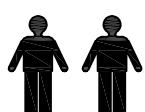


Pz 2 or Pz 3

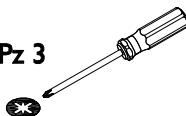

Ph 2



(Included )

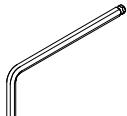

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product takes approximately **60 MINUTES** to assemble with **2 PEOPLE**.


All assembly should be performed on a flat, stable, clean and soft surface.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

**IMPORTANT:** Retain these instructions for future reference.






Page : 1

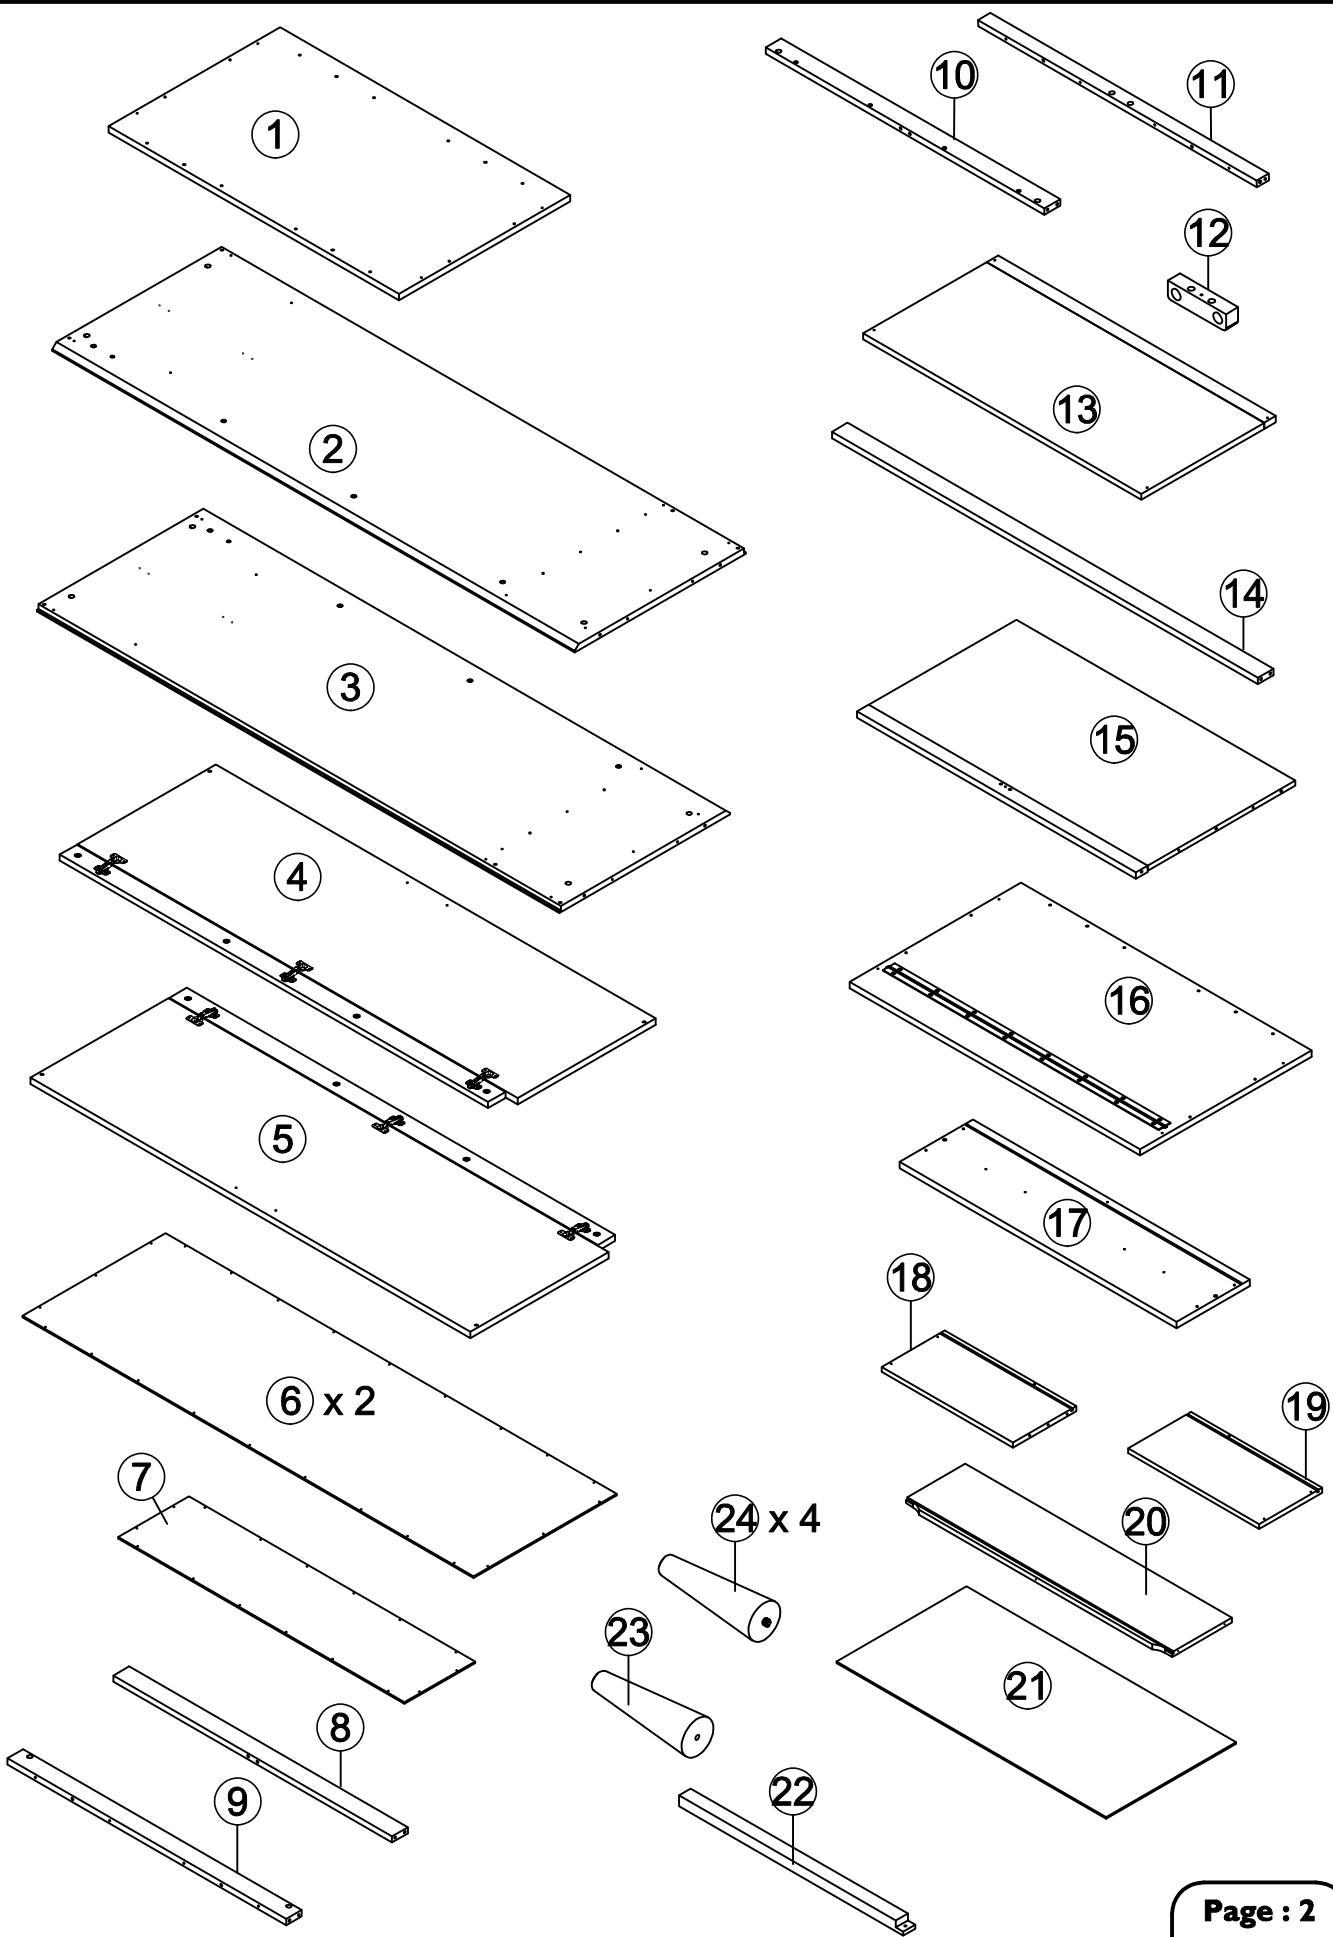

## Fittings and parts checklist

Item	Description	Qty.	Item	Description	Qty.
1	Top panel	x 1	13	Removable shelf frame	x 1
2	Side panel left	x 1	14	Verticle back rail	x 1
3	Side panel right	x 1	15	Fix shelf frame	x 1
4	Door frame left	x 1	16	Bottom frame	x 1
5	Door frame right	x 1	17	Drawer front	x 1
6	Back panel A	x 2	18	Drawer side left	x 1
7	Back panel B	x 1	19	Drawer side right	x 1
8	Top back rail	x 1	20	Drawer back	x 1
9	Bottom back rail	x 1	21	Drawer bottom	x 1
10	Middle back rail	x 1	22	Support drawer bottom	x 1
11	Top front rail	x 1	23	Center leg	x 1
12	Wood stopper	x 1	24	Leg	x 4

## Fittings and parts checklist
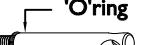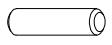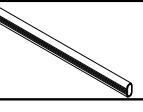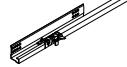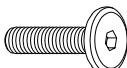
<b>A</b>	Steel dowel Ø7 x 52mm		x 4	<b>R</b>	Wood shelf support		x 4
<b>B</b>	Steel dowel Ø7 x 72.5mm		x 4	<b>S</b>	Flat head screw Ø4 x 15mm		x 7
<b>C</b>	Grub screw Ø8 x 8mm		x 8	<b>T</b>	Round head screw Ø4 x 18mm		x 1
<b>D</b>	Hanger rail support 20 x 14 x 50mm		x 4	<b>U</b>	Round head screw Ø3.5 x 18mm		x 64
<b>E</b>	Varianta screw Ø4.2 x 10.5mm		x 8	<b>V</b>	Round head screw Ø4 x 40mm		x 4
<b>F</b>	Varianta screw Ø6 x 13.5mm		x 4	<b>W</b>	Small steel dowel Ø5.5x45mm		x 2
<b>G</b>	Wooden dowel Ø6 x 30mm		x 19	<b>X</b>	Small grub screw Ø7x7.5mm		x 2
<b>H</b>	Wooden dowel Ø8 x 30mm		x 20	<b>Y</b>	Handle		x 4
<b>J</b>	Cam lock 1 Ø15 x 13.5mm		x 3	<b>Z</b>	Metric Bolt M4x28mm		x 8
<b>K</b>	Cam lock 2 Ø15 x 13.5mm		x 8	<b>dd</b>	Mouting plate leg M8 x Ø63 x 2.5mm		x 1
<b>L</b>	Cam lock 3 Ø15 x 12mm		x 4	<b>ee</b>	Hanger rail L = 950mm		x 1
<b>M</b>	Cam screw Ø7 x 44.5mm		x 15	<b>ff</b>	Allen key M4 x 30 x 110mm		x 1
<b>N</b>	Confirmat screw Ø7 x 38mm		x 12	<b>gg</b>	Left runner L = 460mm		x 1
<b>P</b>	Hi-Lo Screw Ø4 x 50mm		x 4	<b>hh</b>	Right runner L = 460mm		x 1
<b>Q</b>	Hex head bolt M6 x 25mm		x 8	<b>jj</b>	Round head screw Ø4 x 30mm		x 1

# Step by step assembly instructions

## Step 1

- 1.1 : Lay all parts onto a flat, stable, clean and soft surface.
- 1.2 : Attach 4x steel dowels (A) onto the pre-drilled holes on top panel (1) as shown. Use a pozi screwdriver to turn fittings (A) clockwise to fix
- 1.3 : Attach 4x steel dowels (B) onto the pre-drilled holes on bottom panel (16) as shown. Use a pozi screwdriver to turn fittings (B) clockwise to fix
- 1.4 : Attach 4x hanger rail supports (D) onto the pre-drilled holes on side panels (2) & (3) using 8x varianta screws (E) as shown. Use a screwdriver to turn fittings (E) clockwise to fix.
- 1.5 : Attach 14x cam screws (M) onto the pre-drilled holes on side panels (2) & (3) as shown. Use a pozi screwdriver to turn fittings (M) clockwise to fix.

Fitting



A x 4



B x 4



M x 14




E x 8




D x 4


### Step 1.3

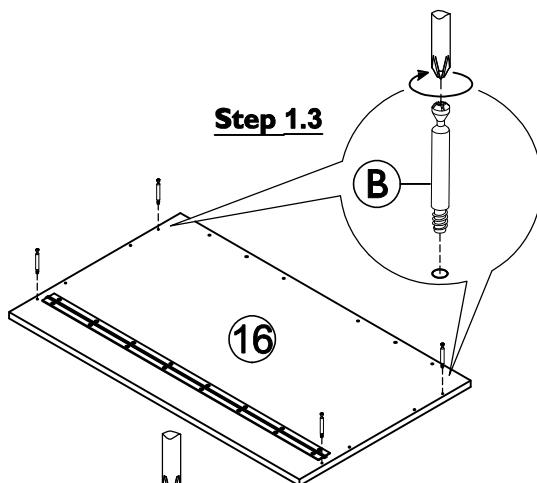


### Step 1.2

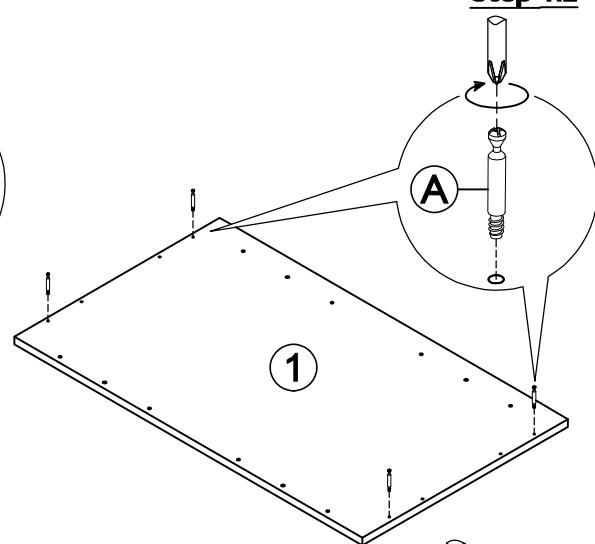


### Step 1.5

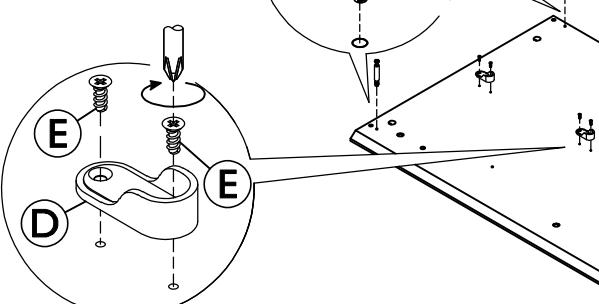

### Step 1.5

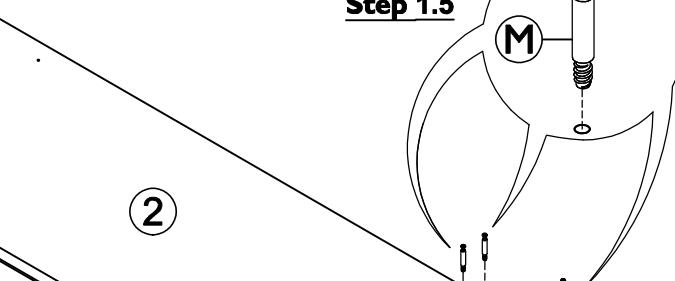

### Step 1.4

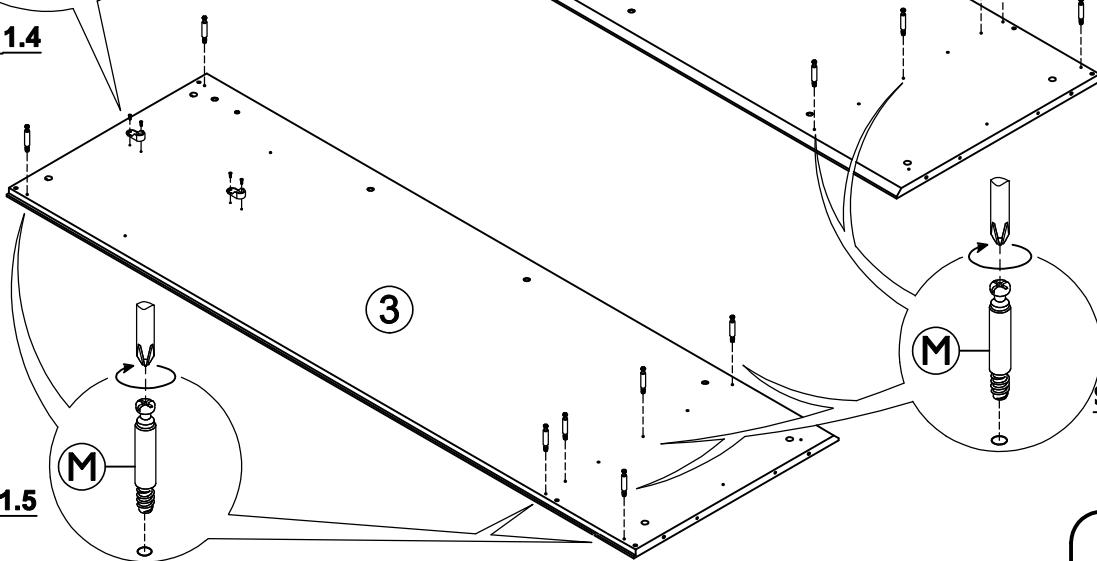

### Step 1.5


Page : 5

## Step by step assembly instructions

### Step

2

- 2.1 : Insert 8x wooden dowels (G) into the pre-drilled holes on parts (2), (3) as shown.
- 2.2 : Insert 20x wooden dowels (H) into the pre-drilled holes on parts (8), (9), (10), (11), (12), (14) as shown.

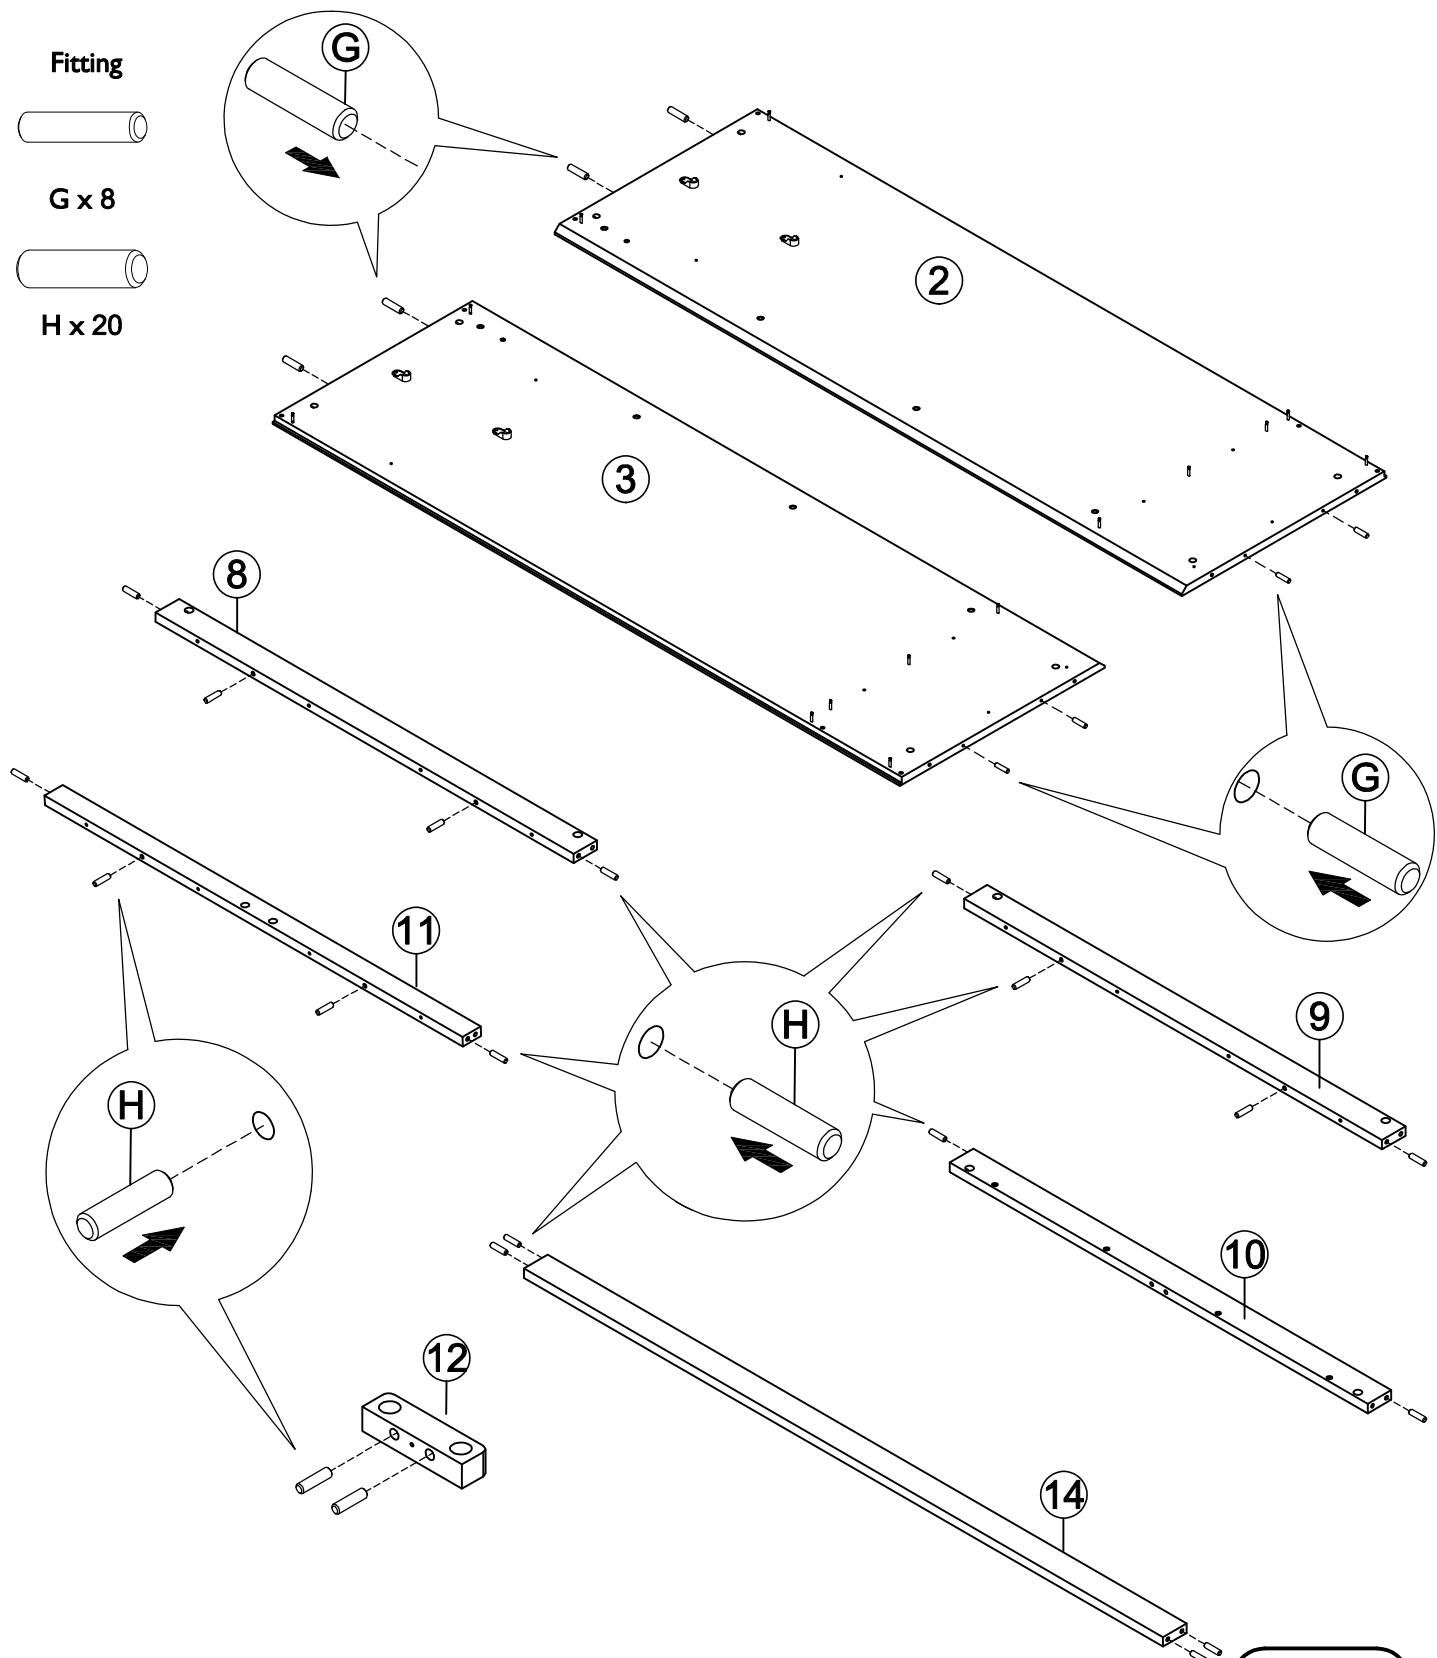

# Step by step assembly instructions


## Step 3

- 3.1 : Attach the wood stopper (12) onto fixed shelf frame (15) as shown. Ensure wooden dowels (H) are aligned correctly with the holes of mating parts before attaching. Using 1x round head screw (jj) to secure part (12) to part (15). Use a screwdriver to turn fitting (jj) clockwise to fix.
- 3.2 : Insert 7x wooden dowels (G) into the pre-drilled holes on part (15) as shown.


Fitting



jj x 1

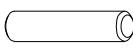


G x 7

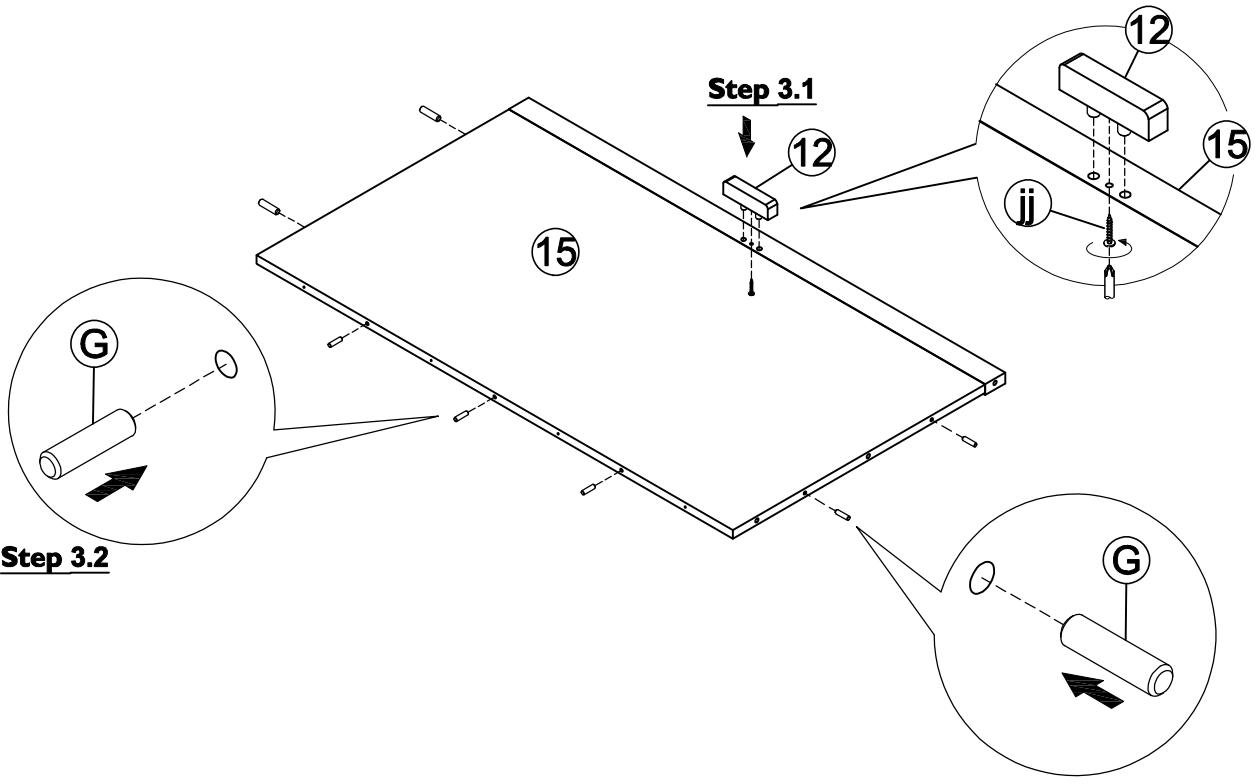

Step 3.2

## Step 4

- 4 : Attach top back rail (8), middle back rail (10) onto vertical back rail (14) as shown. Ensure wooden dowels (H) are aligned correctly with the holes of mating parts before attaching.

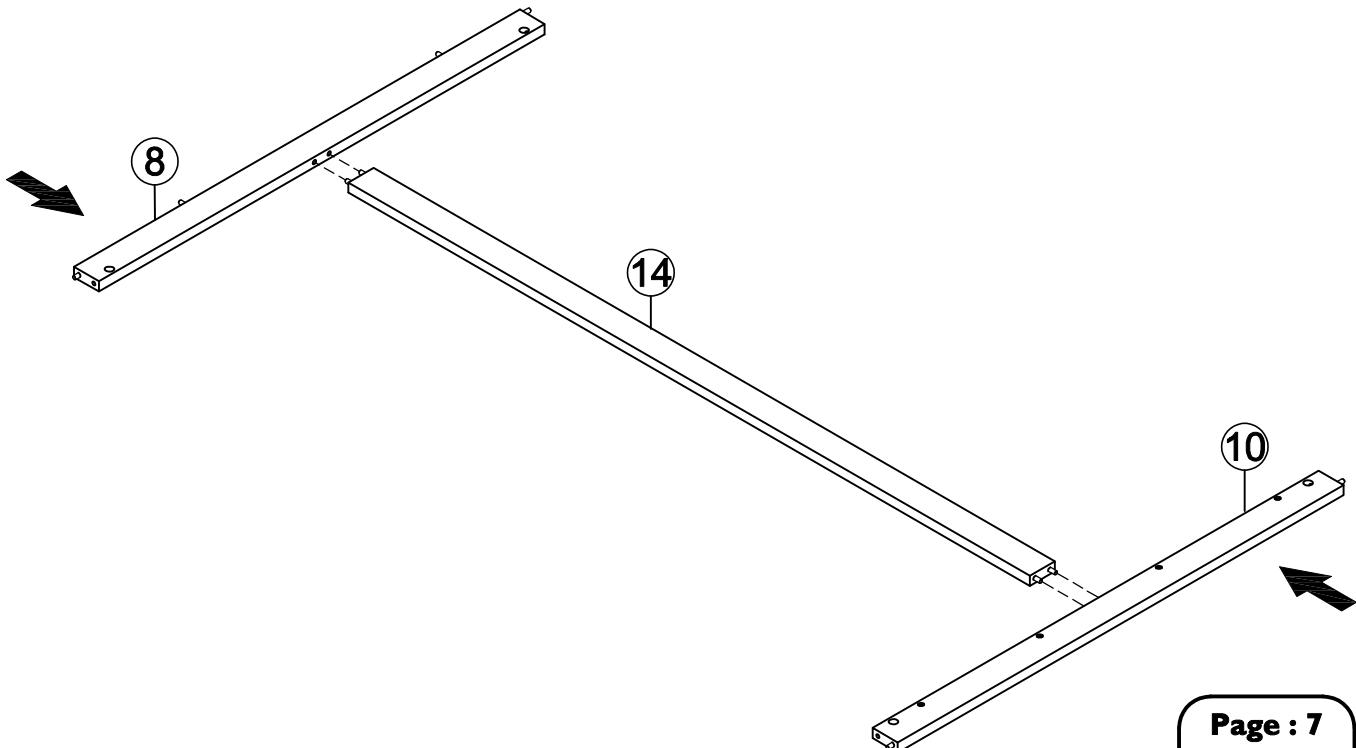

Page : 7

# Step by step assembly instructions

## Step 5

5.1 : Attach structure assembled in **Step 3** onto structure assembled in **Step 4** as shown. Ensure wooden dowels (G) are aligned correctly with the holes of mating parts before attaching.

5.2 : Attach the structure assembled in **Step 5.1**, bottom back rail (9) and top front rail (11) onto side panel left (2) as shown. Ensure cam screws (M), wooden dowels (G) and (H) are aligned correctly with the holes of mating parts before attaching.

5.3 : Secure all parts (8), (9) & (10) to part (2) using 3x cam locks (K) as shown. Use a pozi screwdriver to turn fittings (K) clockwise to fix.

5.4 : Secure all parts (11) to part (2) using 1x cam locks (J) as shown. Use a pozi screwdriver to turn fittings (J) clockwise to fix.

5.5 : Secure part (15) to part (2) using 1x cam locks (K) and 2x cam lock (L) as shown. Use a pozi screwdriver to turn fittings (K), (L) clockwise to fix.

Fitting




J x 1



K x 4



L x 2

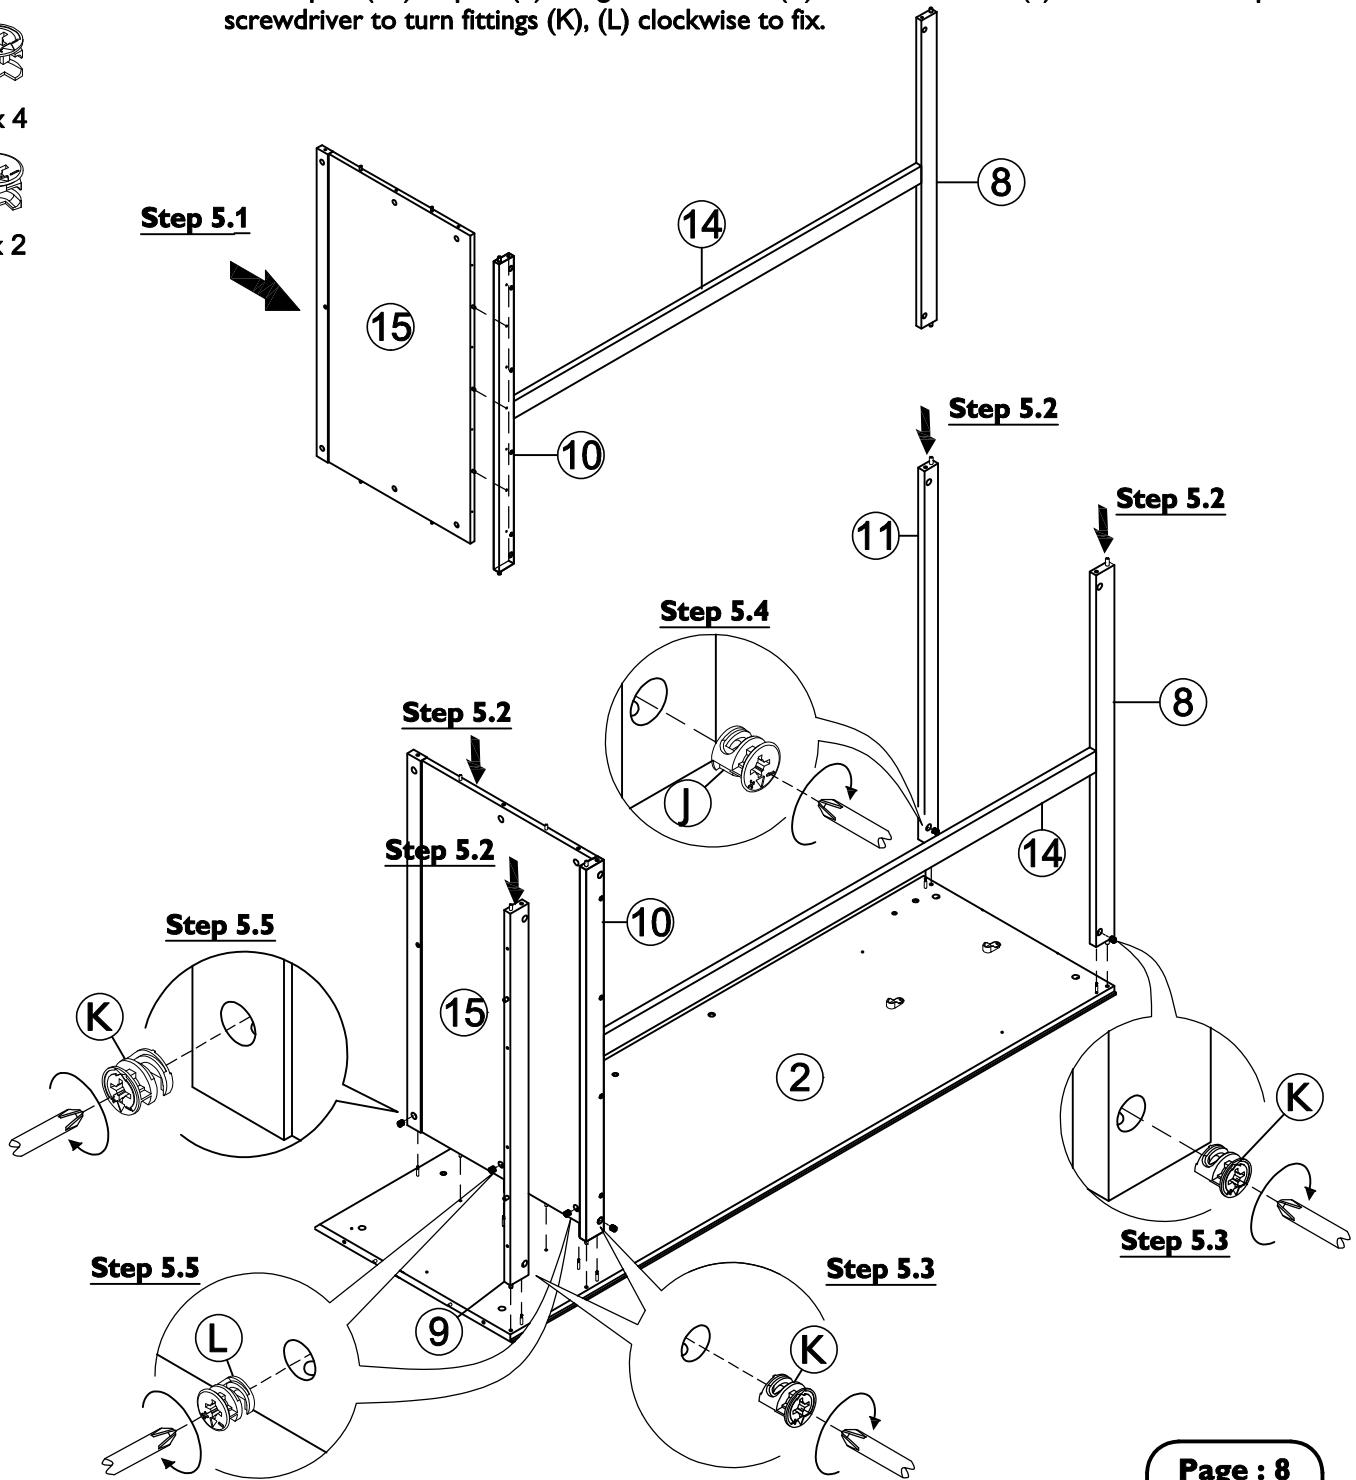

# Step by step assembly instructions

**Step 6** 6.1 : Attach side panel right (3) onto the structure assembled in **Step 5** as shown. Ensure cam screws (M), wooden dowels (G) and wooden dowels (H) are aligned correctly with the holes of mating parts before attaching.


6.2 : Secure all parts (3) to part (8), (9) & (10) using 3x cam locks (K) as shown. Use a pozi screwdriver to turn fittings (K) clockwise to fix.

Fitting  
 J x 1  
 K x 4  
 L x 2  
 P x 4

6.3 : Secure parts (3) to part (11) using 1x cam locks (J) as shown. Use a pozi screwdriver to turn fitting (J) clockwise to fix.

6.4 : Secure part (3) to part (15) using 1x cam locks (K) and 2x cam lock (L) as shown. Use a pozi screwdriver to turn fittings (K), (L) clockwise to fix.

6.5 : Secure part (10) to part (15) using 4x hi-lo screw (P) as shown. Use a pozi screwdriver to turn fittings (P) clockwise to fix.

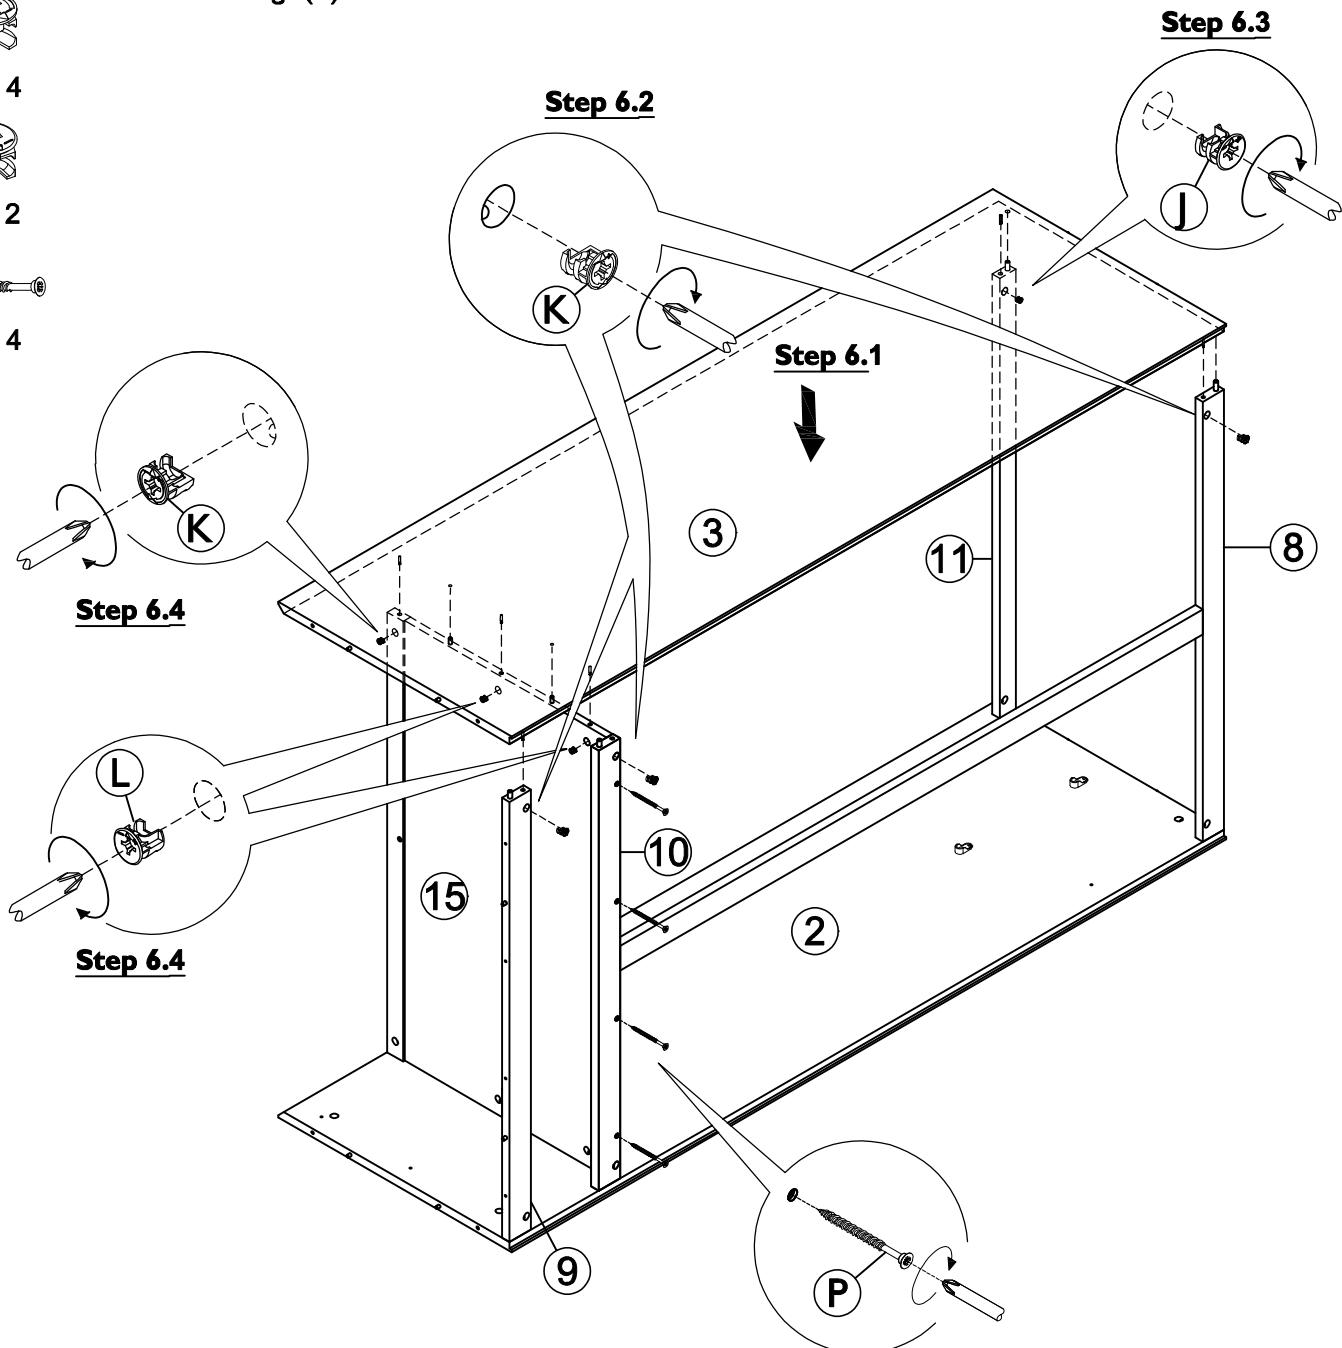

# Step by step assembly instructions

**Step 7** 7.1 : Attach top panel (1) onto the structure assembled in **Step 6** as shown. Ensure steel dowels (A), wooden dowels (G) and wooden dowels (H) are aligned correctly with the holes of mating parts before attaching.

7.2 : Secure part (1) to parts (2) & (3) using 4x grub screws (C) as shown. Use allen key (ff) to turn fittings (C) clockwise to fix.

Fitting 7.3 : Secure part (1) to parts (2) & (3) using 8x confirmat screws (N) as shown. Use allen key (ff) to turn fittings (N) clockwise to fix.




N x 8



C x 4



ff x 1

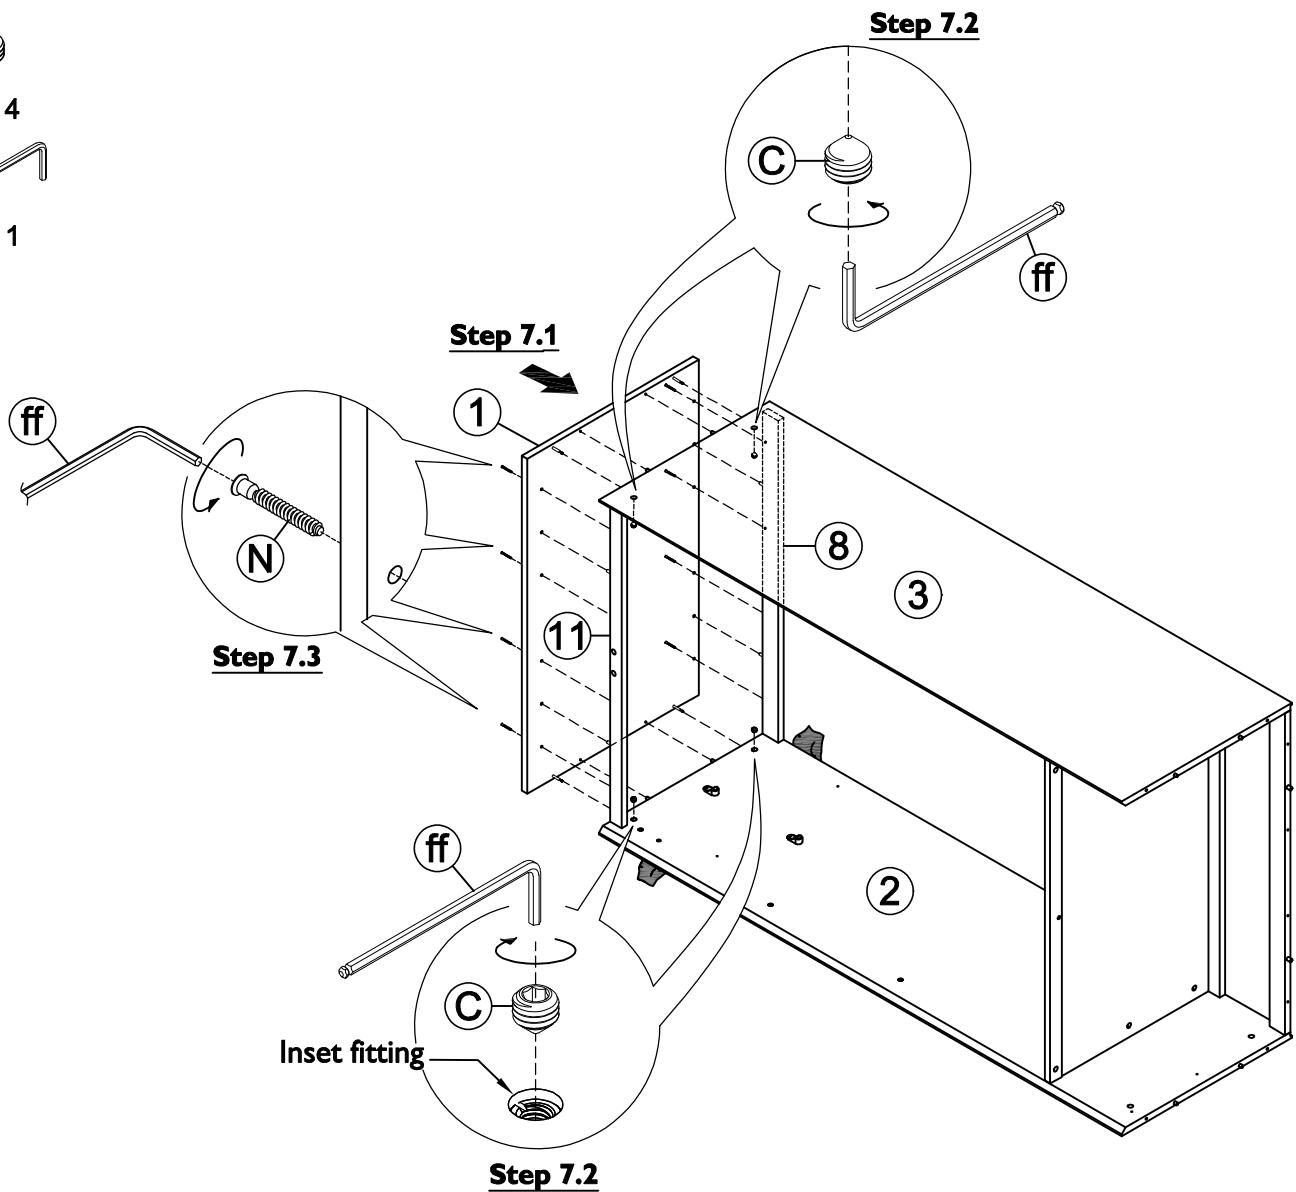

# Step by step assembly instructions

**Step 8**

- 8.1 : Attach bottom panel (16) onto the structure assembled in **Step 7** as shown. Ensure steel dowels (B), wooden dowels (G) and wooden dowels (H) are aligned correctly with the holes of mating parts before attaching.
- 8.2 : Secure part (16) to parts (2) & (3) using 4x grub screws (C) as shown. Use allen key (ff) to turn fittings (C) clockwise to fix.
- 8.3 : Secure part (16) to part (9) using 3x confirmat screws (N) as shown. Use allen key (ff) to turn fittings (N) clockwise to fix.


Fitting




N x 4



C x 4

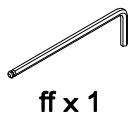

ff x 1

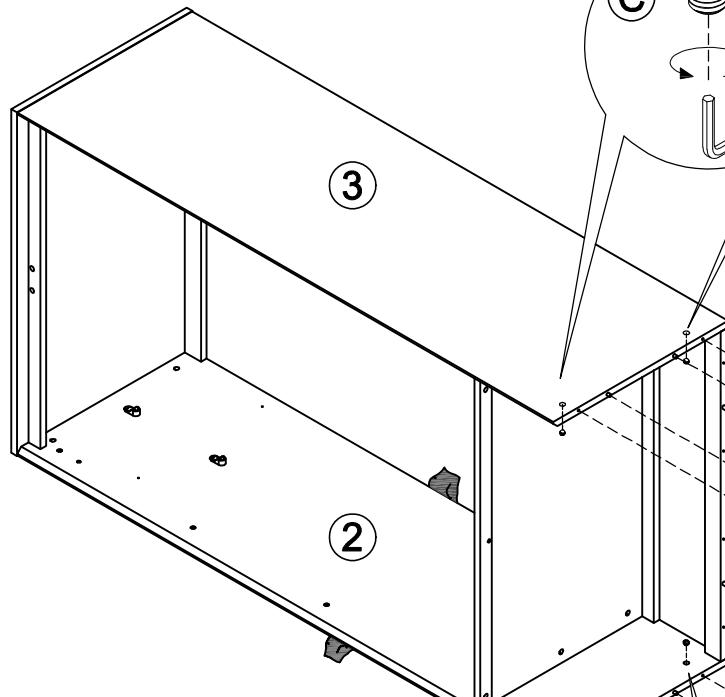

**Step 8.2**

9

16

**Step 8.3**

N



ff

**Step 8.1**

Inset fitting

**Step 8.2**

# Step by step assembly instructions

## Step 9

- 9.1: Attach back panels A (6) & back panel B (7) onto back side of the unit using 64x round head screws (U) as shown. Use a screwdriver to turn fittings (U) clockwise to fix.
- 9.2: Attached 1x mounting plate leg (dd) into bottom panel (16) by screwing 5x flat head screws (S) as shown. Use a phillips screwdriver to turn fittings (S) clockwise to fix.
- 9.3 : Screw each legs (24) & center leg (23) into the mounting plate on bottom panel (16) as shown. Continue to re-tighten until it is securely fastened.  
**Repeat this procedure for the remaining legs (24).**
- 9.4 : With help of assistant, carefully turn the unit upright.

Fitting




U x 64



dd x 1




S x 5

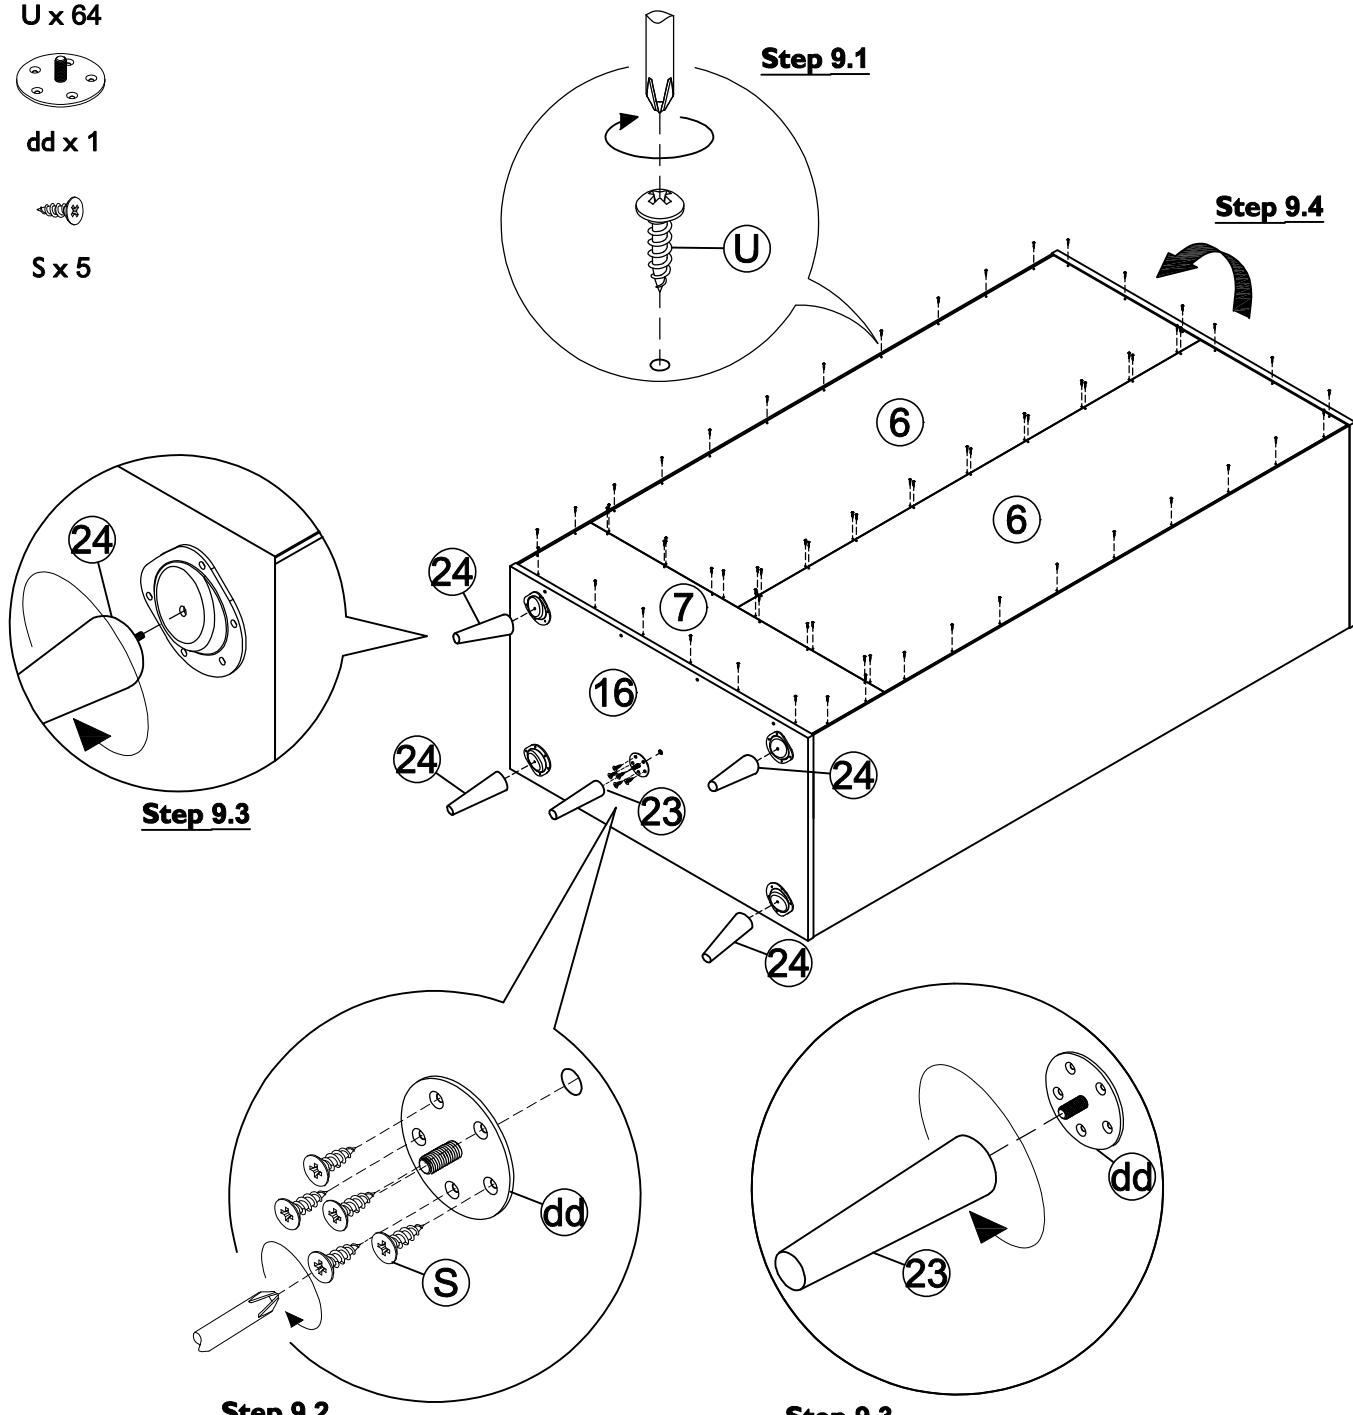

## Step by step assembly instructions

**Step 9** : Attach doors (4) & (5) to side panels (2) & (3) by screwing 8x hex head bolts (Q) into inset fittings that are located on parts (2) & (3) as shown. Ensure the holes on doors (4) & (5) are aligned correctly with the mating spring pins on side panels (2) & (3) before attaching. Use allen key (ff) to turn fittings (Q) clockwise to fix.


Fitting

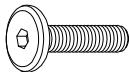

Q x 8




ff x 1

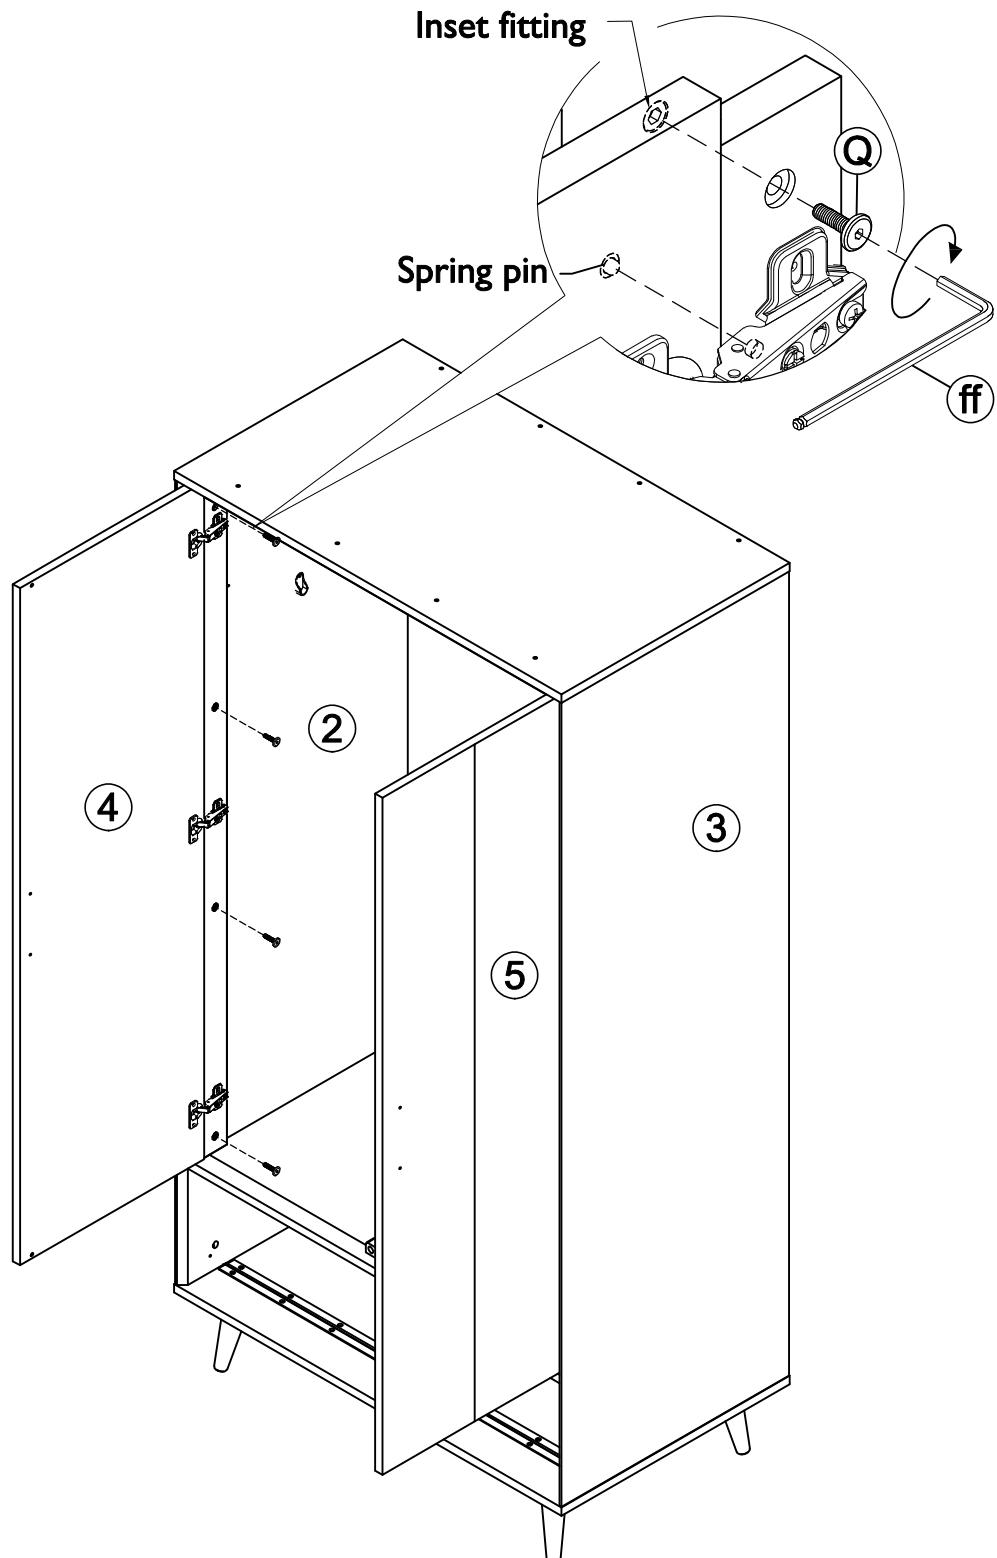

# HINGE ADJUSTMENT INSTRUCTIONS


## LATERAL ADJUSTMENT

by screw adjustment.

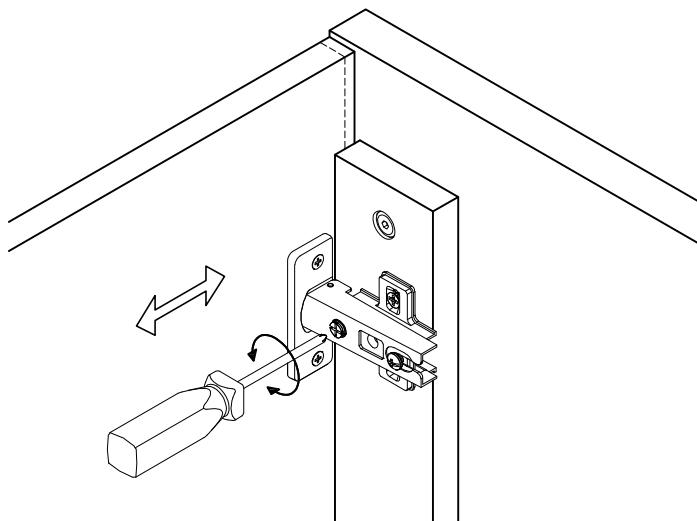


## FRONT-TO-BACK

by slackening and retightening  
the hinge-arm mounting screw.

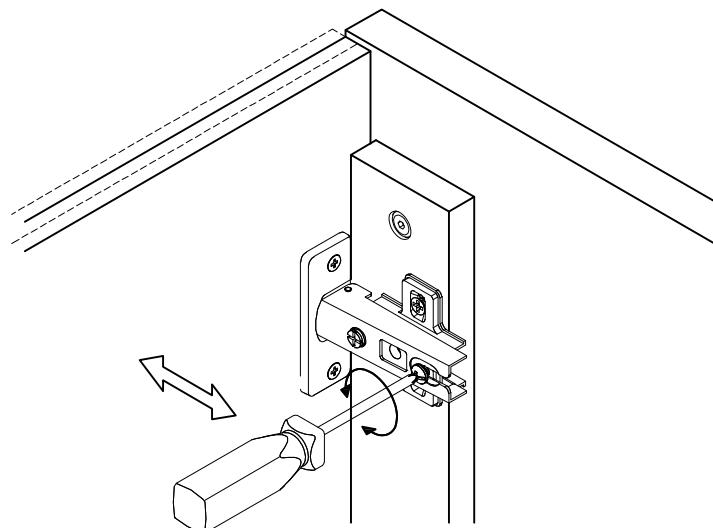

## VERTICAL ADJUSTMENT

via slots on mounting  
plate by slackening and  
retightening the screws  
on mounting plate

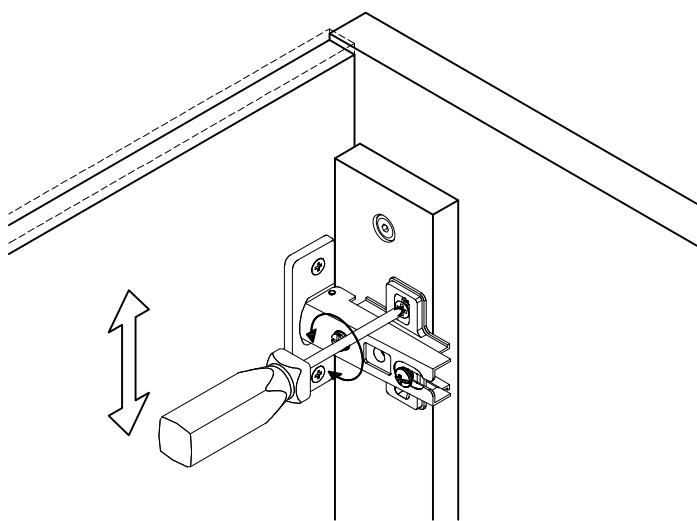

# Step by step assembly instructions

## Step 10

- 10.1 : Insert 2x wood shelf supports (R) into the pre-drilled holes in left side panel (2) as shown.
- 10.2 : Tilt removable shelf (13) to a suitable angle as shown in the picture so as to slide it in.
- 10.3 : Slide removable shelf (13) into the unit. Ensure the holes on removable shelf (13) are facing down, then lower the left side of part (13) onto the pins of wood shelf supports (R) as shown.
- 10.4 : Lift up right side of removable shelf (13).
- 10.5 : Insert 2x wood shelf supports (R) into the pre-drilled holes in right side panel (3) as shown.
- 10.6 : Lower removable shelf (13) onto the pins of wood shelf supports (R) as shown.
- 10.7 : Place hanger rail (ee) onto hanger rail supports (D) on left & right sides of unit as shown.
- Note :** Hanger rail (ee) can be installed in both up and down of the cabinet.
- 10.8 : Attach 2x handles (Y) to the front of doors (4) & (5) using 4x round head bolts (Z) as shown. Use a screwdriver to turn fittings (Z) clockwise to fix.

Fitting



R x 4




ee x 1



Y x 2



Z x 4

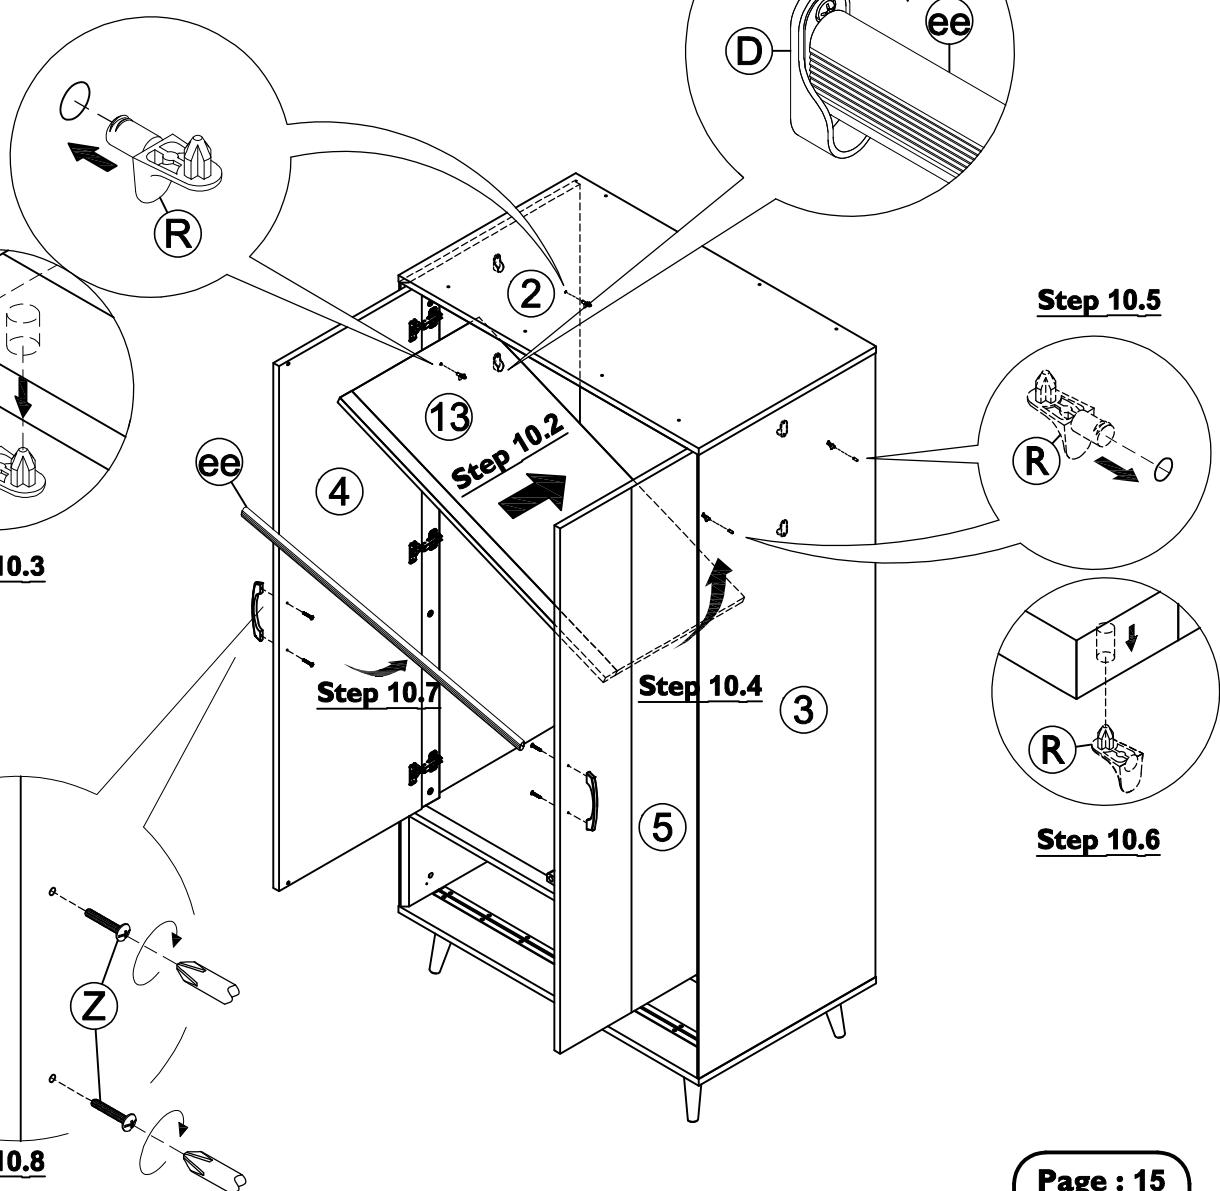

Page : 15

# Step by step assembly instructions

## Step

**11**

11.1 : Attach 2x small steel dowels (W) into drawer front (17) by screwing fittings (W) into the inset fittings that are located on part (17) as shown. Ensure the direction of the holes on fittings (W) are facing correctly as per diagram.



Fitting

W x 2

G x 4

M x 1

**Step 11.2**

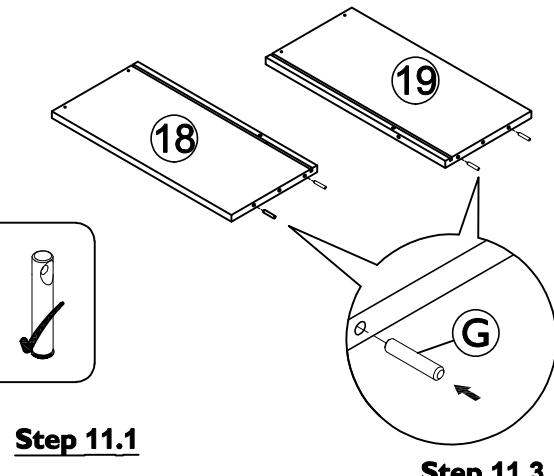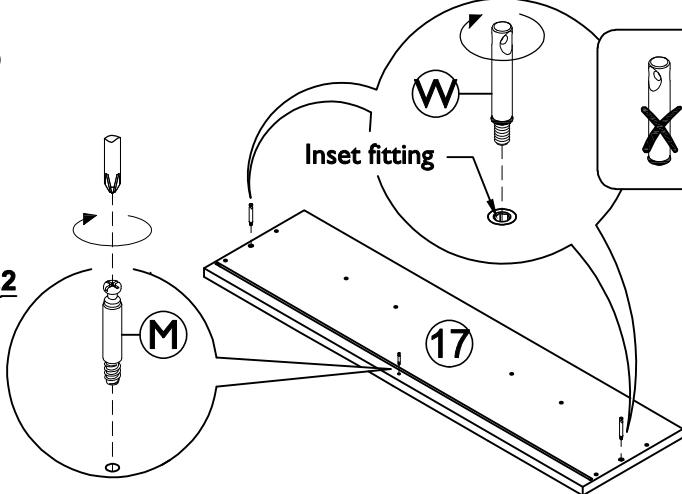

**Step 11.1**

**Step 11.3**


## Step

**12**

Attach drawer sides (18) & (19) onto drawer front (17) using 2x small grub screws (X) as shown. Ensure small steel dowels (W) and wooden dowels (G) are aligned correctly with the holes of mating parts before attaching. Use a pozi screwdriver to turn fittings (X) clockwise to fix.

Fitting

X x 2

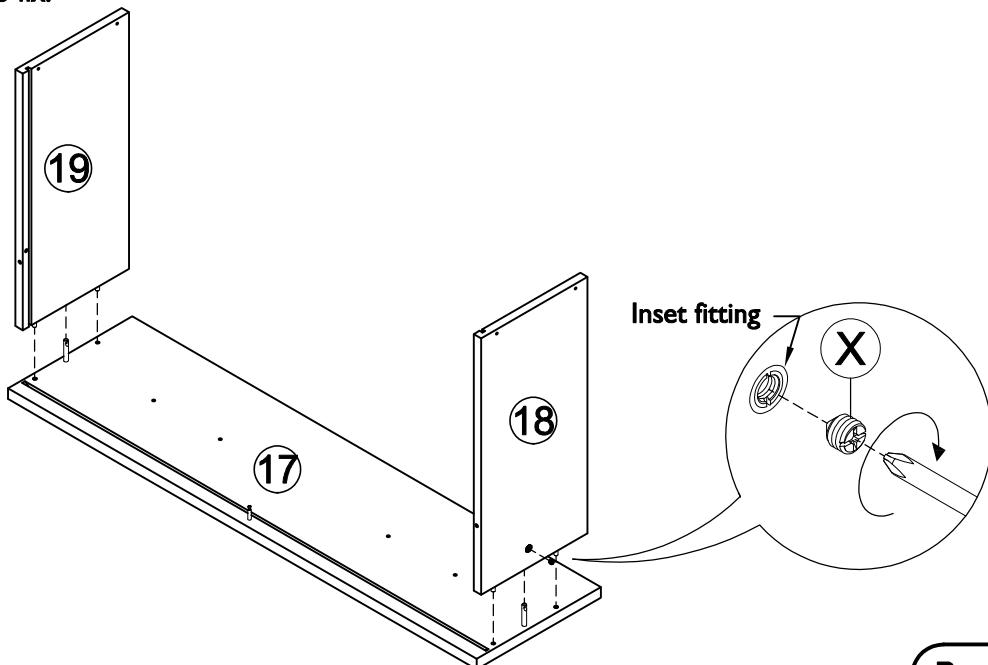

**Page : 16**

# Step by step assembly instructions

## Step 13

Fitting



V x 4



T x 1



J x 1




Y x 2



Z x 4

- 13.1: Slide drawer bottom (21) into the slots inside drawer sides (18) & (19) as shown. Ensure the drawer bottom (21) are placed completely in the slot of drawer front (17).
- 13.2: Attach support drawer bottom (22) onto drawer front (17). Ensure 1x cam screw (M) is aligned correctly with the holes of mating parts before attaching.
- 13.3 : Place drawer back (20) onto the top of constructed drawer box. Ensure the slot under drawer back (20) are aligned correctly with drawer bottom (21) before attaching.
- 13.4: Secure drawer back (20) to the drawer box using 4x round head screws (V) as shown. Use a screwdriver to turn fittings (V) clockwise to fix
- 13.5 : Secure support drawer bottom (22) to part (20) using 1x round head screw (T) as shown. Use a screwdriver to turn fittings (T) clockwise to fix.
- 13.6: Secure support drawer bottom (22) to part (17) using 1x cam lock (J) as shown. Use a pozi screwdriver to turn fittings (J) clockwise to fix.
- 13.7: Attach 2x handles (Y) to drawer front (17) using 4x round head bolts (Z) as shown. Use a screwdriver to turn fittings (Z) clockwise to fix.

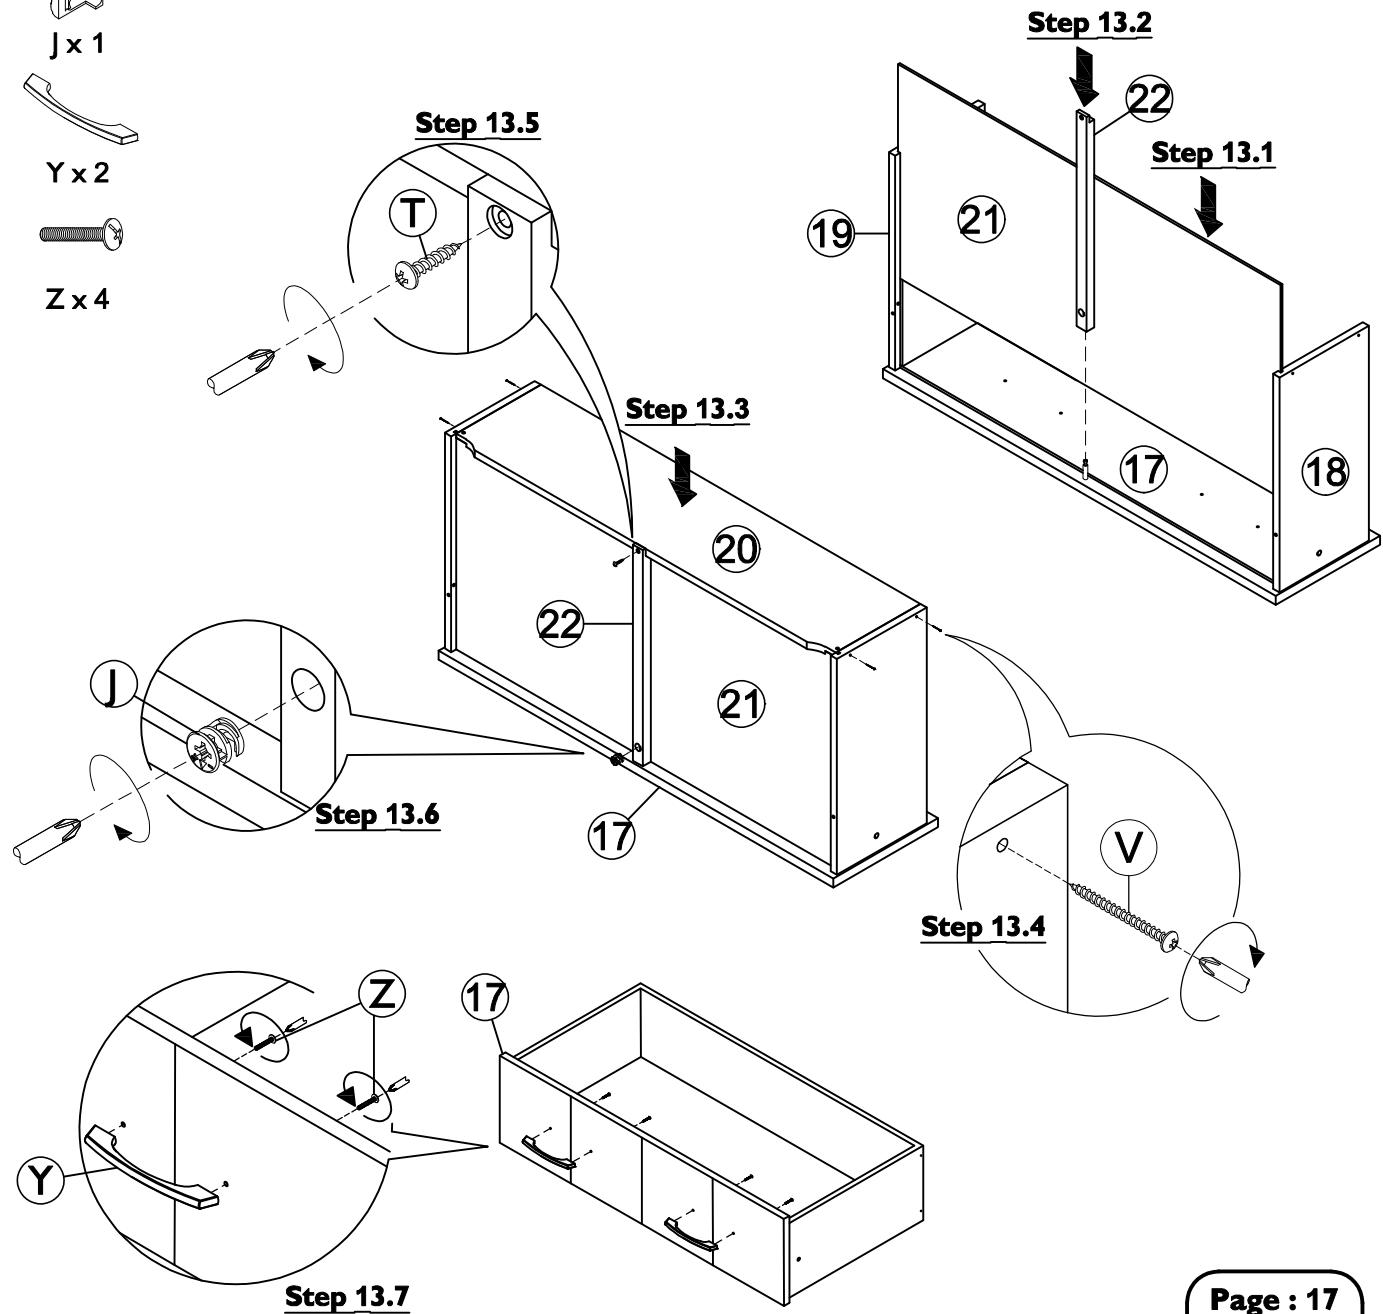

# Step by step assembly instructions

## Step 14

14.1 : Attach left runner (gg) and right runner (hh) onto the pre-drilled holes on side panels (2) & (3) using 4x varianta screws (F) and 2x flat head screws (S) as shown. Use a screwdriver to turn fittings (F) & (S) clockwise to fix as shown.


Note : The metal edges may be sharp, please use care when attaching to the drawer.

14.2 : Insert the assembled drawer in step 13 into the unit as shown.


Fitting



F x 4

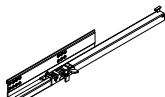





gg x 1

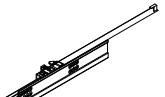

hh x 1



S x 2

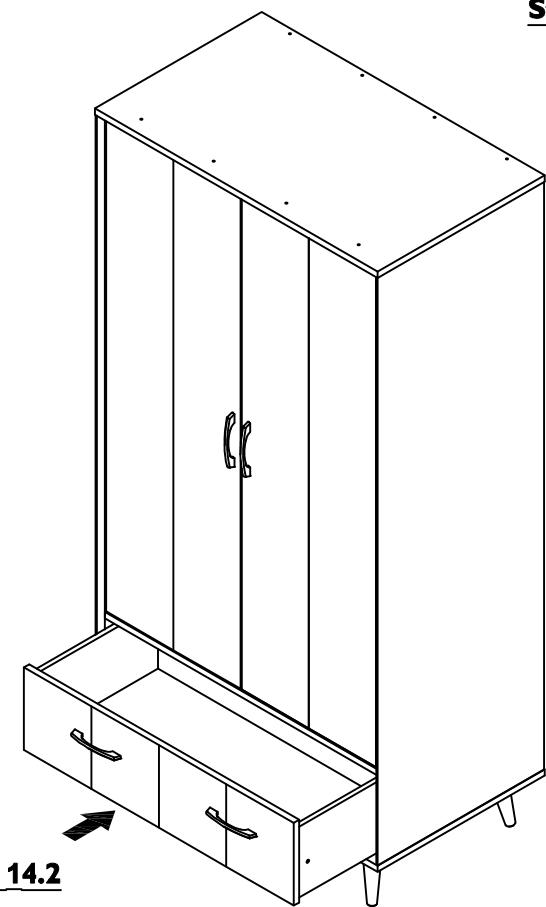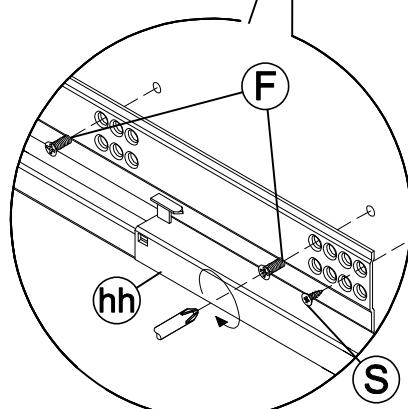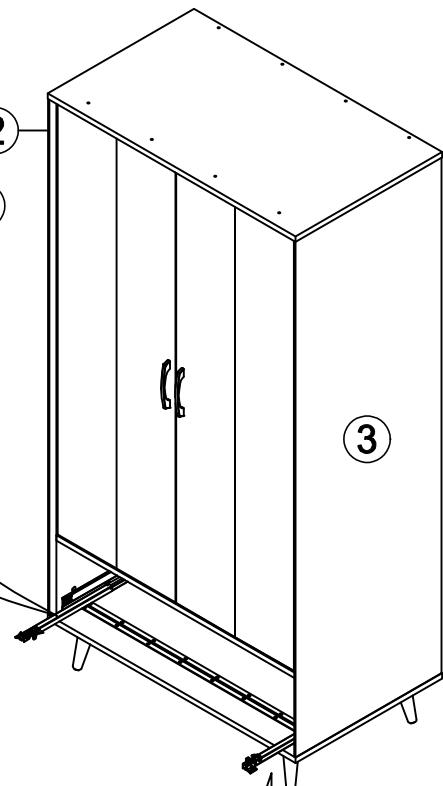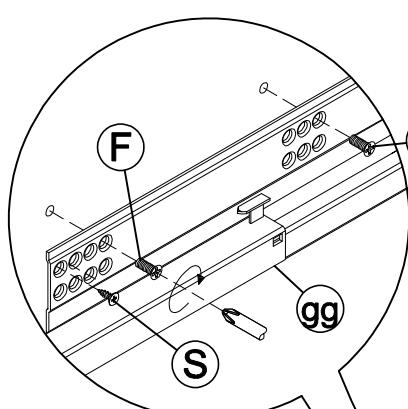


Step 14.2

**Assembly is complete.**


**Page : 18**

# TANDEM RUNNER ADJUSTMENT INSTRUCTION


## ASSEMBLE

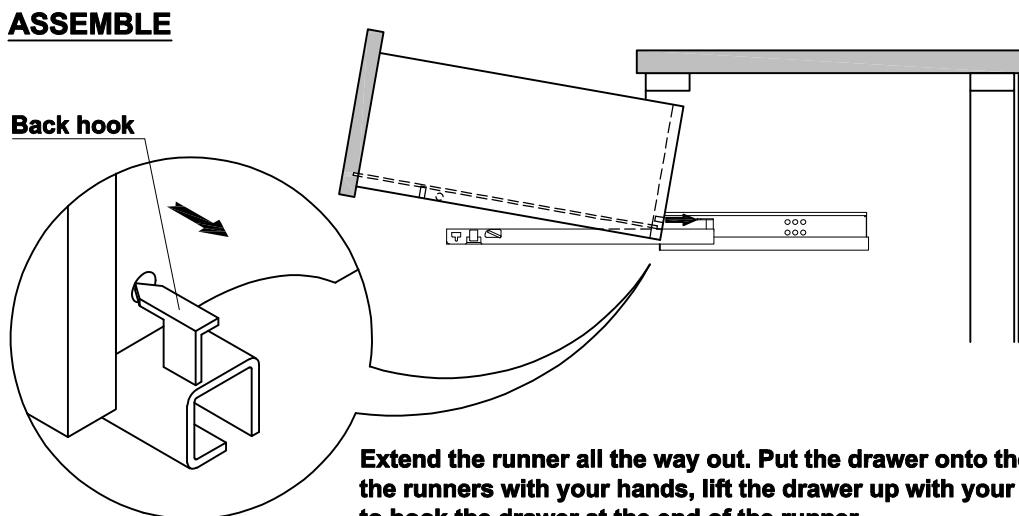

Extend the runner all the way out. Put the drawer onto them then hold both the runners with your hands, lift the drawer up with your thumbs and push to hook the drawer at the end of the runner.

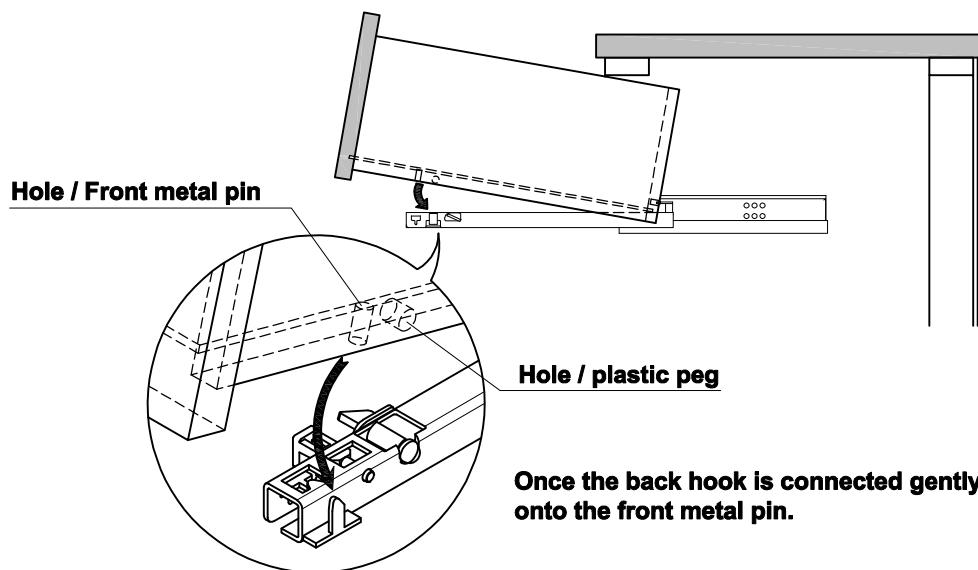



Once the back hook is connected gently lower the drawer onto the front metal pin.

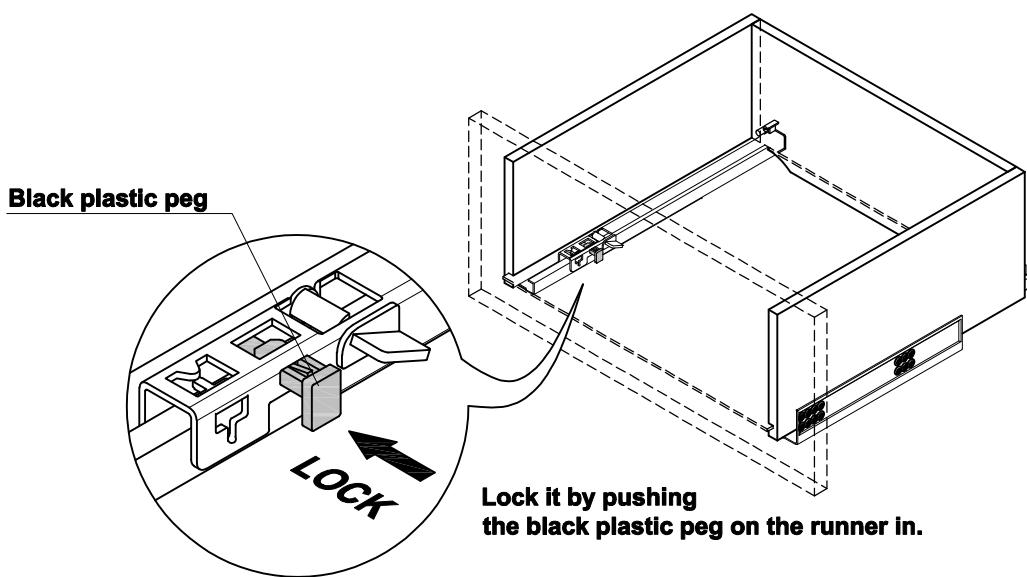

Lock it by pushing the black plastic peg on the runner in.

# TANDEM RUNNER ADJUSTMENT INSTRUCTION

## REMOVE

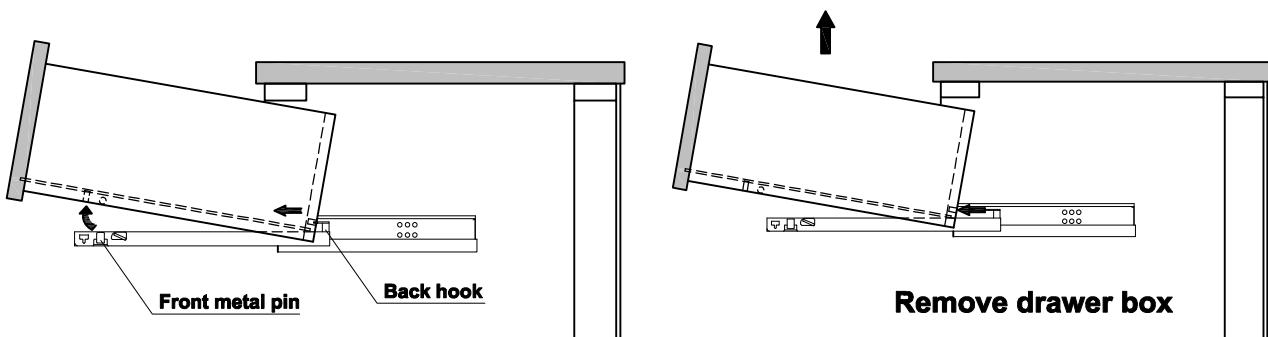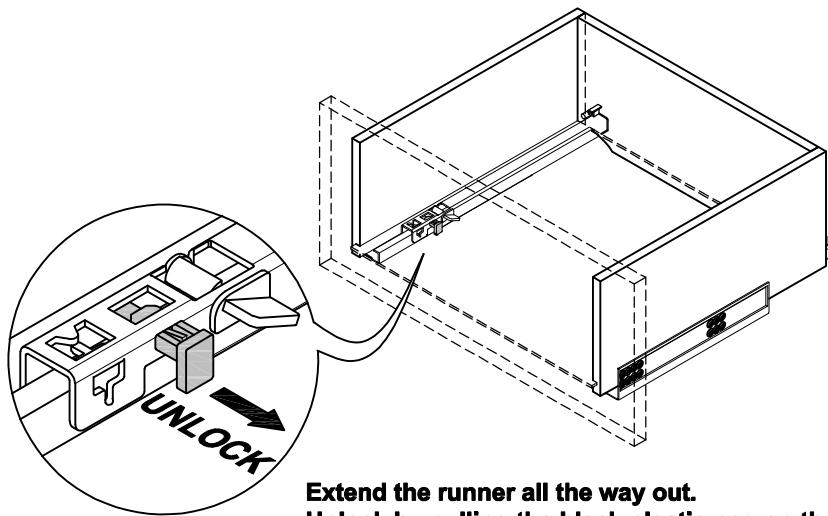

Hold runners with both of your hands.  
Carefully lift the drawer front up from the front metal pin, then slide forward to remove from back hooks.

## VERTICAL ADJUSTMENT ( $\pm 2.5$ mm)

