


UPHOLSTERED ARM CHAIR

Stock number: 6048/9-09UA-DGY/OWV

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

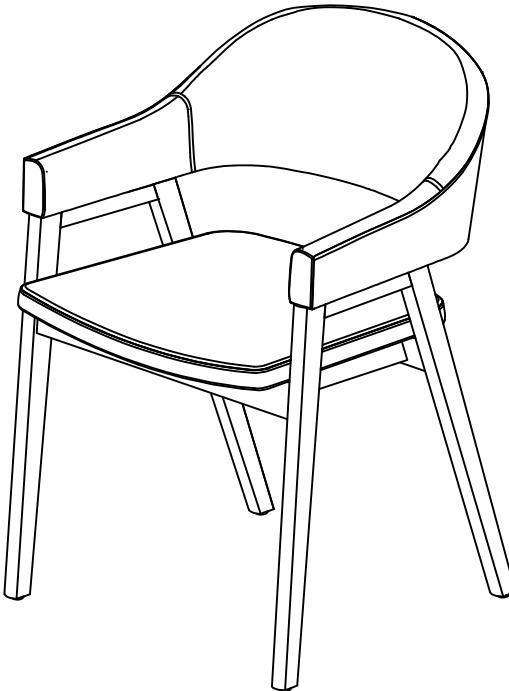

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools



(Included)



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product takes approximately **15 MINUTES** to assemble with **1 PEOPLE**.

All assembly should be performed on a flat, stable, clean and soft surface.



This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

IMPORTANT: Retain these instructions for future reference.

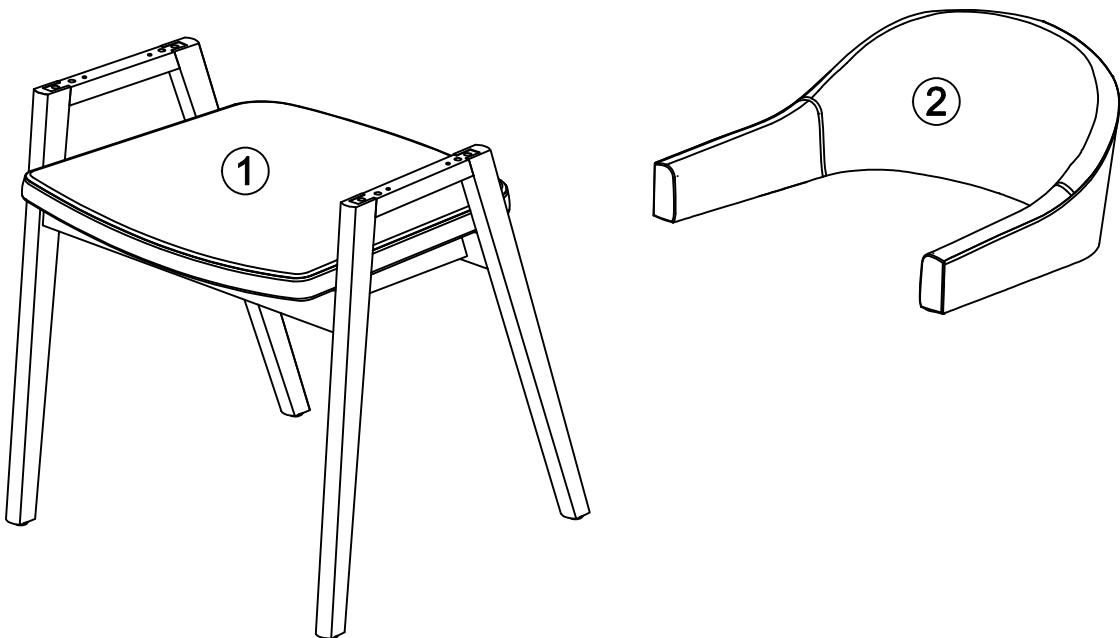

Fittings and parts checklist

Item	Description	Qty.	Item	Description	Qty.		
1	Seat frame	x 1	2	Back frame	x 1		
A	Hex head bolt M8x70mm		x 4	D	Wooden dowel Ø6x30mm		x 2
B	Lock washer Ø8.4x2mm		x 4	E	Allen key M4x30x110mm		x 1
C	Flat washer Ø8.4x17x1.6mm		x 4	F	Lock dowel Steel Ø5x36mm		x 2

Step By Step Assembly Instructions

Step

1

- 1.1: Lay the chair on a flat, stable, clean and soft surface.
- 1.2: Attach wooden dowels (D) & lock dowel steel (F) onto the pre-drilled holes on back frame (2) as shown.
- 1.3: Attach back frame (2) onto seat frame (1) as shown. Ensure wooden dowels (D) & lock dowel steel (F) are aligned correctly with the holes of mating parts before attaching.
- 1.4: Secure back frame (2) onto seat frame (1) using hex head bolts (A), lock washers (B) and flat washers (C) as shown. Ensure the pre-drilled holes on seat frame (1) are aligned correctly to the holes on back frame (2). Use allen key (E) to turn fittings (A) clockwise to fix.

Repeat above procedure for the second chair.

Fitting



A x 4



B x 4



C x 4




D x 2



E x 1




F x 2

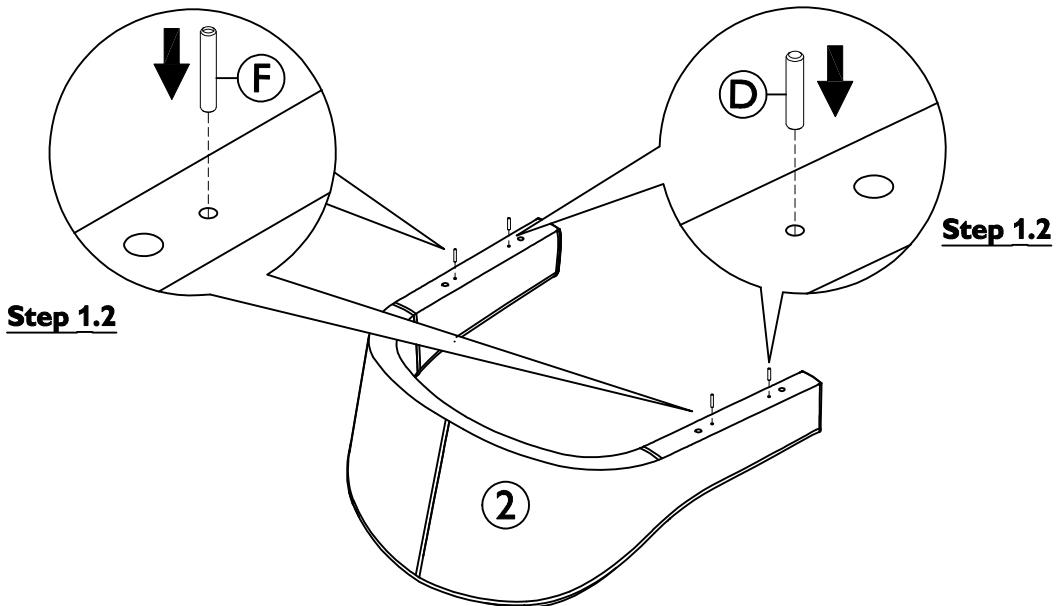


Step 1.2

Step 1.2


Step 1.3

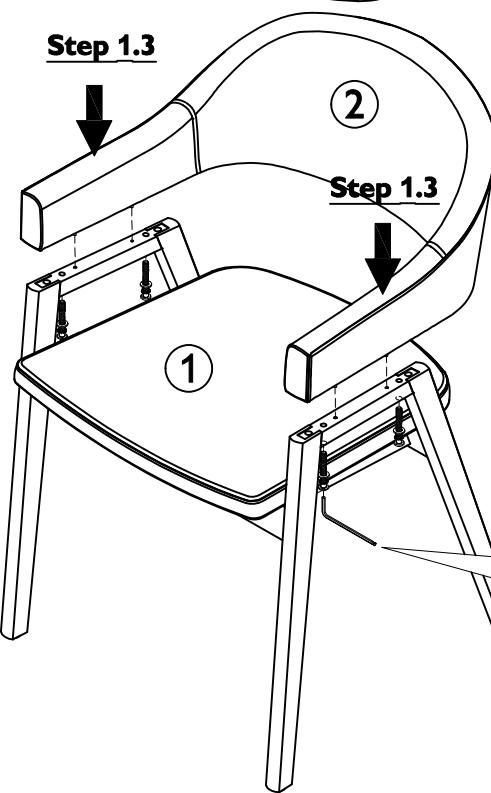

Step 1.3

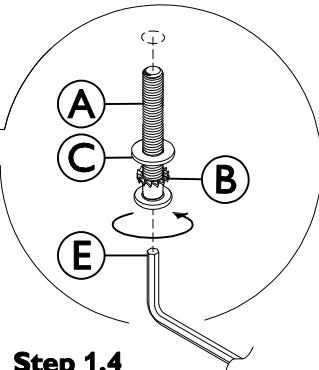

Step 1.4

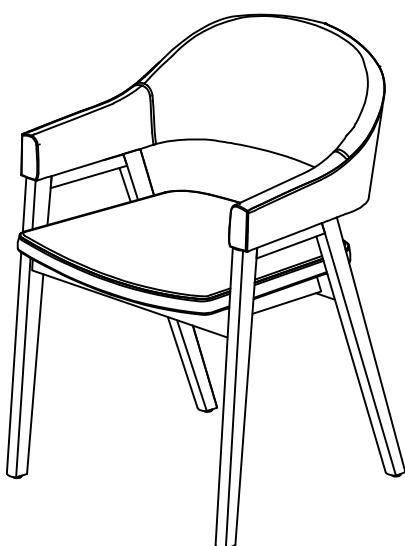

Assembly is complete.