



HOW TO MEASURE UP FOR SLIDING DOORS

HOW TO MEASURE UP FOR SLIDING DOORS



It's really important to prepare your project by measuring up your space to ensure your doors fit correctly.

Why we need your measurements:


Height – No ceiling and floor are perfectly level so to ensure our doors fit correctly we need 3 measurements A, B and C. Ours sliding wardrobes are made to fit an opening height of 2314mm. If your ceiling is higher than this then a dropdown will be installed by our install team at a maximum of 200mm.

Width – Measure at the top and bottom of your space D, E & F.

Depth – Measure the depth of your space, allowing for a minimum depth of 620mm (which allows for the depth of the doors and interior units). See 'Costco Measuring Form'.

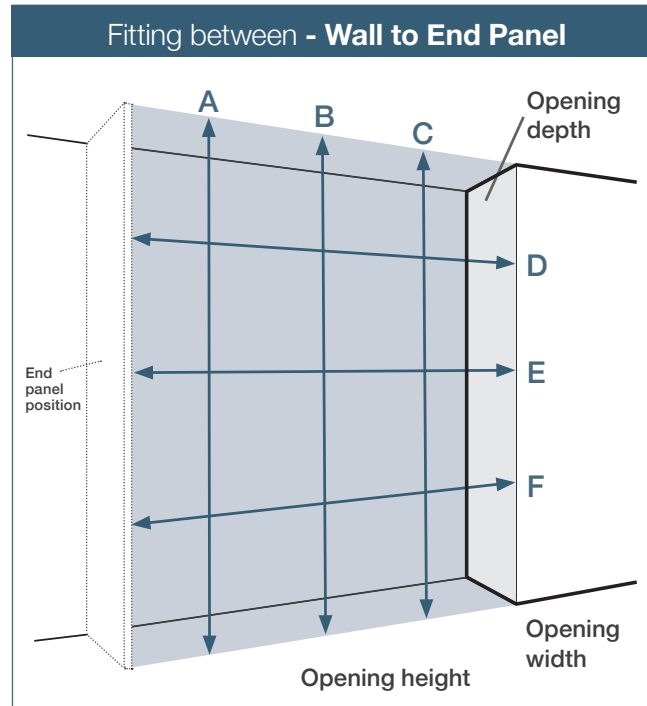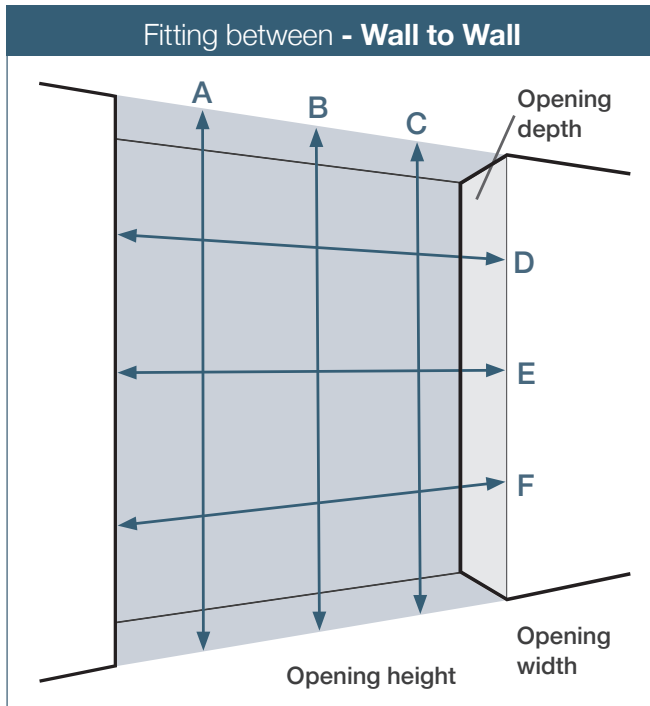

Measure from your wall to the outside of where you want your wardrobe to finish. (Your end panel will be fitted to the inside of this measurement).
NOTE: Finished wardrobe may not be to exact measurements given when using end panels).

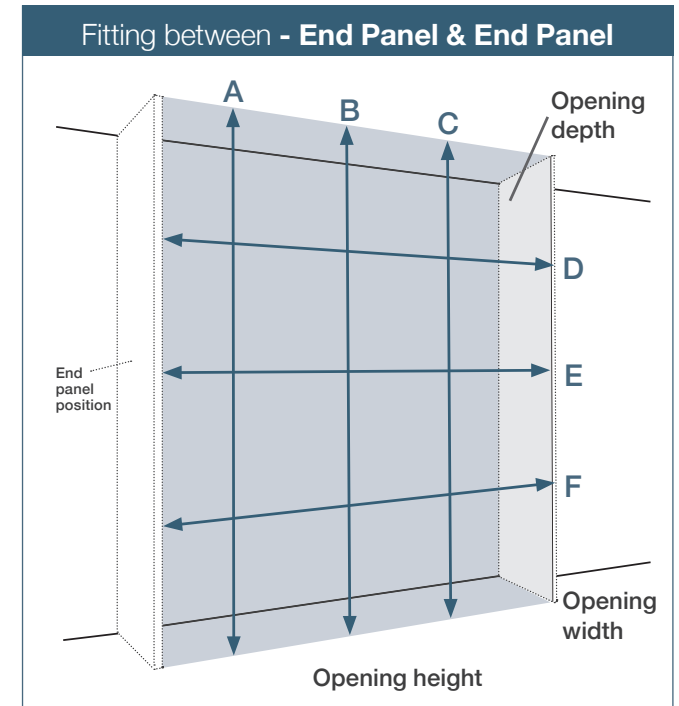

Measure from where your end panels will be to create your wardrobe. (Your end panels will be fitted to the inside of this measurement).
NOTE: Finished wardrobe may not be to exact measurements given when using end panels).

! Please check your opening for any obstructions, i.e. plug sockets and radiators, prior to installation.