

space·pro[®]

THE LOOK YOU LOVE

INSTALLATION METHODS


INSTALLATION METHODS

If your opening is too wide



The use of T-liners and Liners are used when walls are not parallel, bringing in opening widths to ensure doors fit perfectly, creating a professional finish.

Making your opening square

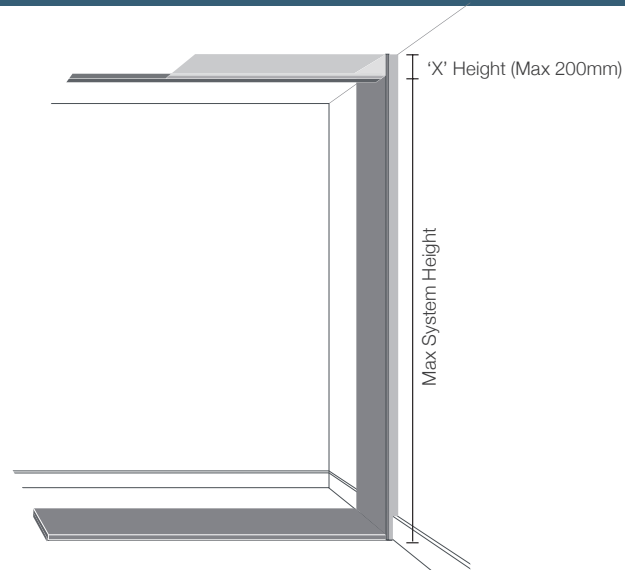

Liners are used to create a subsil for the floor track. We use these to ensure the track is level so that the doors run as smooth as possible. The subsil also allows for any flooring (i.e. carpet) to run underneath it, giving a neater finish.

If your ceiling is too high




Doors are made to fit an opening height of 2314mm. Woodwork will be used to create the necessary 'dropdown' bridging any gap from the top of the track to the ceiling (max 200mm).


This will vary from home to home. Our Installers will take care of everything for you on the install day.

⚠ Please check your opening for any obstructions, i.e. plug sockets and radiators, prior to installation.


DIFFERENT INSTALLATION OPTIONS DEPENDING ON ROOM DESIGN / LAYOUT

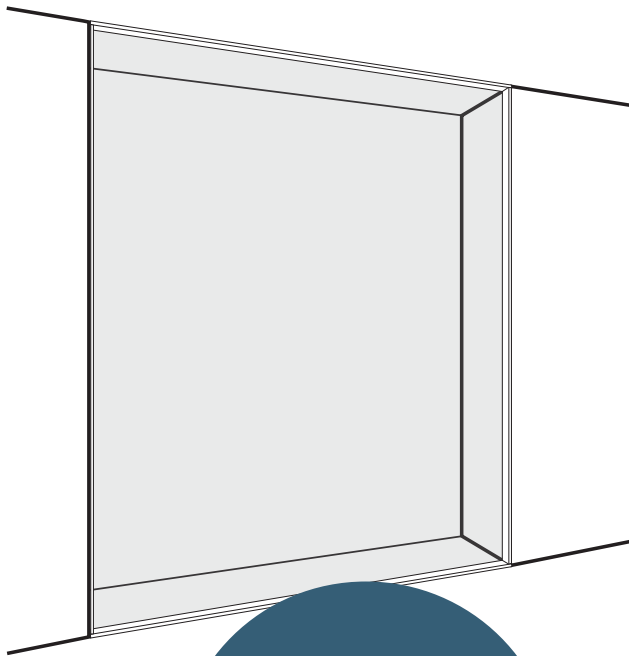

Fitiing
between
- Wall & Wall

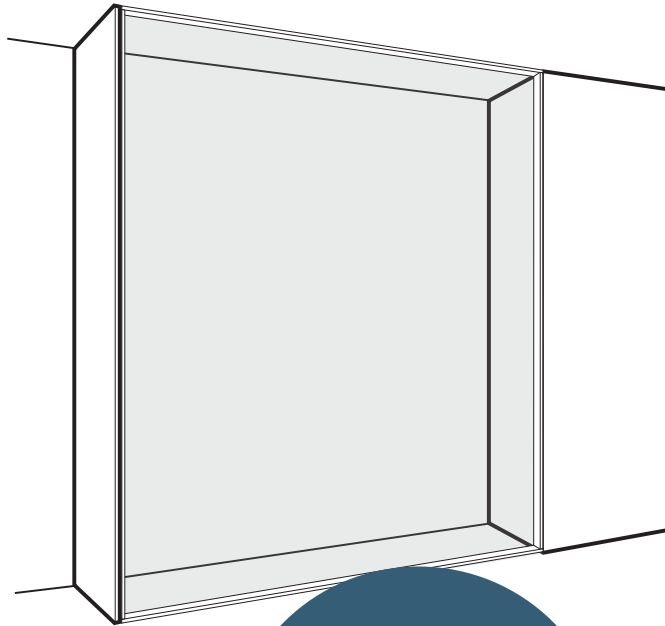

Fitiing
between
**- Wall & End
Panel**

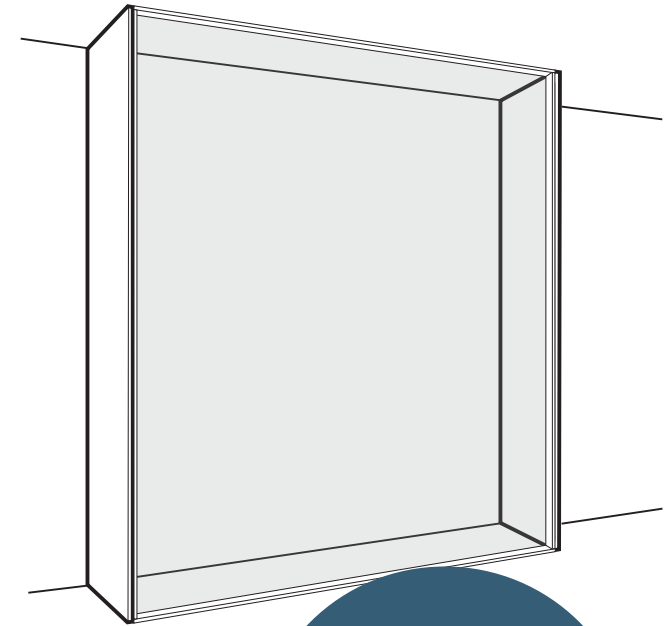

Fitiing
between
**- End Panel &
End Panel**

⚠ Please check your opening for any obstructions, i.e. plug sockets and radiators, prior to installation.