


135CM-150CM UPH BEDSTEAD

Stock number: 4007-43/44

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

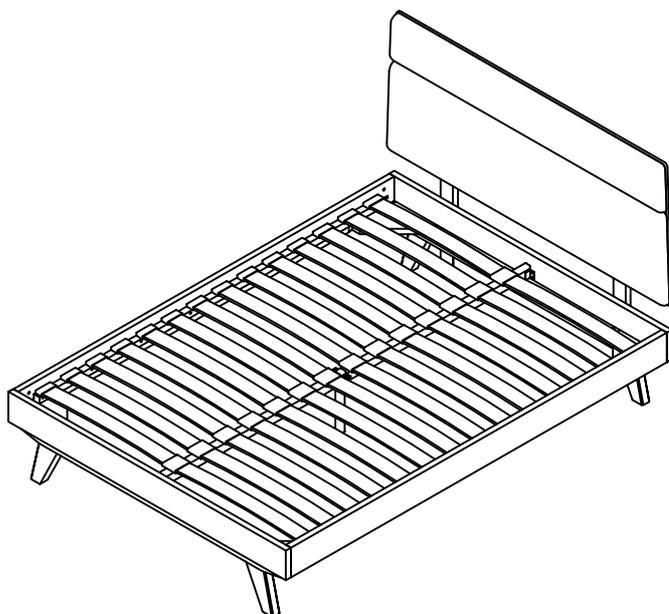


Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools : Pozi screwdriver and Phillips screwdriver




Pz 2 or Pz 3

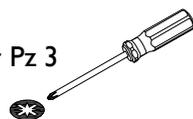

Ph 2



(Included)

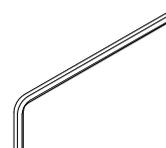

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product takes approximately **60 MINUTES** to assemble with **2 PEOPLE**.

All assembly should be performed on a flat, stable, clean and soft surface.






This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

IMPORTANT: Retain these instructions for future reference.

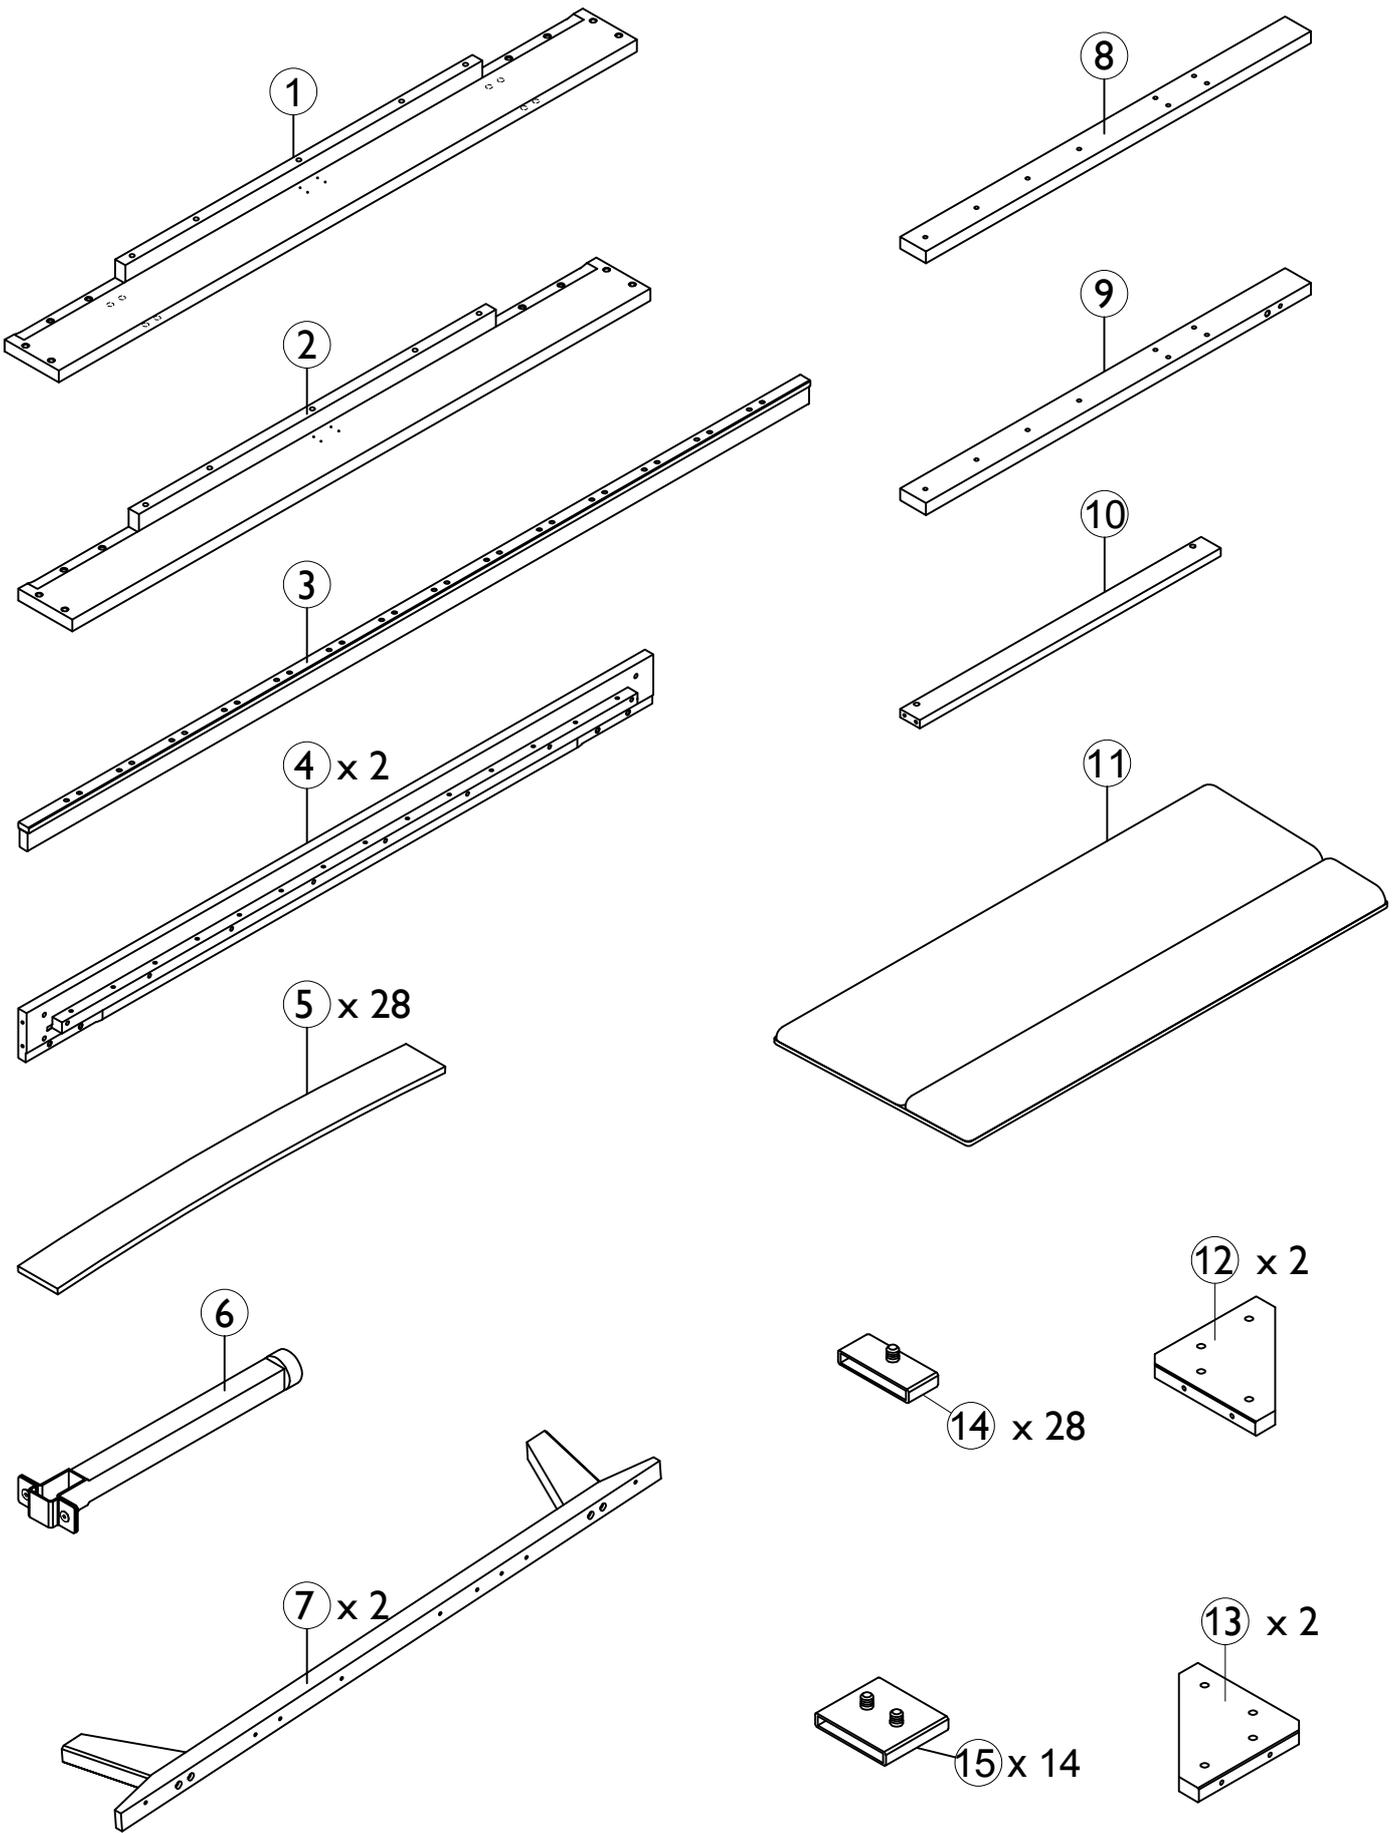

Fittings and parts checklist

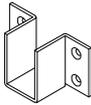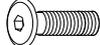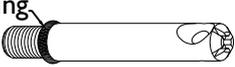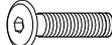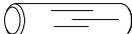Item	Description	Qty.	Item	Description	Qty.
1	Head end rail	x 1	10	Horizontal rail	x 1
2	Foot end rail	x 1	11	Head board	x 1
3	Metal center rail	x 1	12	Support leg left	x 2
4	Side rail	x 2	13	Support leg right	x 2
5	Sprung Slat	x 28	14	End plastic sleeve	x 28
6	Adjustable metal center leg	x 1	15	Center plastic sleeve	x 14
7	Leg rail	x 2			
8	Head vertical left	x 1			
9	Head vertical right	x 1			
A	Bracket 	x 2	F	Allen key M4 x 30 x 107mm 	x 1
B	Flat head screw Ø4 x 17mm 	x 8	G	Hex head bolt M6 x 30mm 	x 8
C	Steel dowel Ø7 x 49.5mm  "O"ring	x 18	H	Hex head bolt M6 x 40mm 	x 20
D	Grub screw 	x 26	K	Steel dowel Ø7 x 70mm  "O"ring	x 8
E	Wooden dowel Ø8 x 30mm 	x 8			

Step By Step Assembly Instructions

- Step 1**
- 1.1 : Lay all parts on a flat, stable, clean and soft surface.
- 1.2 : Attach brackets (A) onto the pre-drilled holes on head end rail (1) and foot end rail (2) using 8x flat head screws (B) as shown. Use a screwdriver to turn fittings (B) clockwise to fix.
- 1.3 : Insert 6x wooden dowels (E) into the pre-drilled holes on head end rail (1) and foot end rail (2) as shown.

Fitting




A x 2



B x 8



E x 6

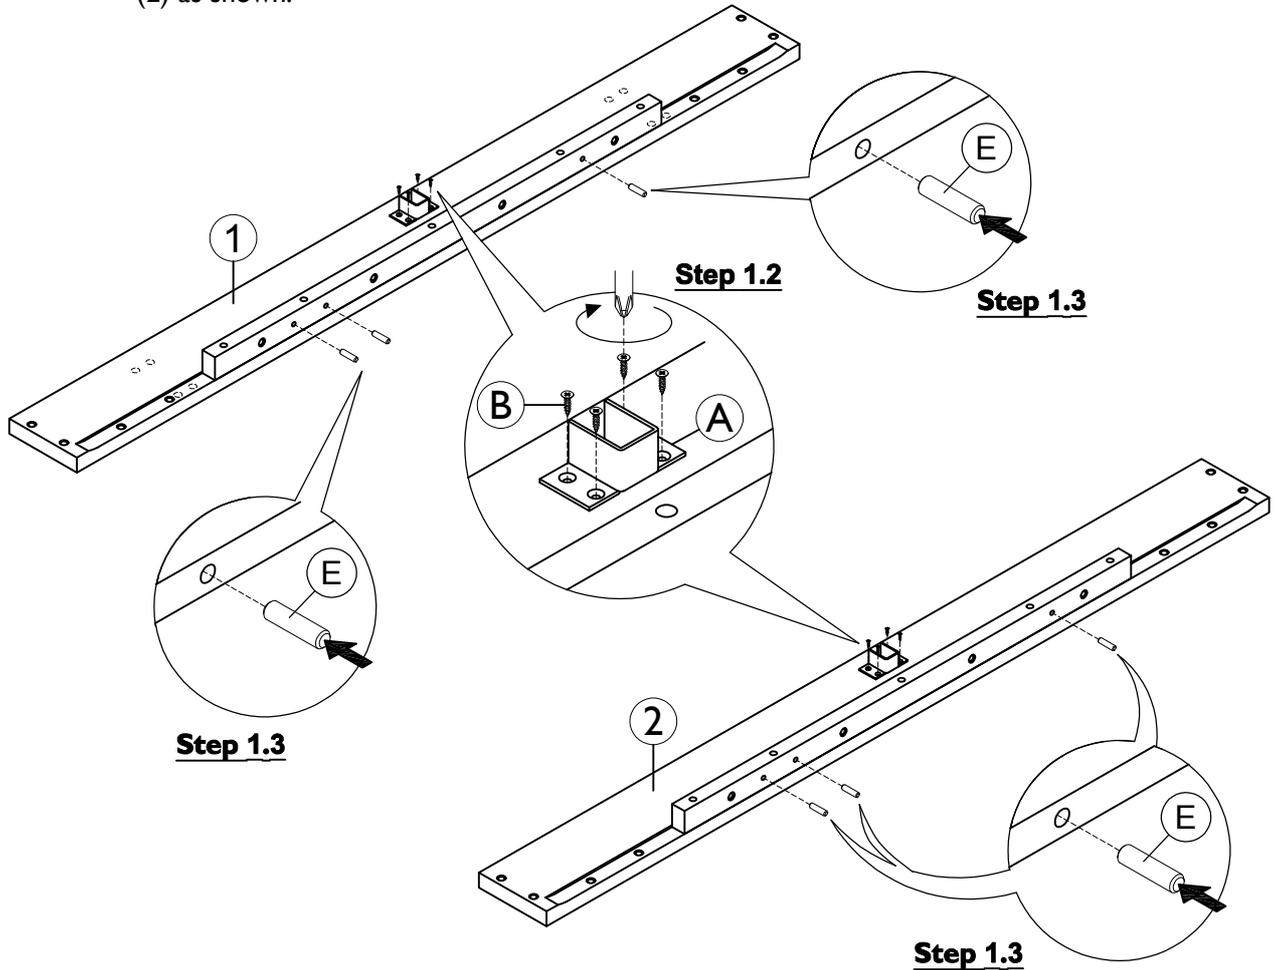


- Step 2** : Insert 2x wooden dowels (E) into the pre-drilled holes on end rails (10) as shown.

Fitting




E x 2

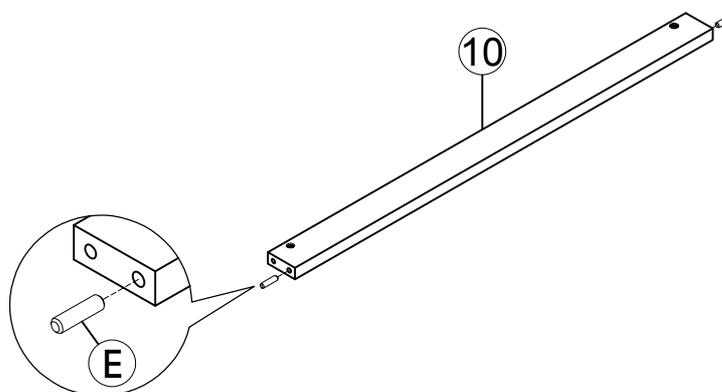

Step By Step Assembly Instructions

Step 3 : Attach 8x steel dowels (K) and 18x steel dowels (C) onto head end rail (1), foot end rail (2), side rail (4), head vertical left (8) and head vertical right (9) by screwing fittings (K) & (C) into the inset fittings that are located on parts (1), (2), (4), (8) & (9) as shown. Ensure the direction of the holes on fittings (K) & (C) are facing correctly as per diagram. Use a pozi screwdriver to turn fittings (K) & (C) clockwise to fix.

Fitting

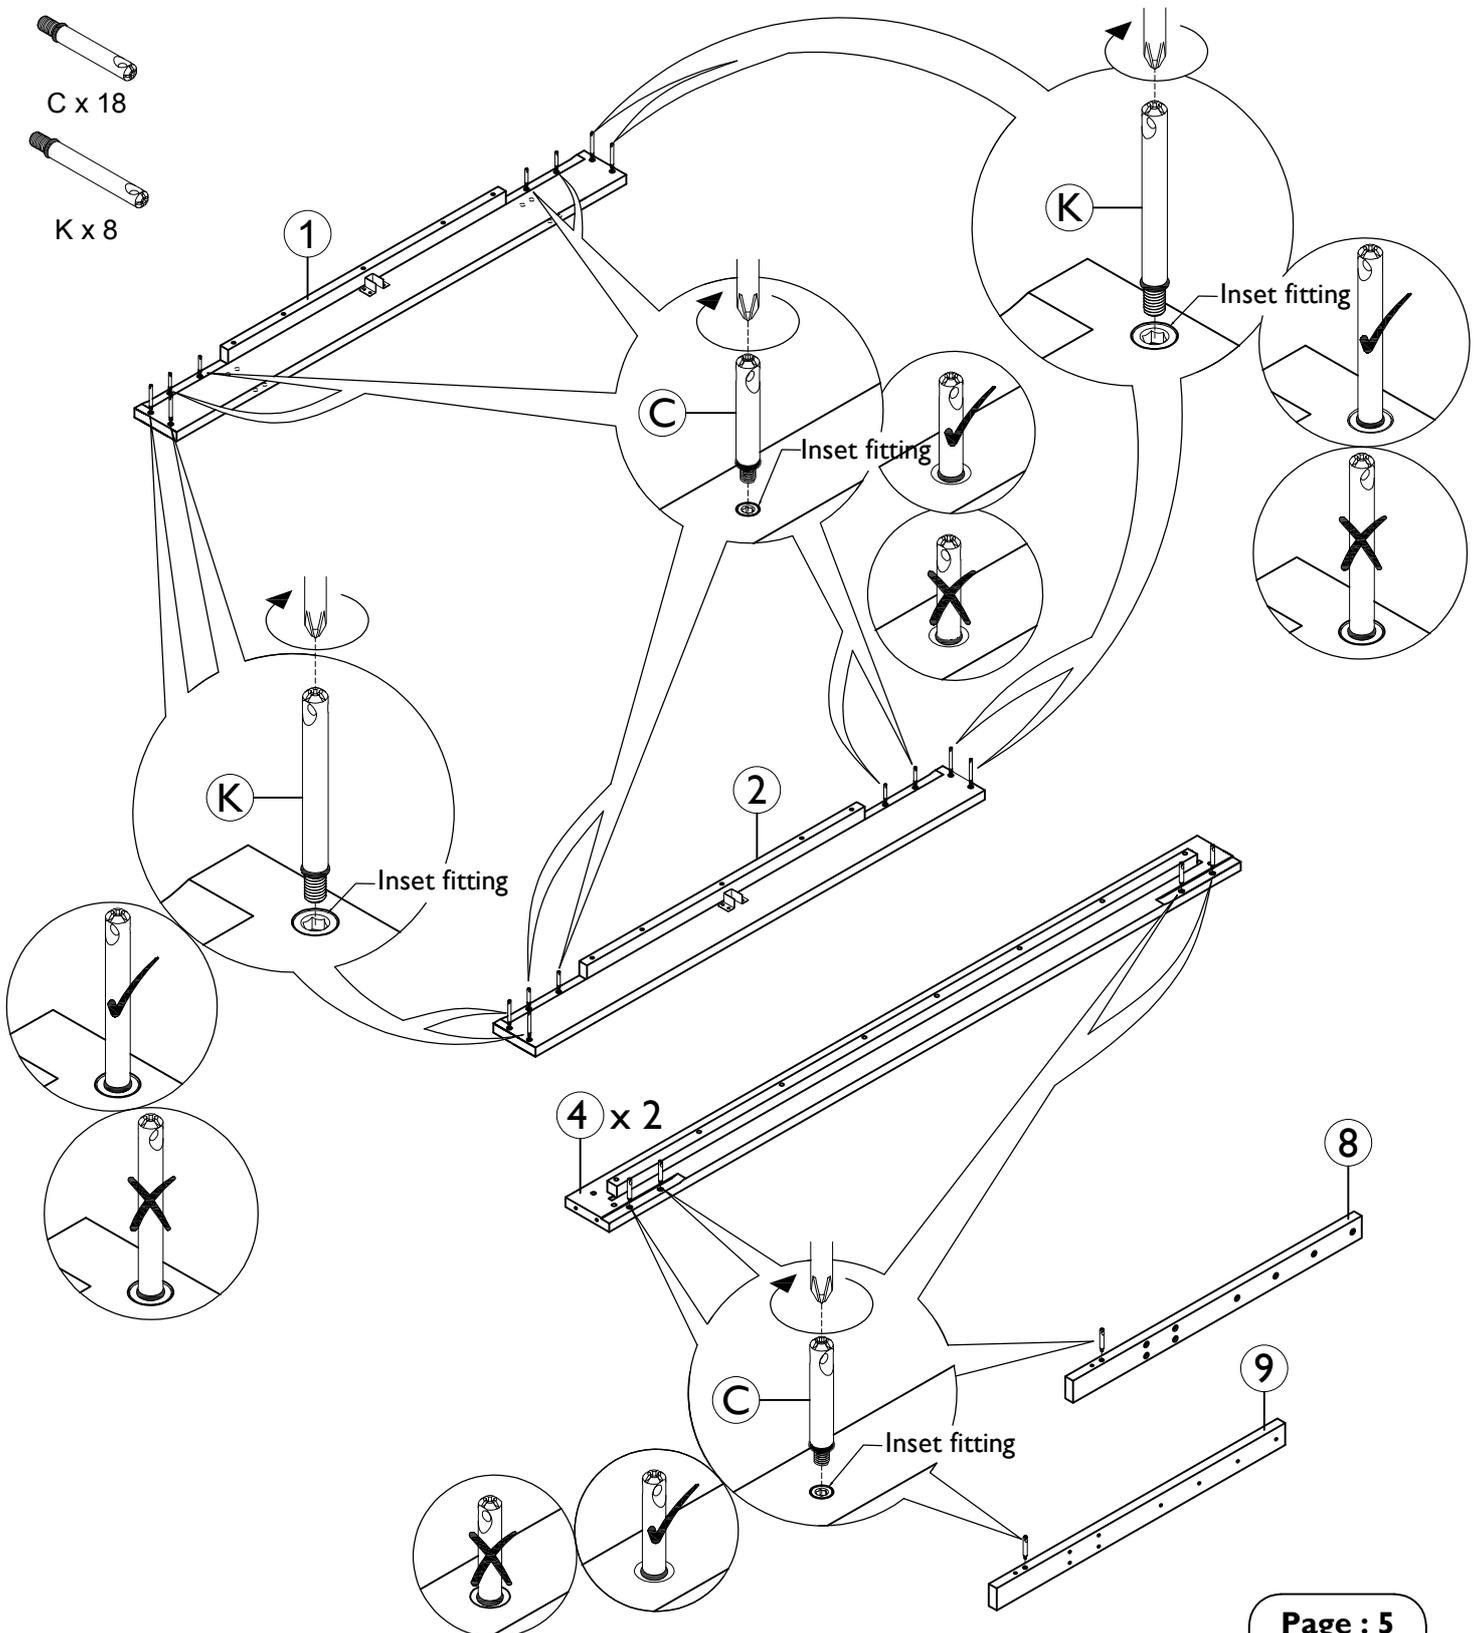


Step By Step Assembly Instructions

- Step 4** 4.1 : Attach head vertical left (8) and head vertical right (9) to horizontal rail (10) as shown. Ensure steel dowels (C) and wooden dowels (E) are aligned correctly with the holes of mating parts before attaching.
- 4.2 : Secure parts (8),(9) to part (10) using 2x grub screws (D) as shown. Use a pozi screwdriver to turn fittings (D) clockwise to fix.

Fitting




D x 2

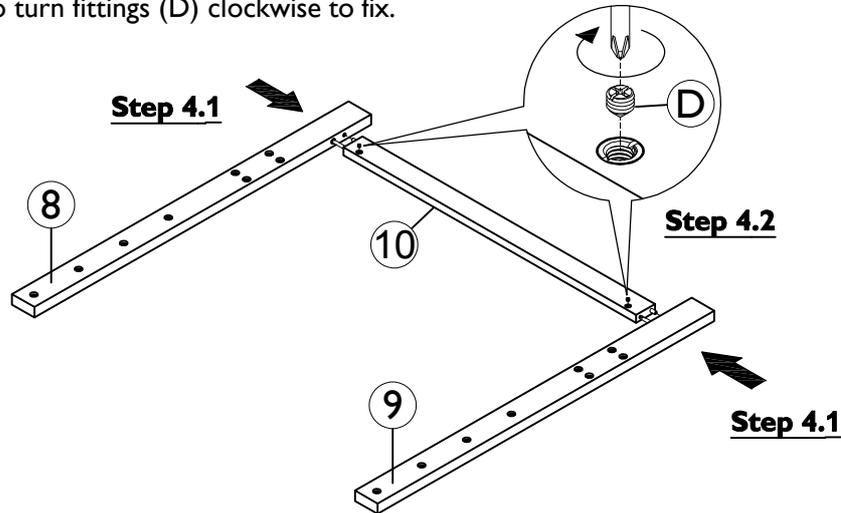

- Step 5** : Attach the structure assembled in **Step 4** to headboard (11) using 8x hex head bolts (G) as shown. Use allen key (F) to turn fittings (G) clockwise to fix.


Fitting

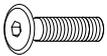

G x 8



F x 1

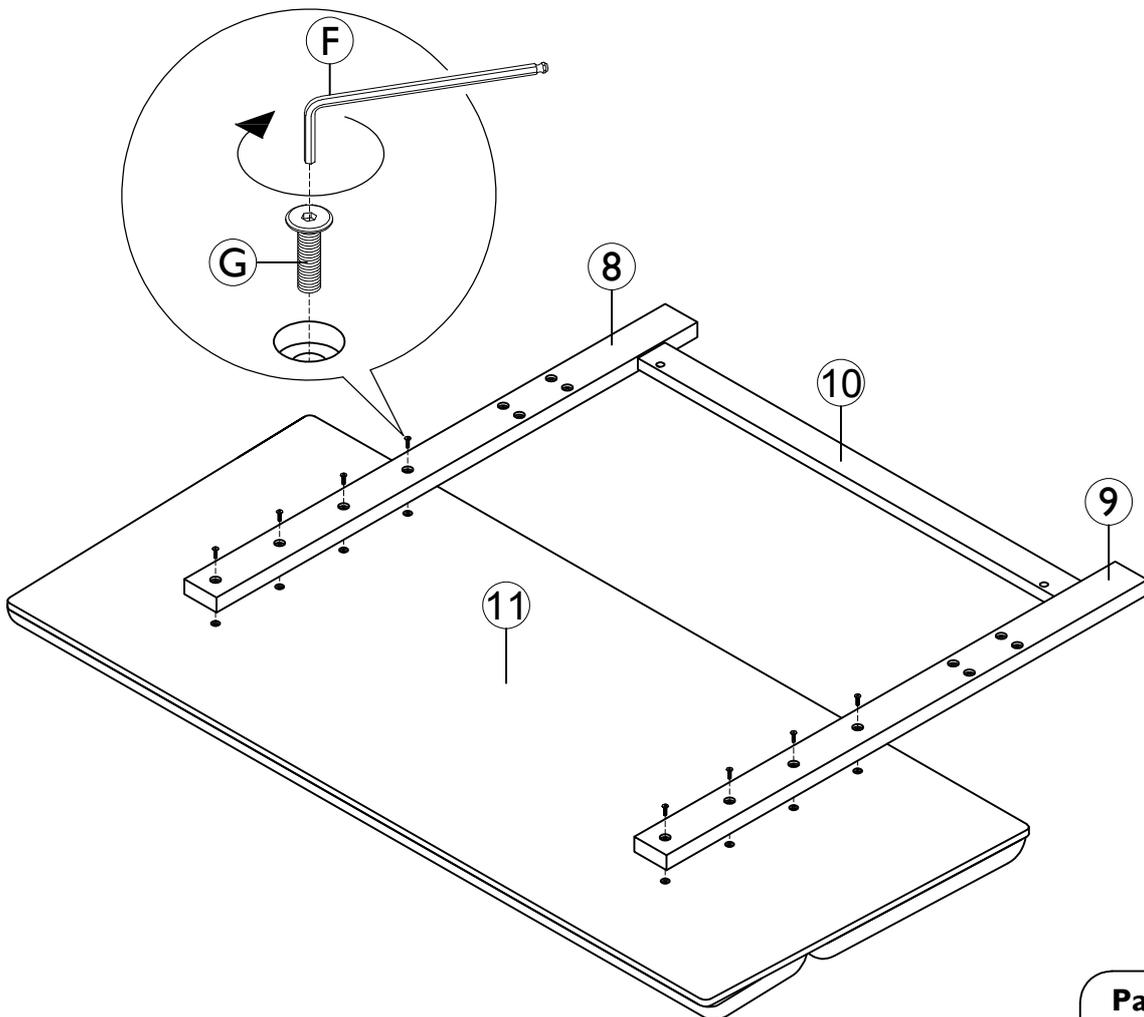


Step By Step Assembly Instructions

- Step 6**
- 6.1 : Attach support leg left (12) and support leg right (13) onto side rail (4) as shown. Ensure steel dowels (C) are aligned correctly with the holes of mating parts before attaching.
- 6.2 : Secure parts (12) & (13) to parts (4) using 8x grub screws (D) as shown. Use a pozi screwdriver to turn fittings (D) clockwise to fix.

Fitting



D x 8

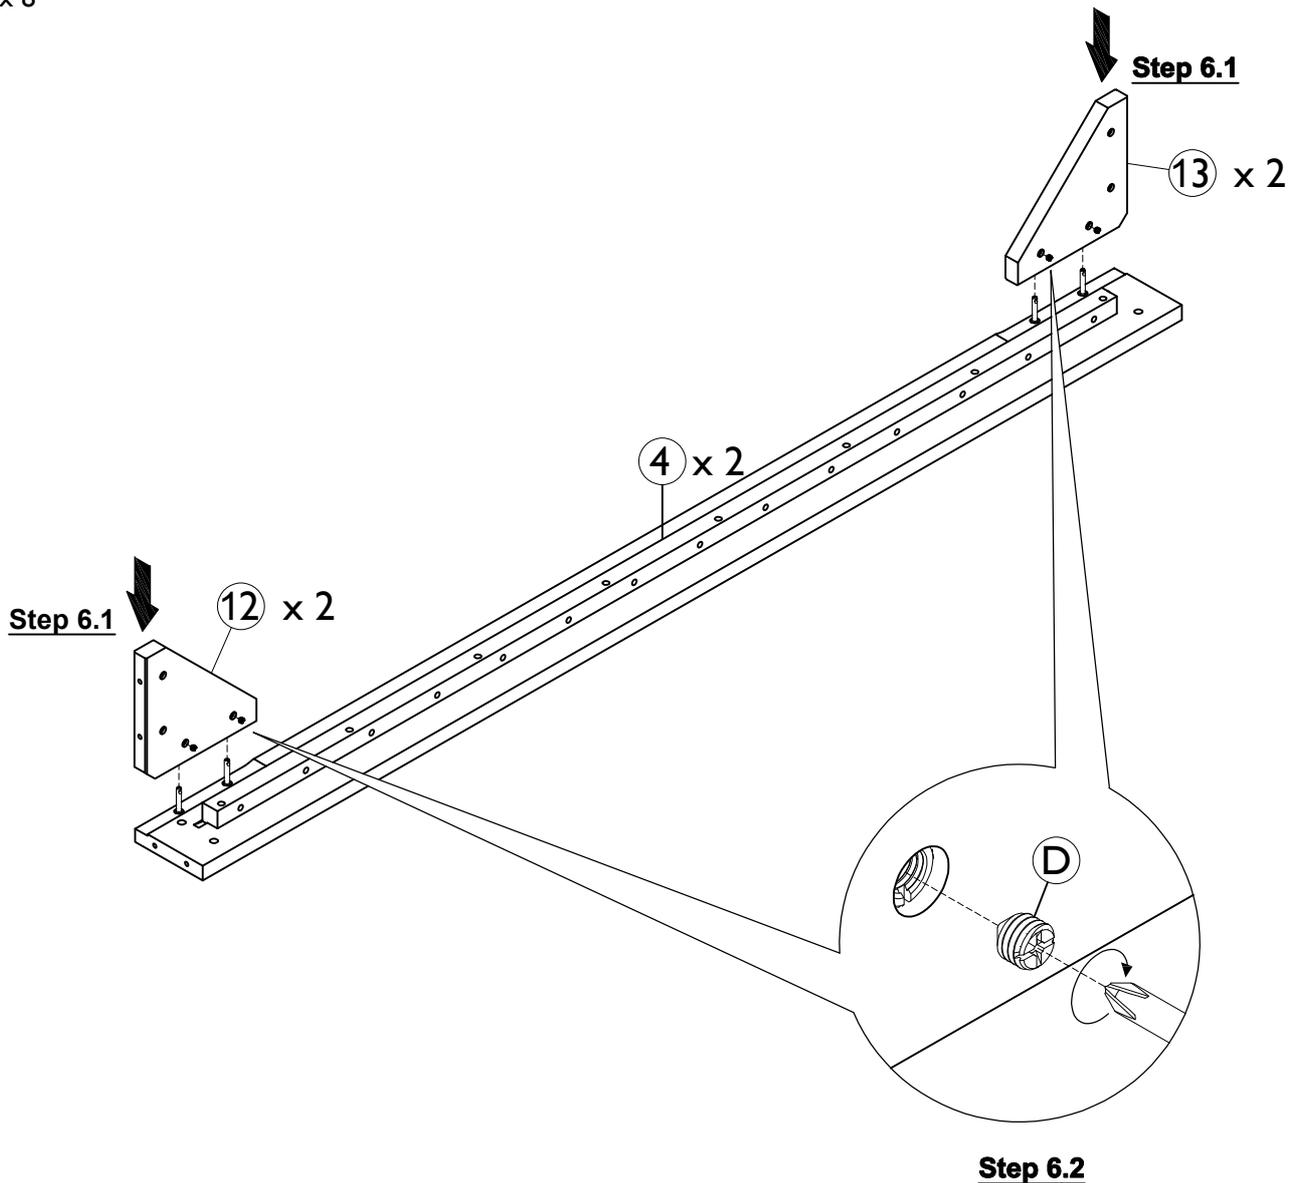


Step By Step Assembly Instructions

- Step 7** 7.1 : With help of assistant, stand head end rail (1) and foot end rail (2) upright. Carefully attach head end rail (1) and foot end rail (2) onto both ends of side rails (4) as shown. Ensure steel dowels (C) & steel dowels (K) are aligned correctly with the holes of mating parts before attaching.
- Fitting 7.2 : Secure head end rail (1) and foot end rail (2) to both side rails (4) using 16x grub screws (D) as shown. Use a pozi screwdriver to turn fittings (D) clockwise to fix.
- 7.3 : Turn upside down.




D x 16

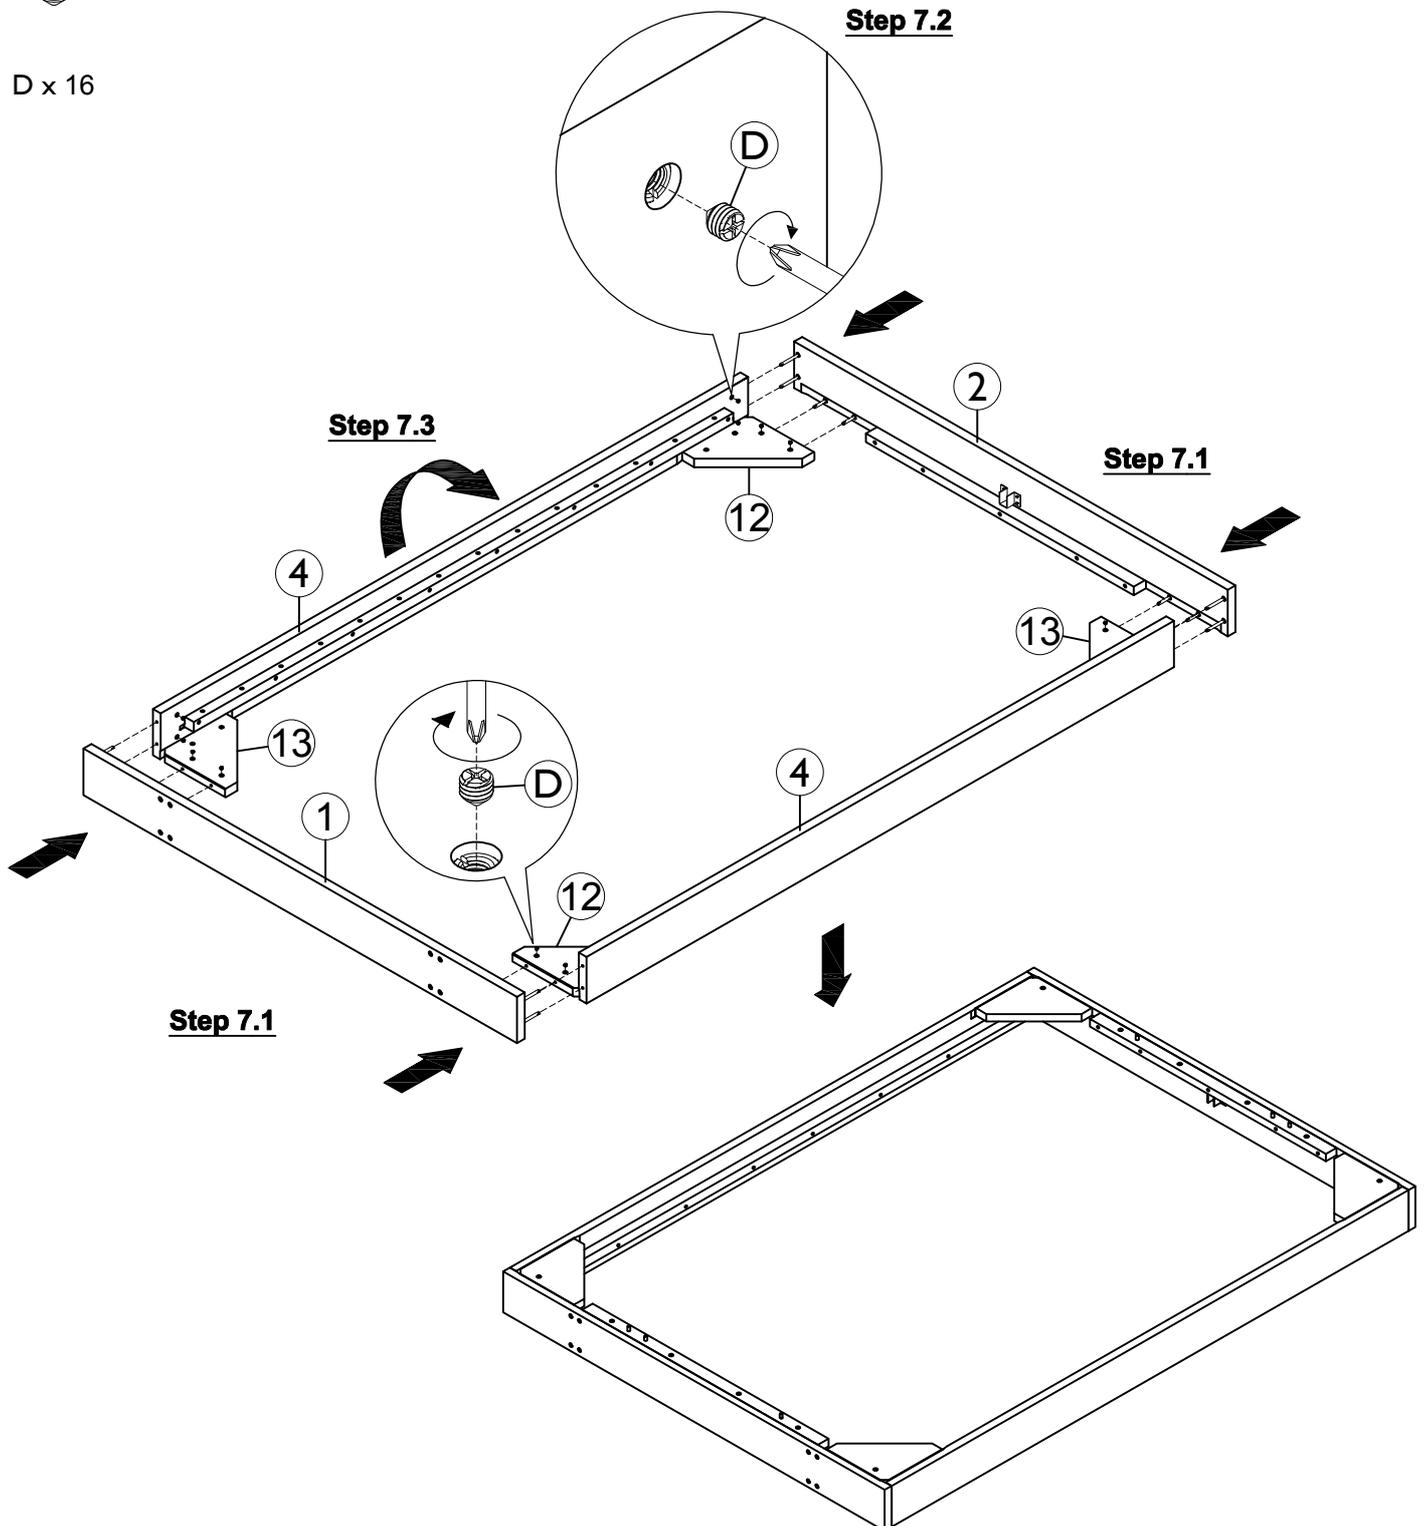

Step By Step Assembly Instructions

- Step 8**
- 8.1 : Attach the leg rails (7) to structure assembled in Step 7 as shown. Ensure wooden dowels (E) are aligned correctly with the holes of mating parts before attaching.
 - 8.2 : Secure parts (7) to structure assembled in Step 7 using 12x hex head bolts (H) as shown. Use allen key (F) to turn fittings (H) clockwise to fix.
 - 8.3 : Stand the unit upright.


Fitting

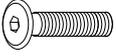

H x 12



F x 1

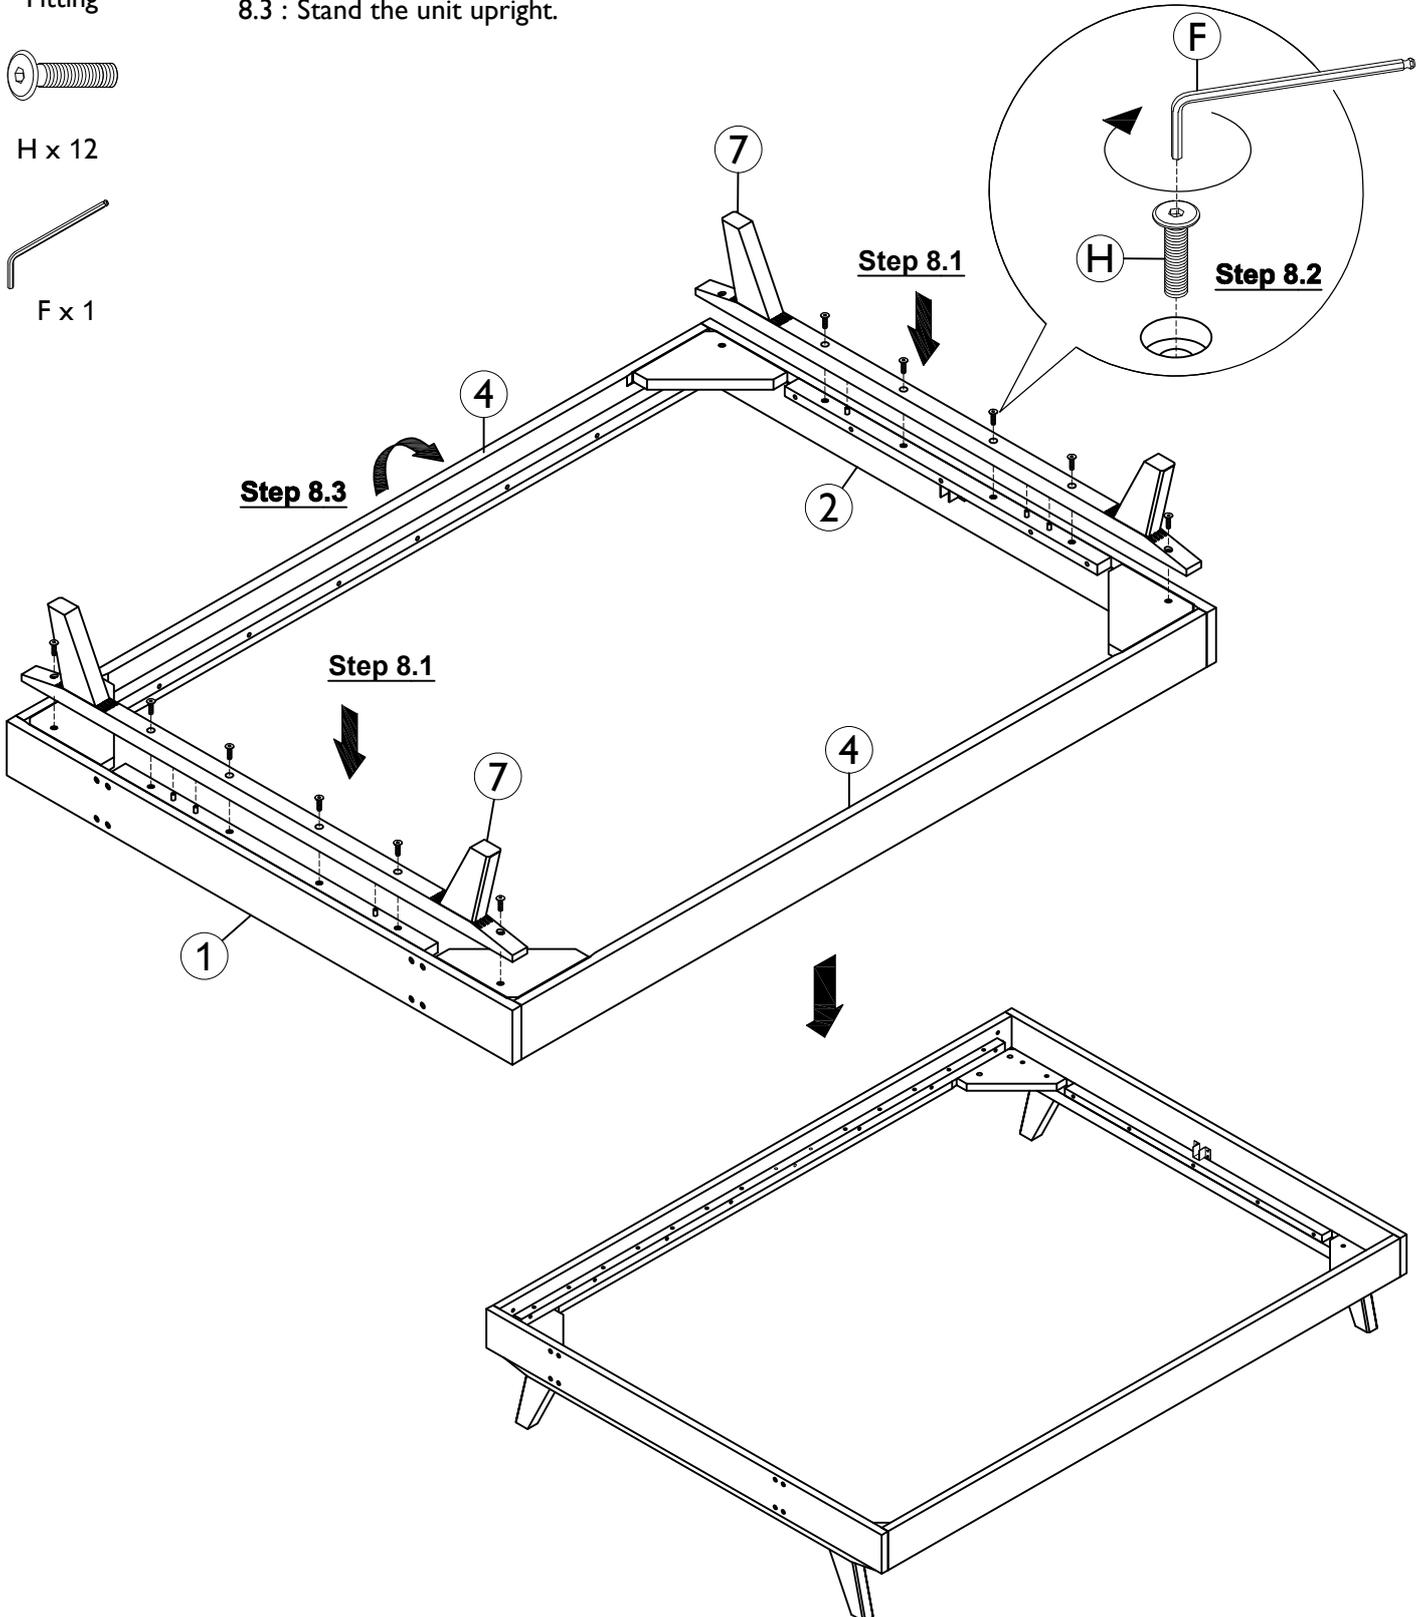


Step By Step Assembly Instructions

- Step 9**
- 9.1 : Remove the bracket from adjustable metal center leg (6) by using allen key (F) to turn 2x hex head bolts counterclockwise as shown.
- 9.2 : Place adjustable metal center leg (6) onto metal center rail (3) then secure the bracket back onto metal center leg (6) using the previously removed 2x hex head bolts as shown. Use allen key (F) to turn bolts clockwise to fix.
- 9.3 : Place the assembled metal center rail (3) with metal center leg (6) onto the brackets (A) that are already affixed on head end rail (1) and foot end rail (2) as shown. Adjust the adjustable center leg to fit with the floor level as shown.

Fitting




F x 1

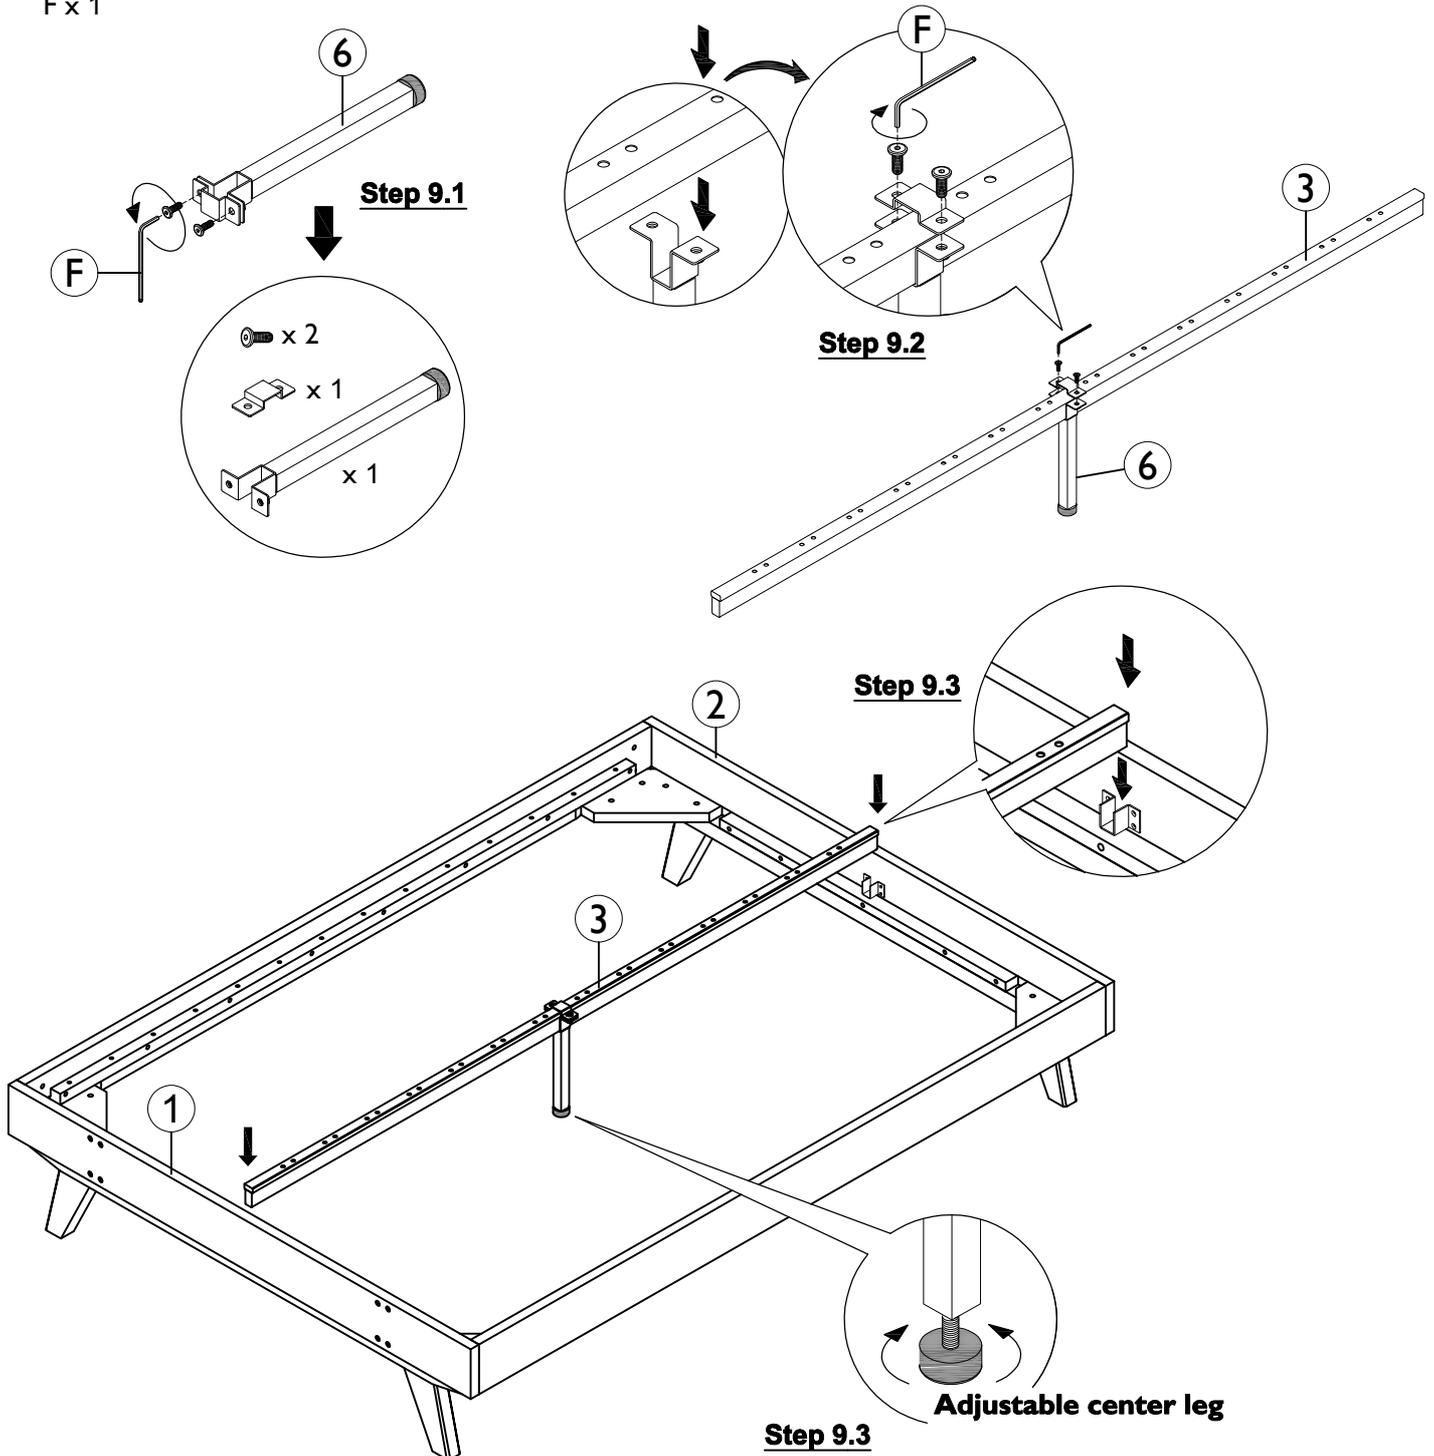

Step By Step Assembly Instructions


- Step 10** 10.1 : Insert 28x end plastic sleeves (14) onto one end of 28x sprung slats (5) and thereafter insert the other ends of all parts (5) into both sides of 14x center plastic sleeves (15) as shown.
- 10.2 : Secure the previously assembled 14x sprung slat sets into the pre-drilled holes on wood supports of side rails (4) and pre-drilled holes on metal center rail (3) as shown.

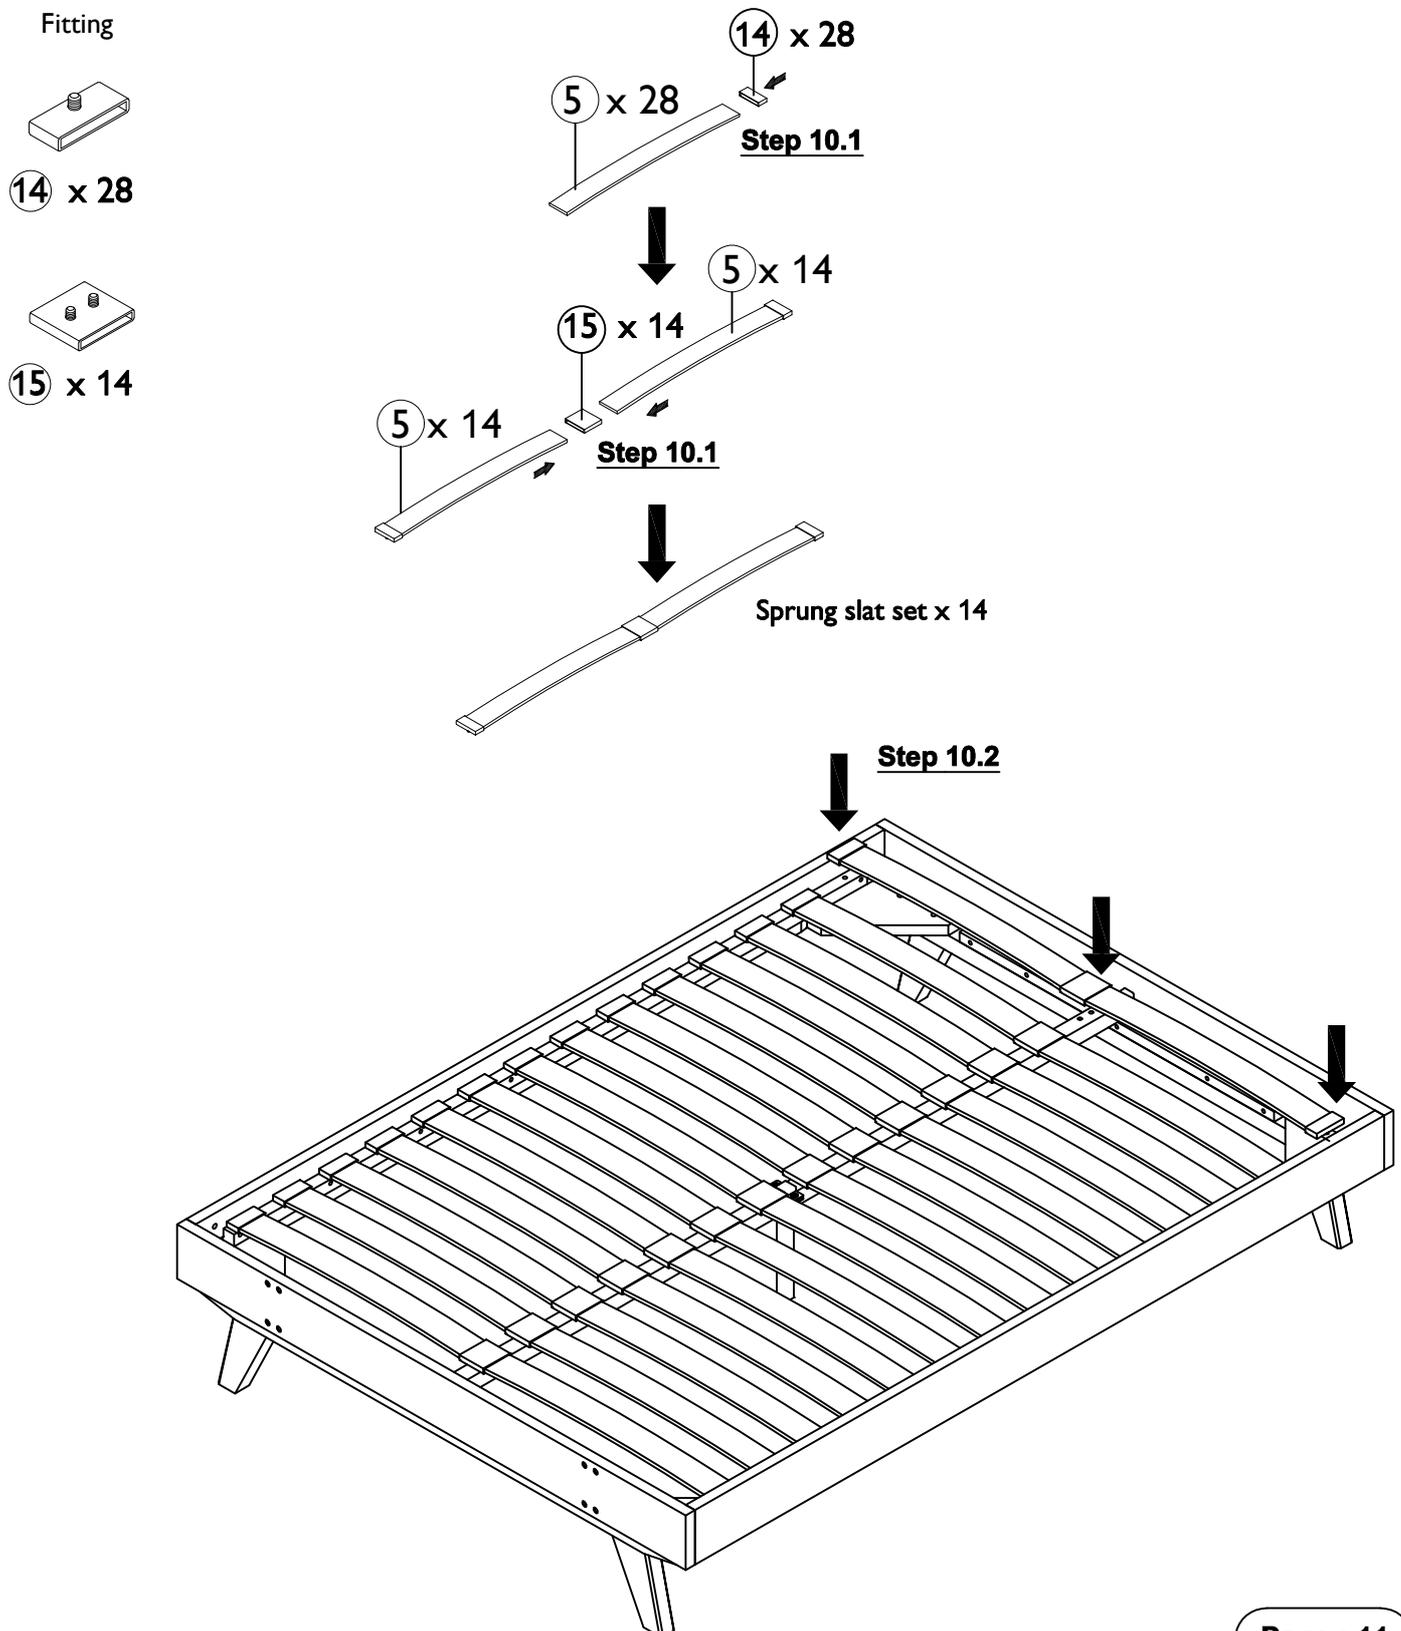


Step By Step Assembly Instructions

Step 11 11.1 : With help of assistant. Carefully attach the structure assembled in **Step 5** to the structure assembled in **Step 10** using 8x hex head bolts (H) as shown. Use allen key (F) to turn fittings (H) clockwise to fix.

Fitting

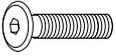



H x 8

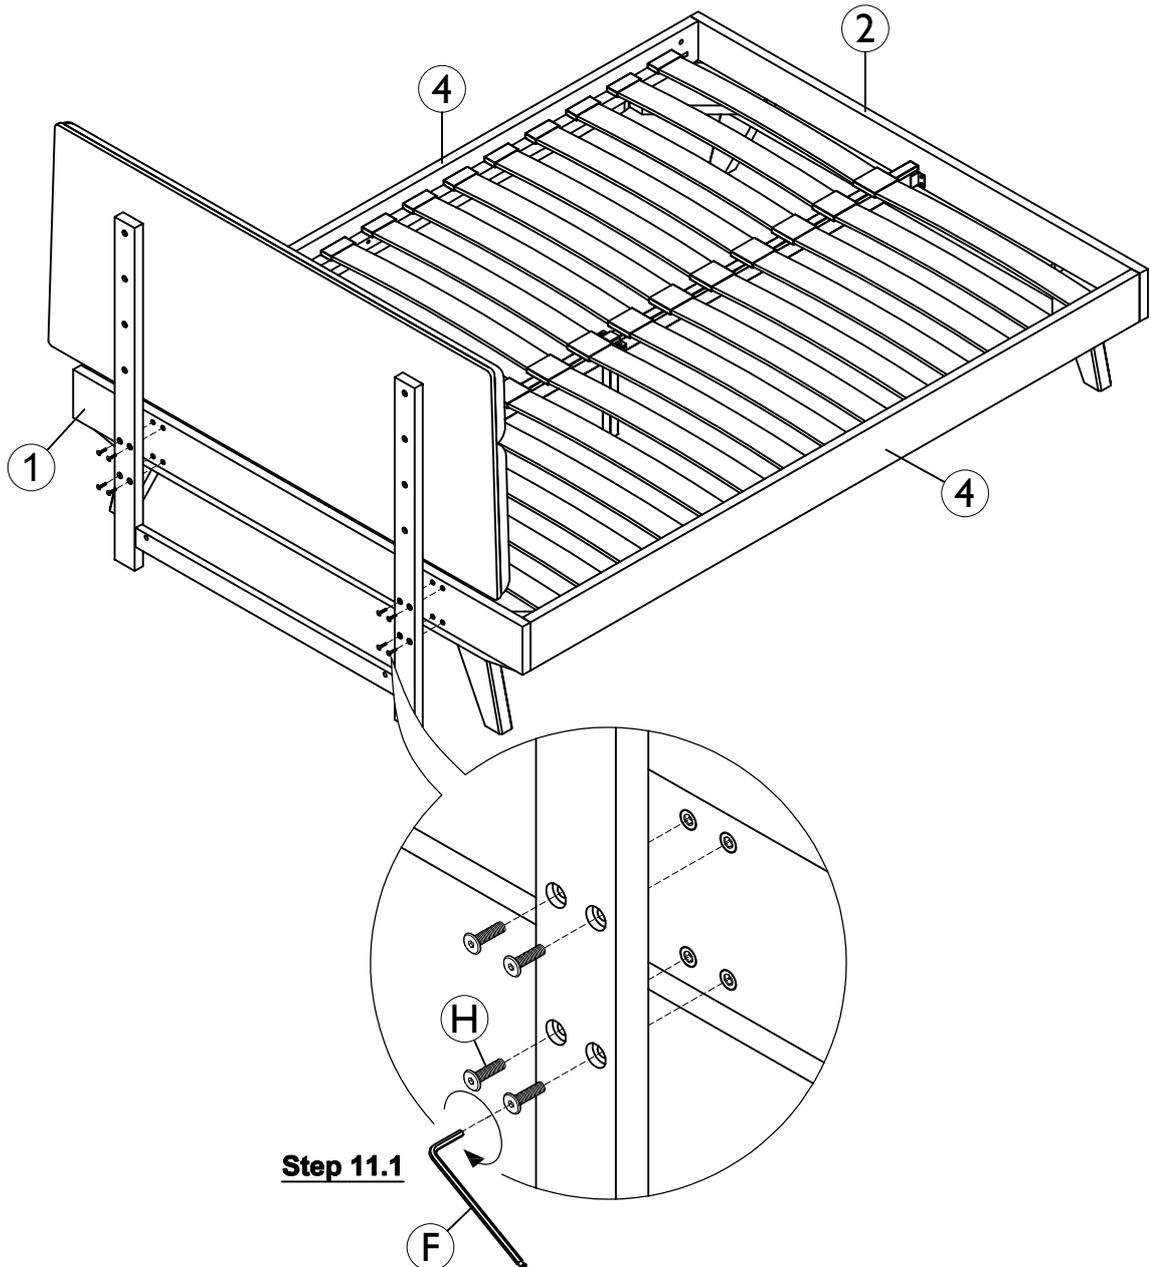


Assembly is complete

Page : 12

CAUTION: To Relocate Bed

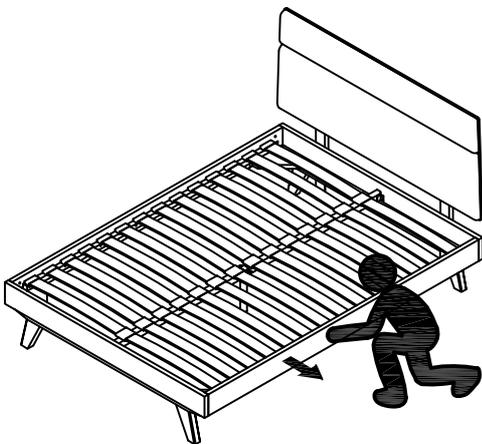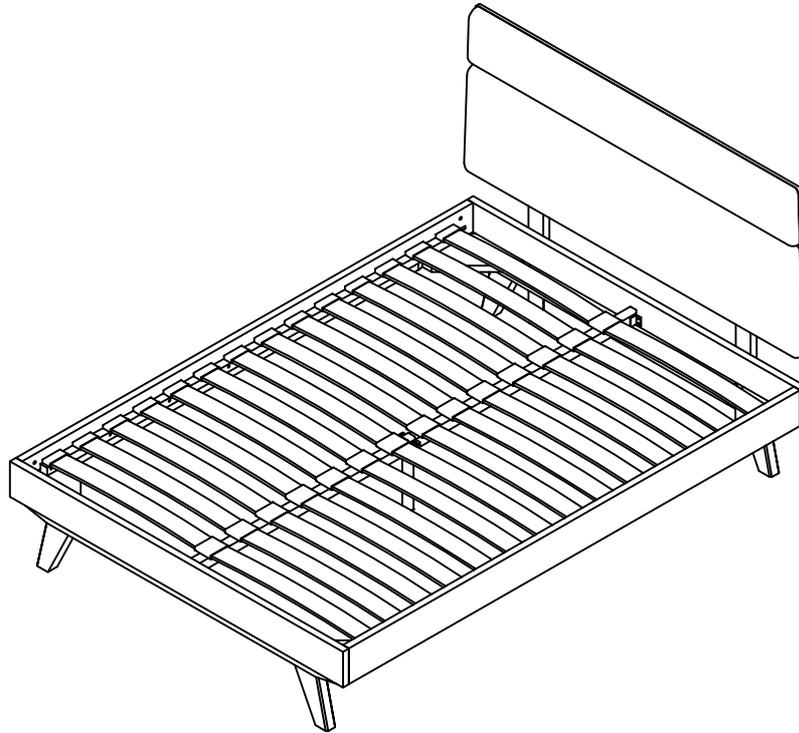

CAUTION: DO NOT PULL ON SIDE RAIL

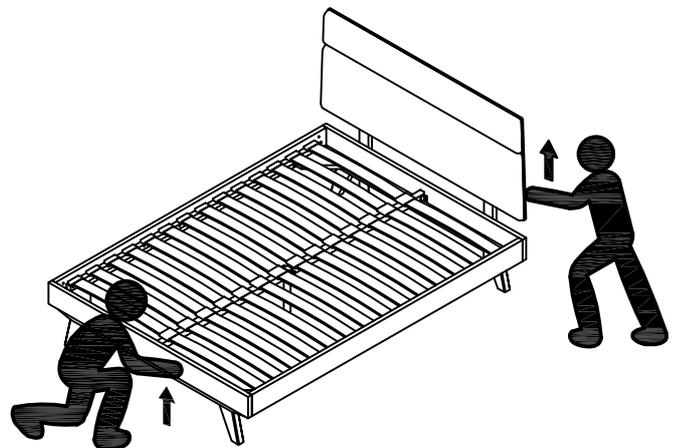

CAUTION: LIFT TO RELOCATE BED

Care and Maintenance

Wood Furniture

Wood displays different grain patterns depending on which way they are cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood.

Some furniture is also deliberately aged and rustic.

Wood veneers also allow distinctive patterns to be created on some surfaces, such as table tops and drawer fronts by the way slivers are arranged.

All timber and veneer surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Dust with a clean, damp, lint free cloth. Frequent dusting will remove abrasive build up, which can damage the finish over time.

Do not use a very wet cloth or allow any liquid to contact with the veneers for a long period of time as this can permanently damage the surface. Wipe up spills immediately.

Do not use any abrasive cleaner or harsh detergent as this can damage the surface of the furniture.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface when building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters.

Ensure that a mat or pad is placed under paper when you are writing on the furniture surface.

Do not place rubber, cork, vinyl or plastic materials on the wood finish as chemicals within may react with the finish if left in contact for an extended period of time.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by home heating can cause damage such as warping, cracking or splitting.

Excessive exposure to sunlight can cause fading of your furniture.

Avoid exposing your furniture to any liquids. All liquids should be wiped up immediately with a soft, slightly damp cloth in the direction of the wood grain. If sticky liquid residues do occur, they may be removed with a dilute solution of warm soapy water followed by a clean, damp sponge. The area should then be wiped immediately in the direction of the wood grain with a clean, soft white cloth until completely dry.

Nail polish remover, hairspray, perfume, potpourri & any other products that contains solvents can damage wood upholstery finishes.

Upholstered furniture

The upholstery should not be exposed for long periods to direct sunlight as this may cause fading and deterioration of cover material. Protect from exposure to sources of heat such as radiators or open flames.

It is recommended to give the upholstery a frequent vacuuming or light brushing.

It is very important to rub very gently to avoid colour change. This proper cleaning will prevent buildup of dust, soil and oils which can be damaging to cover material. In the event of spillage it is imperative to act quickly.

Carefully soak up any excess liquid, ideally using the edge of a white paper towel, then dab gently with a fresh towel taking care to avoid soaking in or spreading of the remaining liquid.

Safety Instructions:

Never drag furniture when moving it. Always lift it.

Periodically check all fixings to ensure none have come loose. Re-tighten when necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly assembled. Assembly should be carried out by a competent person.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Heavy item warning:

It is recommended to seek assistance when moving a heavy object. Take care when lifting to avoid personal injury and (or) damage to the product.

It is recommended that before moving a heavy object to a new location it is completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE